

Made in America

Lifetime Guarantee



Thank you for purchasing this instrument from Intellitronix. We value our customers!

INSTALLATION GUIDE

Fuel Temperature Gauge (M9116) with Sender (S8015)

*** Always disconnect the battery *before* attempting any electrical work on your vehicle.***

KIT COMPONENTS

- ◇ One (1) M9116 Gauge with Bezel
- ◇ One (1) Temperature Sending Unit (S8015)

SPECIFICATIONS

- ◇ Temperature Range: max. 255°F

WIRING INSTRUCTIONS - Gauge

Note: Automotive circuit connectors are the preferred method of connecting wires. However, you may solder if you prefer.

Ground - Black Connect directly to an engine ground such as the engine block. For the most accurate readings, connect to the same ground as the sending unit.

Power - Red Connect to a switched +12V source such as the ignition switch.

Dimmer - Purple Connect to the parking lights to dim the LEDs 50% when the headlights are on. However, **do not** connect to the headlight rheostat control wire; the dimming feature will not work properly. Otherwise, connect to ground for permanent 100% brightness.

Temperature - Blue Connect to the output of the temperature sending unit.

WIRING INSTRUCTIONS – Sender


(Sender may be installed into the tank, or wired into the fuel line.)

Ground - Black Connect directly to an engine ground such as the engine block. For the most accurate readings, connect to the same ground as the gauge.

Power - Red Connect to a switched +12V source such as the ignition switch.

Temperature - Blue Connect to the blue wire on the temperature gauge.

#

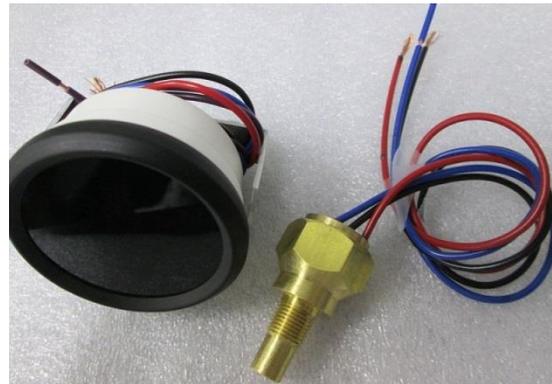

Made in America

Lifetime Guarantee



Technical Support

Monday – Friday
9am to 5 pm EST

(440) 210-7646

support@intellitronix.com



This product carries a limited Lifetime Warranty.

This warranty is limited to replacement or repair of the unit at the discretion of Intellitronix.