

Instruction Manual

Model: TB-130EYD01
TB-130EYD02
TB-130EYD03

YAMADA SMART MINIBAR

Caution:

Please pay attention to safety precautions before use.


Please read and keep the instructions for future reference.

Because the continuous improvement of the company's products, no further notice if any changes occur.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

- WARNING: Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: Do not damage the refrigerant circuit.
- WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

We focus on intelligent home furniture and home appliance design. And also supply more comfortable, convenient and health life by collecting global resource and combined solution of furniture and home appliance. T-Bar, new life entertainment nest, is a creative home appliance and furniture products. It can meet all your need in sitting room, such as snack, fruits, drinks, music and charging.

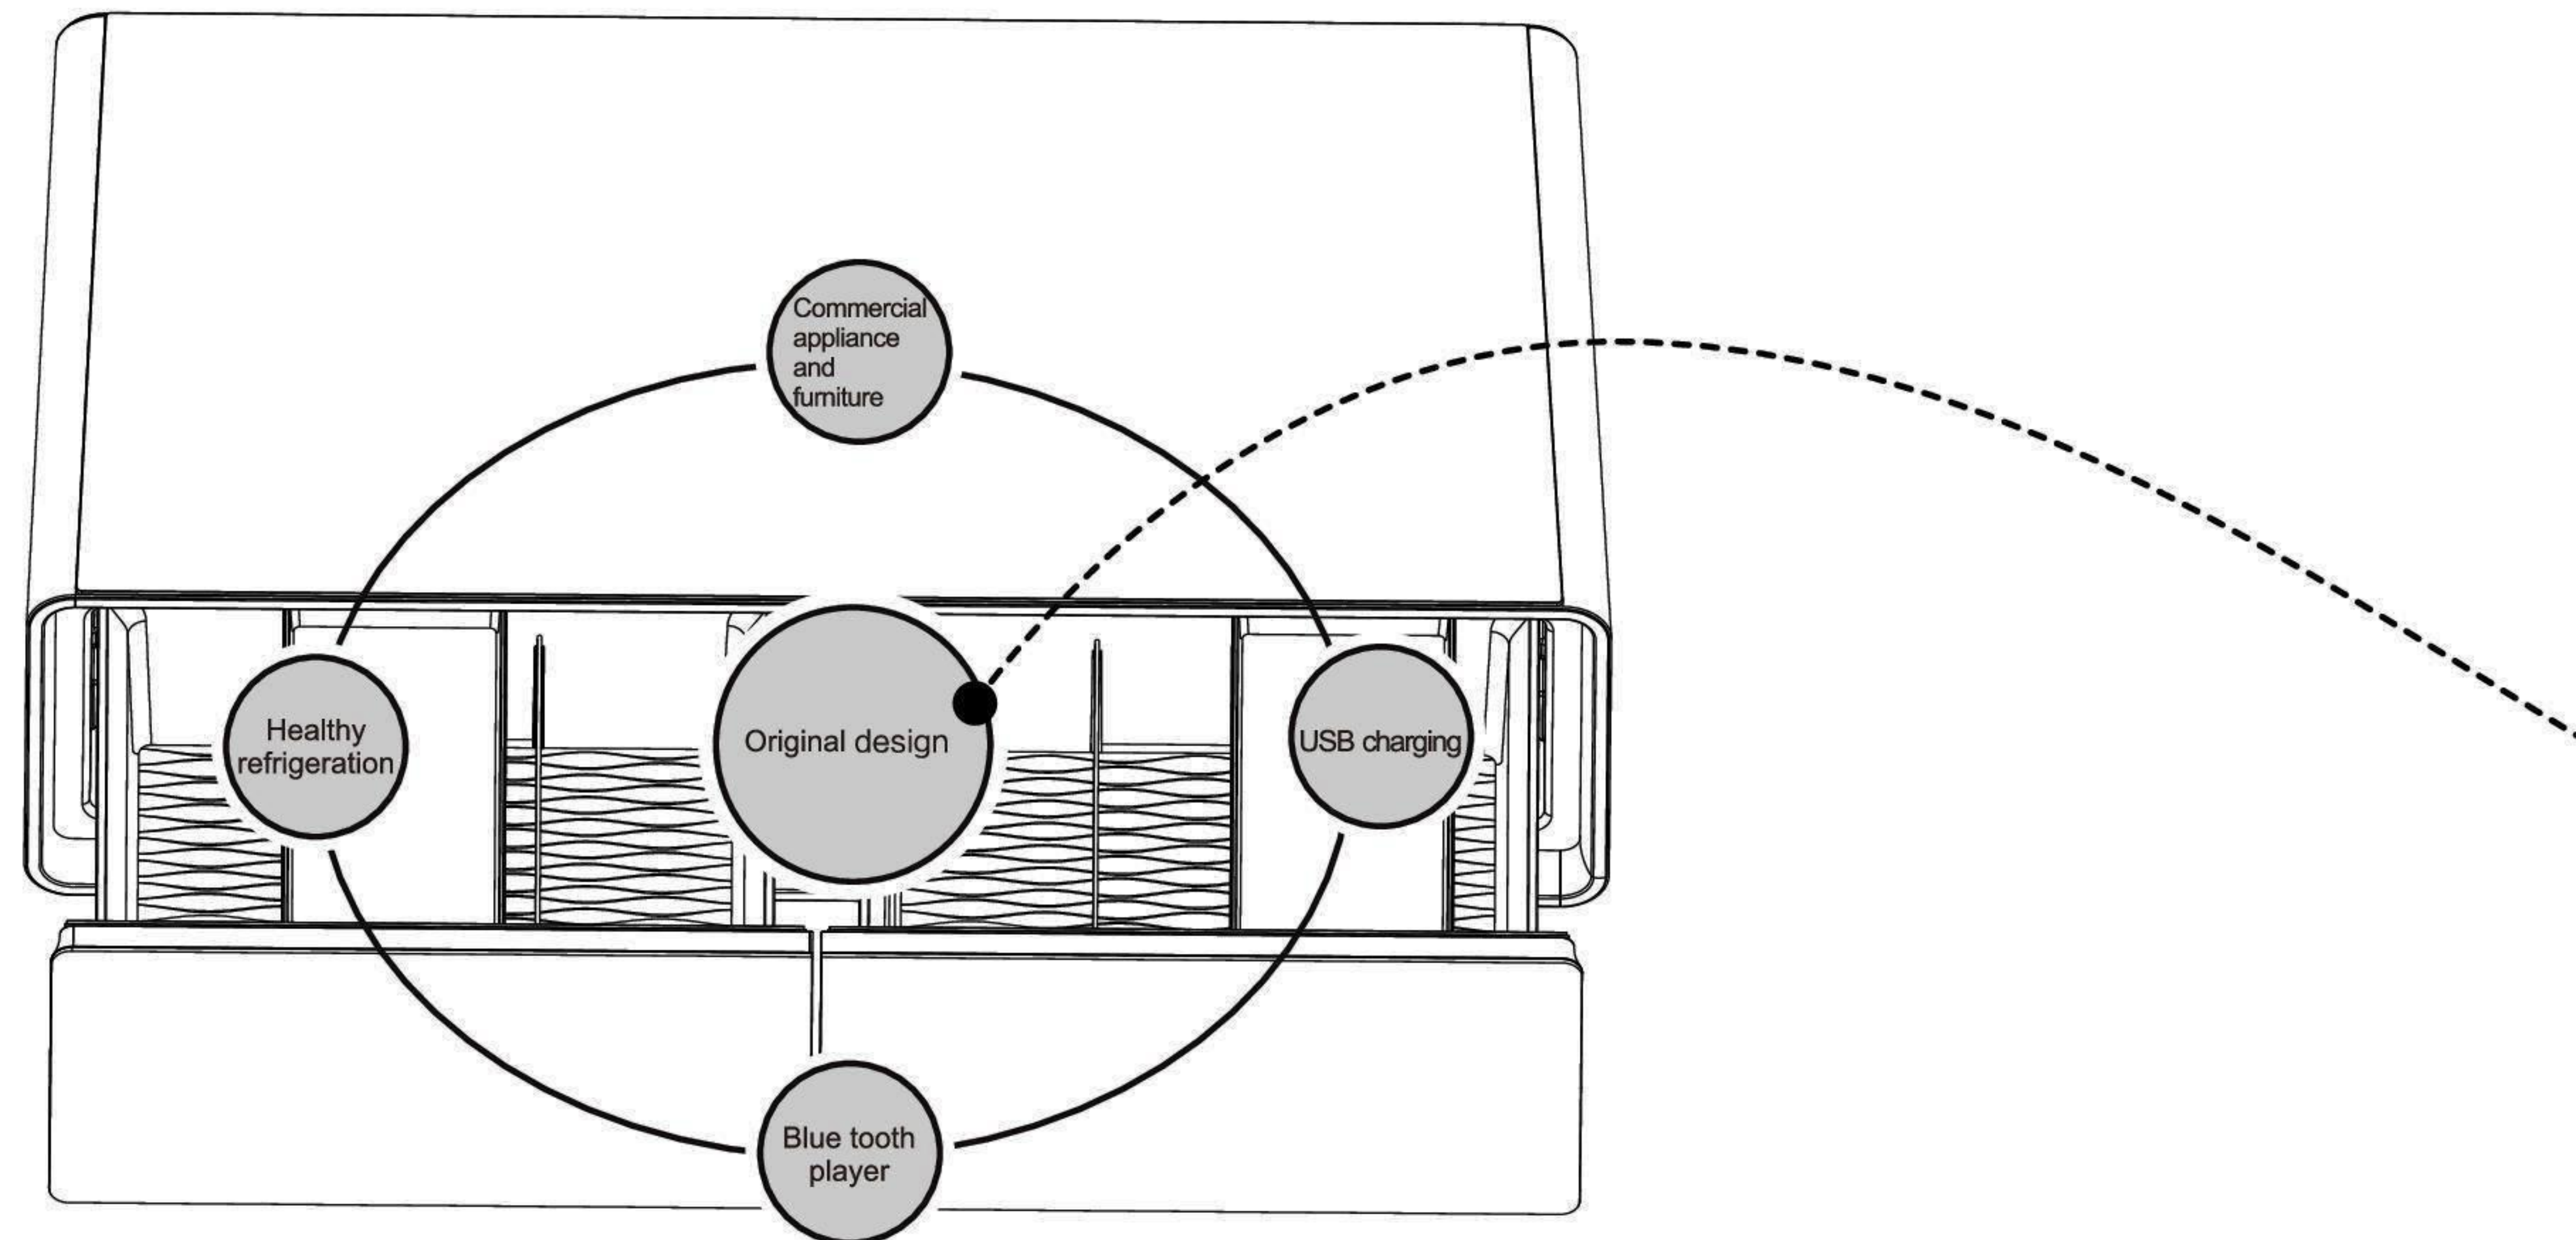

Main Functions

Office Furniture & Commercial Appliance

Smart Mini bar, new life entertainment , is a creative commercialhome appliance and office furniture product.

Blue tooth Music player

In-built two 3.5 inches speaker combined as music player. Can be connected to cell phone by blue tooth everywhere to play music.

Main Functions

Healthy refrigeration

You can get snack conveniently, to avoid smell pollution with food . It is the best place to store snack, fruits, drinks,tea and milk products.

USB charging

Two USB interface (5V/1A+5V/2.1A), with big current output, you can charge your phone any time.

In order to meet your requirements for quality office life
All products adopt the design concept of smart furniture & commercial appliance
To bring you a brand-new life with high quality
Please read this instruction carefully for safe and comfortable use
Please pay attention to safety precautions before use

Features

Two fridge areas separately, no smell pollution

Each area is controlled separately
Foods and drinks can be controlled precisely.

Refrigerating system with high efficiency compressor

Compressor working speed depends on temp inside/outside and food volume automatically. Noise level can as low as 36 dBA bringing you a silent experience.

LED cold lighting in-built at front top side

LED light with low power input can save electricity, generate less heat. with soft lighting, it can display the original color of food. Life phase can reach to 100000 times.

Cooling intelligent mode

Under intelligent mode, cooling system can adjust cooling temp automatically, dispatch cooling capacity intelligently according to food volume, outside temp so that the food store can be in best conditions.

Timeout alarm

Cooling system can automatic memory and alarm if door is open for a long time or put more food one time which make cooling area temp going up.

Removable door gasket

It can be removed for washing, replacement to keep the refrigeration area sealed.

YOYO Pan

In order to use space efficiently, we put one YOYO pan on the top of each cooling area which can be moved left to right freely.

Drawer partition

Different food put into different area with partition.

Blue tooth V4.2

Faster, longer and clearer
It adopts blue tooth V4.1 item and the transmission distance can up to 10 meters. It is easy to connect to cell phone, laptop, TV and other audio equipment.

Support Multi-Streaming input

It not only support blue tooth input audio but also supports AUX and USB audio input.

Digital power amplifier chip, best sound quality

In-built big output digital power amplifier chip and output power upto 40W. At same time, the efficiency is high and make sure the sound comes out with best quality

2.0 USB charging

Two USB interface (5V/1A+5V/2.1A), with big current output, you can charge your phone any time.

Smart mini bar safety precautions

Preparation steps before the use of smart mini bar

How to connect the power supply safely

Each Part of the smart mini bar

Steps for the first use of smart mini bar

Main function instructions of smart mini bar

- Display and control instructions

- Operation description of cold storage area

- Cold storage use techniques and food storage recommendations

- Audio operation instructions

- USB charging

Smart mini bar energy-saving use notes

Daily maintenance and repair of smart mini bar

- Smart mini bar cleaning

- Disassembly of drawers in cold storage room

Smart mini bar handling and outage

Trouble shooting

- Non fault phenomena

- Analysis and elimination of simple faults

Technical parameters and packing list

- Technical parameters

- Smart mini bar packing list

Smart mini bar safety precautions

Dear smart mini bar user:


Hello! Thank you for using, please read and follow the instructions carefully for you to better use the smart mini bar and prevent personal injury and damage accident.

The contents of the following signs



Warning

Faulty operation may cause personal injury to the user

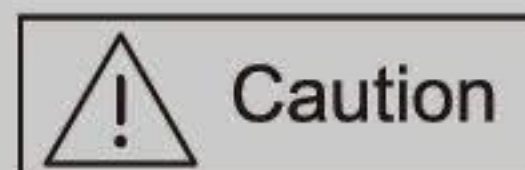

Caution

Faulty operation may cause damage to objects or property



Behaviors or operations must be observed



Behaviors or operations must be prohibited

Electrical

Power cord and plug

- ⊗ After turning on the power supply of the ice bar, the power line slot randomly attached shall be installed in case the long term tread on the line that would cause the danger of leakage on the surface of the line.
- ❗ The power plug shall be kept in tight contact with the socket and the ice bar, or it may cause fire!
- ❗ The power line shall not be pressed by the base angle of the bar or trod in case of damage, please be careful not to scroll through the power line while moving the ice bar.
- ❗ Please hold the plug tightly and unplug the ice bar directly, do not unplug it by pulling the power line. The power plug of the ice bar must be pulled out in case of electric shock before cleaning, maintenance or replacement of damaged lighting equipment.
- ⊗ The power line and plug must not be used when it's broken or abraded, and must be changed in the maintenance point / online shop appointed by the manufacturers.



Notice: The products that use R600a refrigerants must be repaired by trained maintenance personnel, and pay attention to fire prevention during the repair!
The wasted smart mini bar shall be recycled by professional companies, please do not throw it away.

Power supply

- ⊗ This series of products use AC 220V/50HZ power supply, large voltage fluctuation range(Beyond the range of 187 to 242V) would lead to the fault even damage of the smart mini bar, the automatic voltage regulator above 750W must be installed to guarantee the normal operation when the above case occurs.

Ground connection

- ❗ Independent private socket must be used for reliable ground connection, the power line of the smart mini bar is matched with three-wire (ground connection) plug and three-wire (ground connection) socket that meets the standards. Do not, under any circumstances, cut or remove the third (ground connection) pins from the power line.

USB

- ❗ Attention should be paid to avoiding liquid inflow to the USB interface to in case USB short circuit and ensure safety. Do not use wet cloth to wipe the USB interface when cleaning.

When gas or other combustible gas leaks


- ❗ The valve that leaks the gas shall be closed immediately when combustible gas leaks, and open the doors and windows, do not pull out or plug the power plug of the ice bar or other electric devices.

Smart mini bar safety precautions

Use

Storage

- ⊗ Smart mini bar freezer is only suitable for storage food, cannot be used for other purposes, such as storage of blood, biological products.
Flammable and explosive dangerous goods as well as strong corrosive acids, alkalis and other chemicals must not be stored in the smart mini bar.
- ❗ Buckle the upper handle to open or close the smart mini bar door. Please do not extend your hand the narrow gap between the doors and the bar to prevent damage to your fingers.
- ⊗ Please keep the children away when open or close the smart mini bar door to avoid the damage to children.

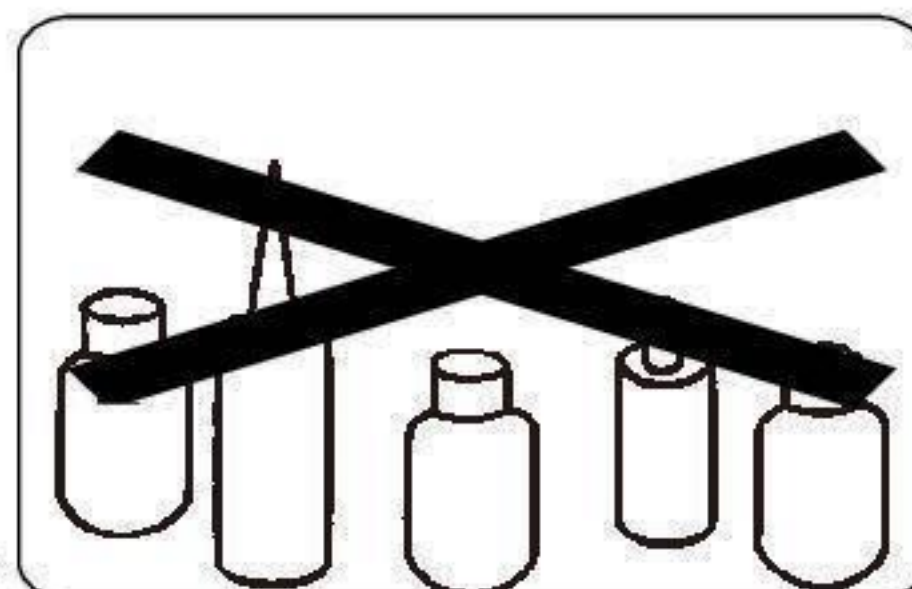

Loudspeaker box

- ❗ Please install the smart mini bar on the flat and appropriate base, and leave adequate ventilation space (>10 cm) around to ensure that the ventilation hole is not blocked.
- ❗ Do not put this equipment on other heating equipment. This equipment can be used continuously. To completely disconnect the power supply of the equipment, please unplug the host plug from the power outlet (especially when it is not used for a long time).
- ❗ This product should be avoid wet (such as vases) and being overheated (such as fireplace) or equipment that produce strong magnetic field or electric field. If the equipment fails, unplug the ice power line.
Condensation may occurs if the product is stored in a high temperature environment. If this product is transported indoors in winter, it will take about 2 hours to reach the room temperature before use.

Placement environment

- ❗ The smart mini bar shall be placed away from the heat source and avoid direct sunlight so as not to affect its performance.
- ⊗ It shall be placed in under well ventilated condition, more than 10cm space shall be left surrounding the smart mini bar including the back.

- ⊗ Do not place it in wet or easily splashed place, the water and dirt on the surface shall be cleaned with soft cloth in time to in case rust and influence to the electrical insulation performance.
- ❗ In order to ensure safety, it is recommended not to put the socket, power supply, microwave ovens and other appliances on the surface of the smart mini bar. Do not use electric devices inside the smart mini bar to avoid electromagnetic interference or other accidents.
- ❗ Do not place unstable items in the upper part of the smart mini bar (heavy objects, water containers) , in case the falling of the objects or the water overflow that may cause electric leakage.
- ❗ Do not store or use gasoline and other flammable materials surrounding the smart mini bar so as not to cause a fire.

Maintenance

Cleaning

- ⊗ Do not spray or flush the smart mini bar, or place it in wet or easily splashed place to in case rust and influence to the electrical insulation performance, or possible short circles and fire.
- ❗ The power plug shall be pulled out when blackout or cleaning, and it can be plugged in at least 5 minutes interval in case the damage to the compressor caused by continuous start happens.

Repair


- ⊗ It is strictly forbidden to disassemble, modify the smart mini bar, or damage the refrigeration line. The repair of smart mini bar must be carried out by professionals.
Special attentions for children:
 - ❗ please remove the door, seal and the rack when the smart mini bar is wasted, and place them to proper place to in case any accidents may happen to the children when playing inside the smart mini bar.
- ❗ Please keep the smart mini bar away from fire source when it is wasted in case of any accidents.

Preparation steps before the use of smart mini bar

Preparation steps before the use


① Remove all packaging components

The foam base and foam tape for accessories fixing must also be removed. Tear the transparent laminating on the surface so as not to affect the normal cooling and power consumption of the smart mini bar. The foam pad shall be removed in the use of smart mini bar.

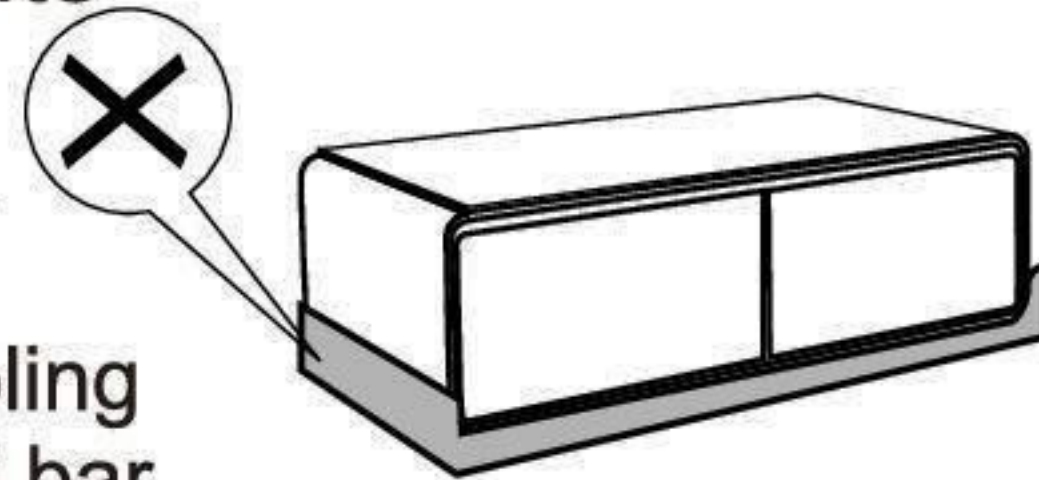



② Count the random accessories and files

Please check the contents inside the box according to the packing list (see page 22 "smart mini bar packing list"). If any discrepancy, consult the vendor for enquiries.

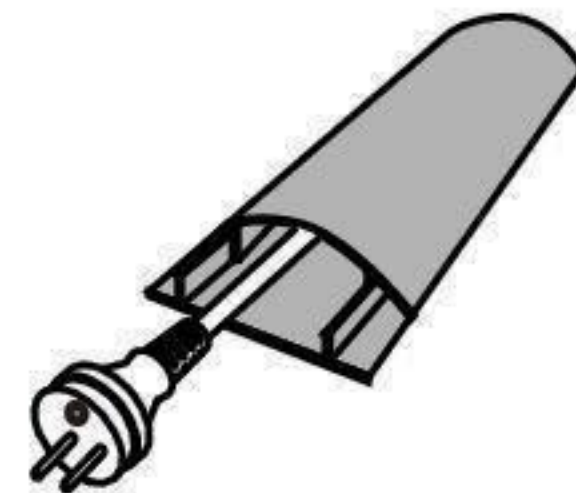

③ Place the smart mini bar at the below locations that meet the following conditions

1. Please install the supplied wire slot in the absence of plug and carpet protection to avoid tread and power line damage.
2. Avoid damp, cold environment as well as direct sunlight.
3. More than 30cm space shall be left in front of the smart mini bar, the best distance from the sofa is about 45cm.
4. The smart mini bar shall be placed on flat and solid ground, flat, solid and nonflammable pad shall be chosen for block up. If it is slightly unstable, please adjust the adjustable foot of the smart mini bar and do not use the packing foam pad for block up.

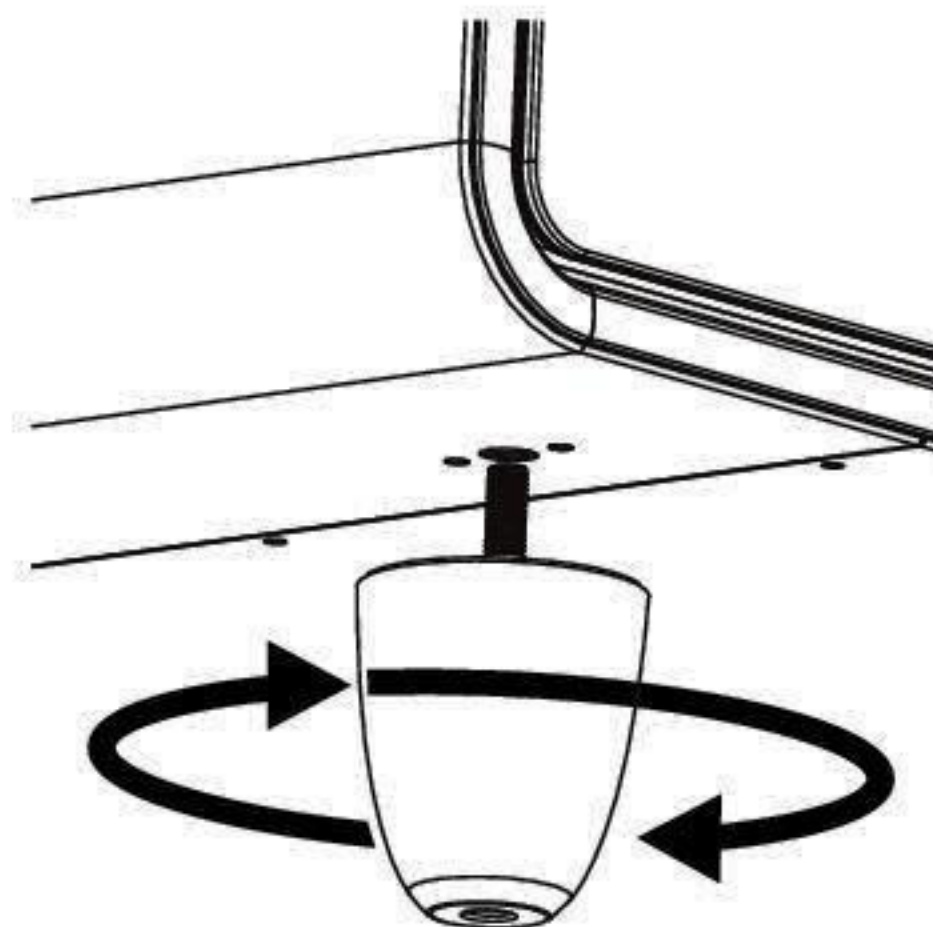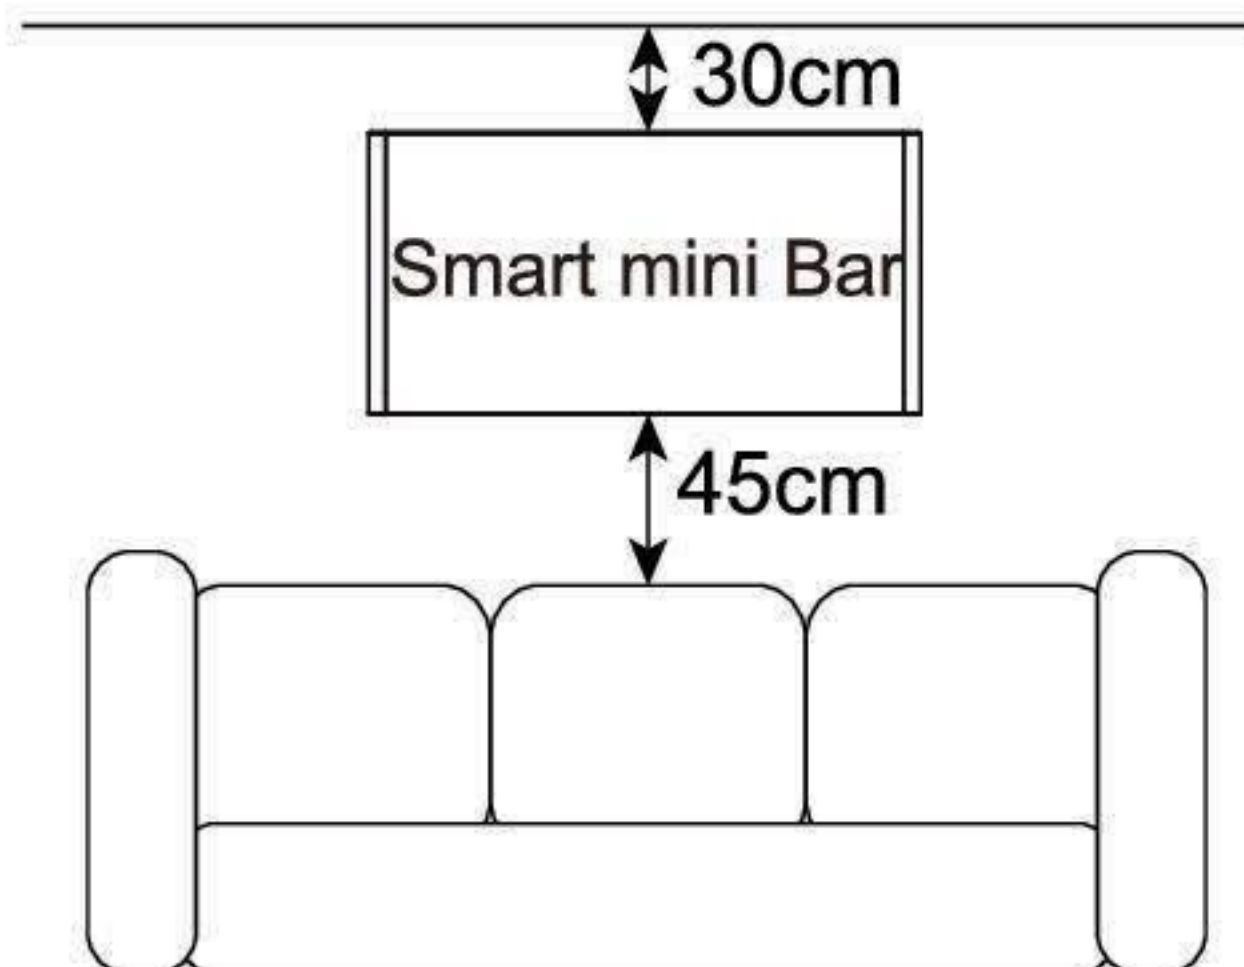

④ Please clean before use


(Please refer to page 17 "daily maintenance and repair of smart mini bar" for cleaning method)

⑤ Standing

Do not switch on the power after the smart mini bar is placed flat and cleaned. Let the ice stand for more than 2 hours, then turn the power on to make sure the normal operation of the smart mini bar is working.

⑥ Electrical connection

After standing for 2 hours, check whether there is water vapor or foreign matters inside the power jack, USB, or AUX hole. The power line (the power jack of the smart mini bar is at the bottom) can be connected after the check. The power line can be fixed before connecting, and leave enough length on both ends to plug off the power line so as not to wear or reduce the service life of the line as well as in case of stumble.

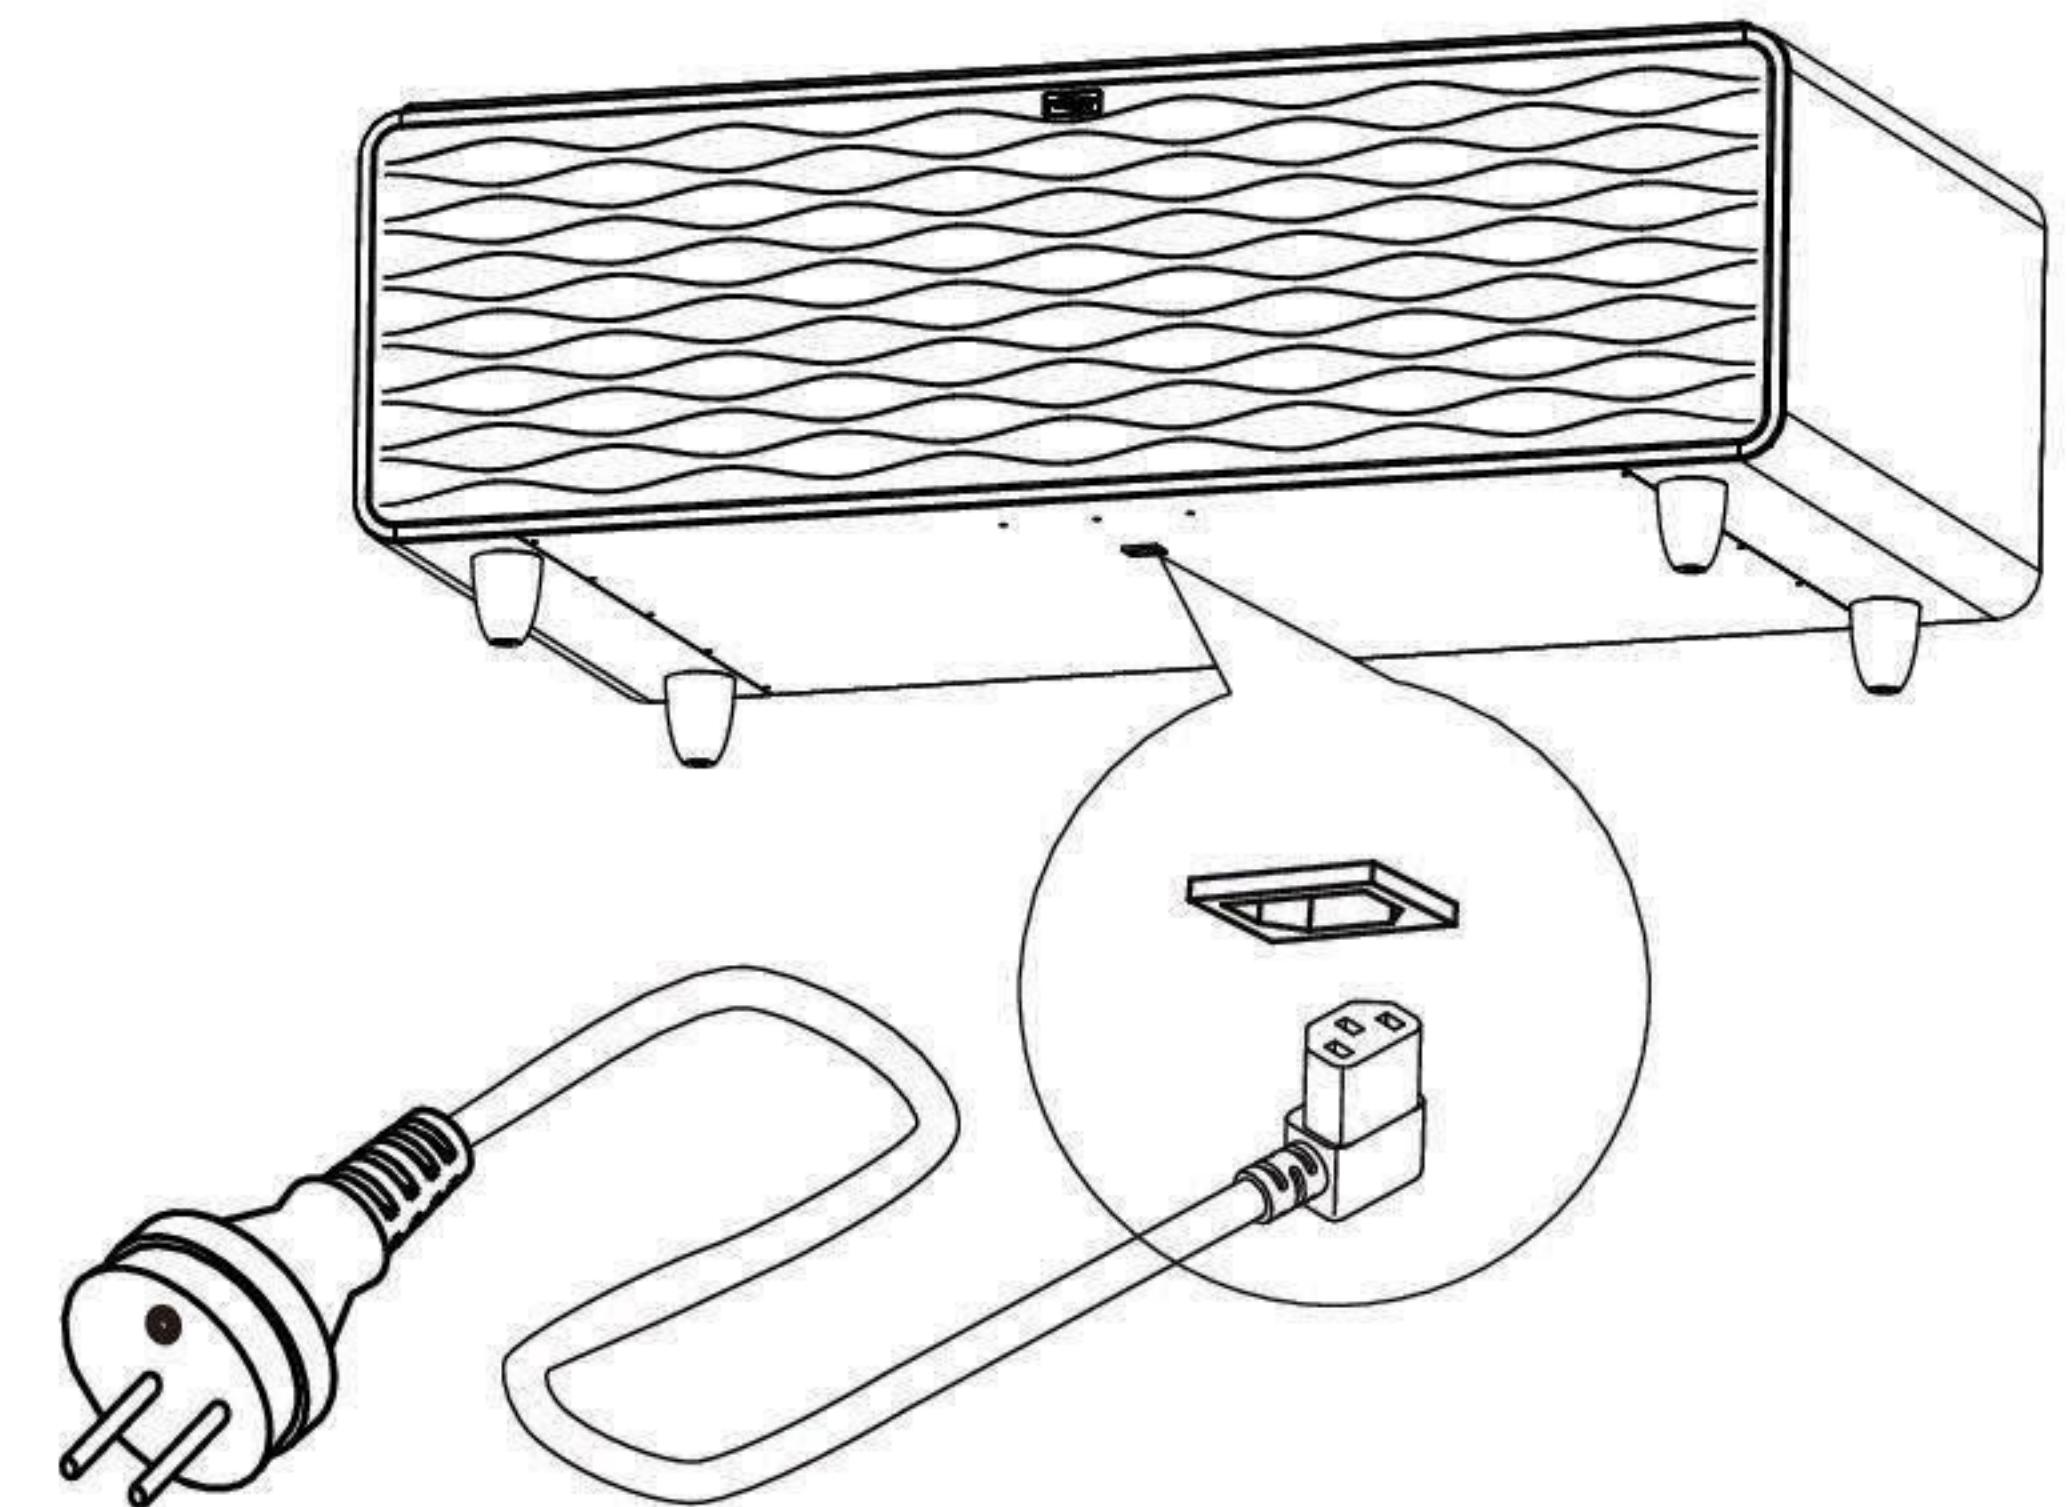


How to connect the power supply safely

Still tangled with the placement of the bar ice power line? We are concerned about this problem at the beginning of the development, we give users the following three recommended safe wiring methods after repeated verification.


1

Way one:Ground Socket

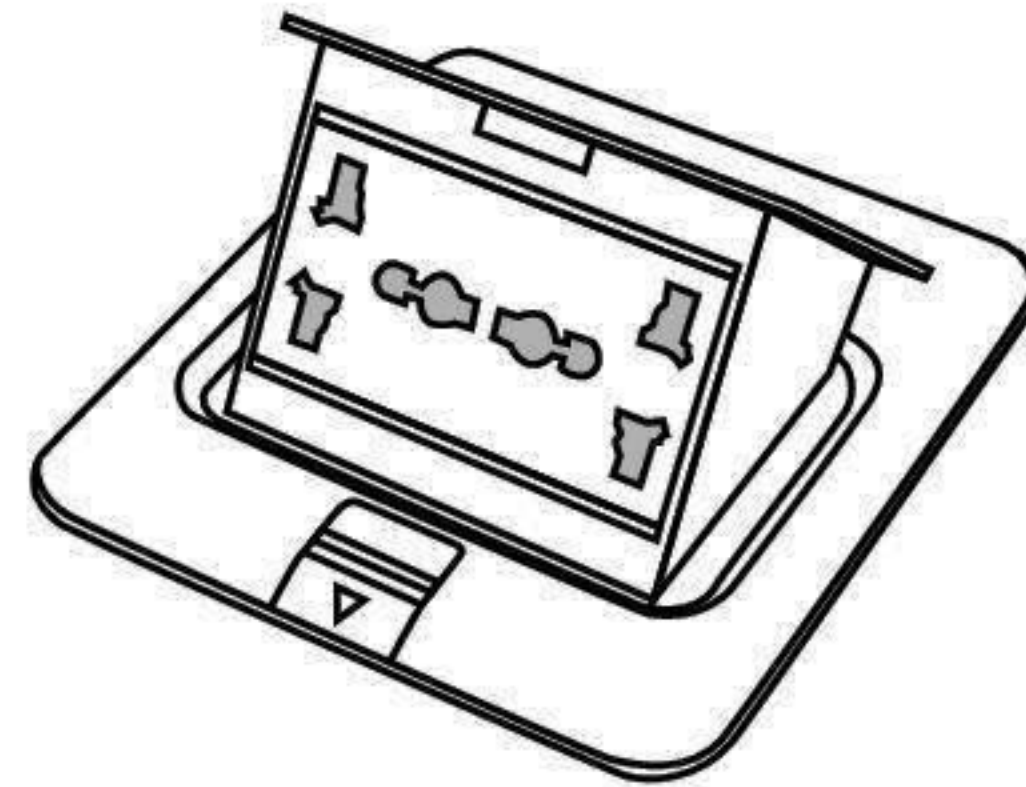


2

Way two:Carpet Put power cord under carpet

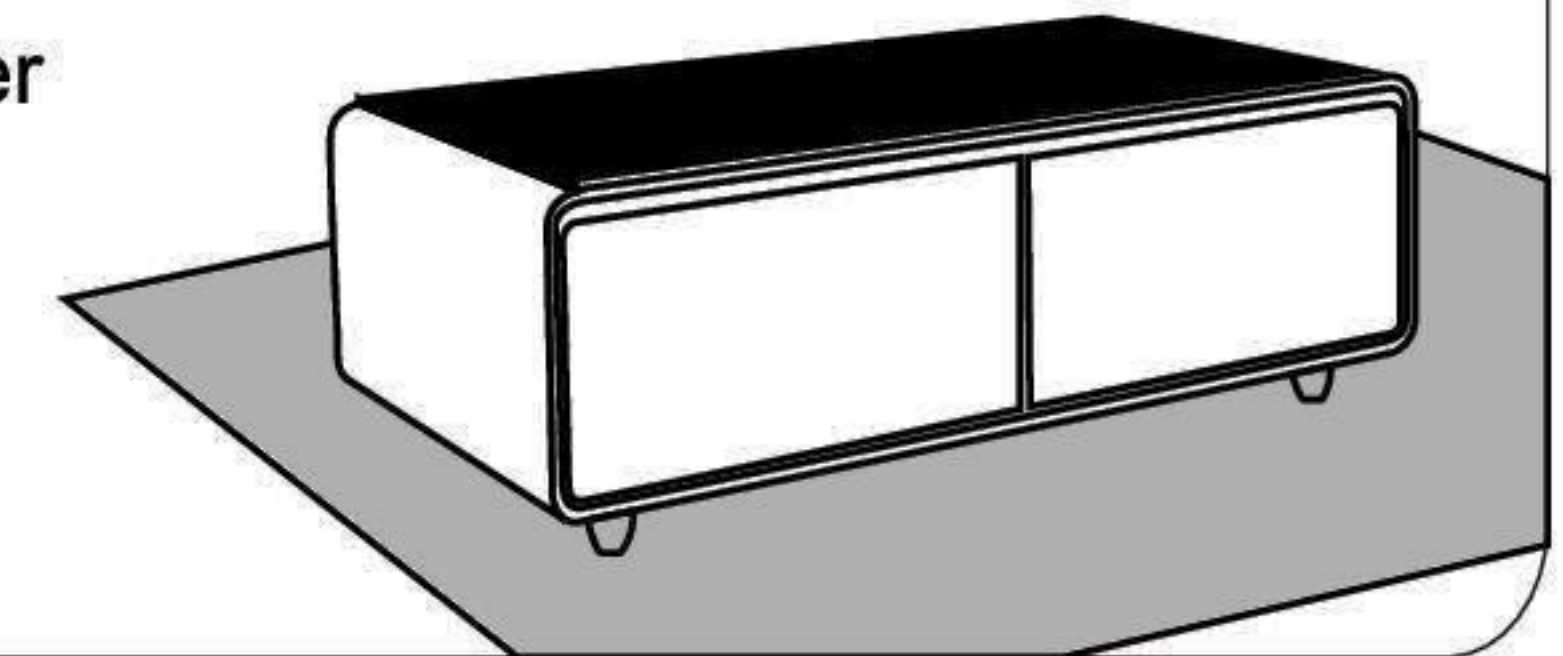


3

Way three:Slot Put power cord through slot

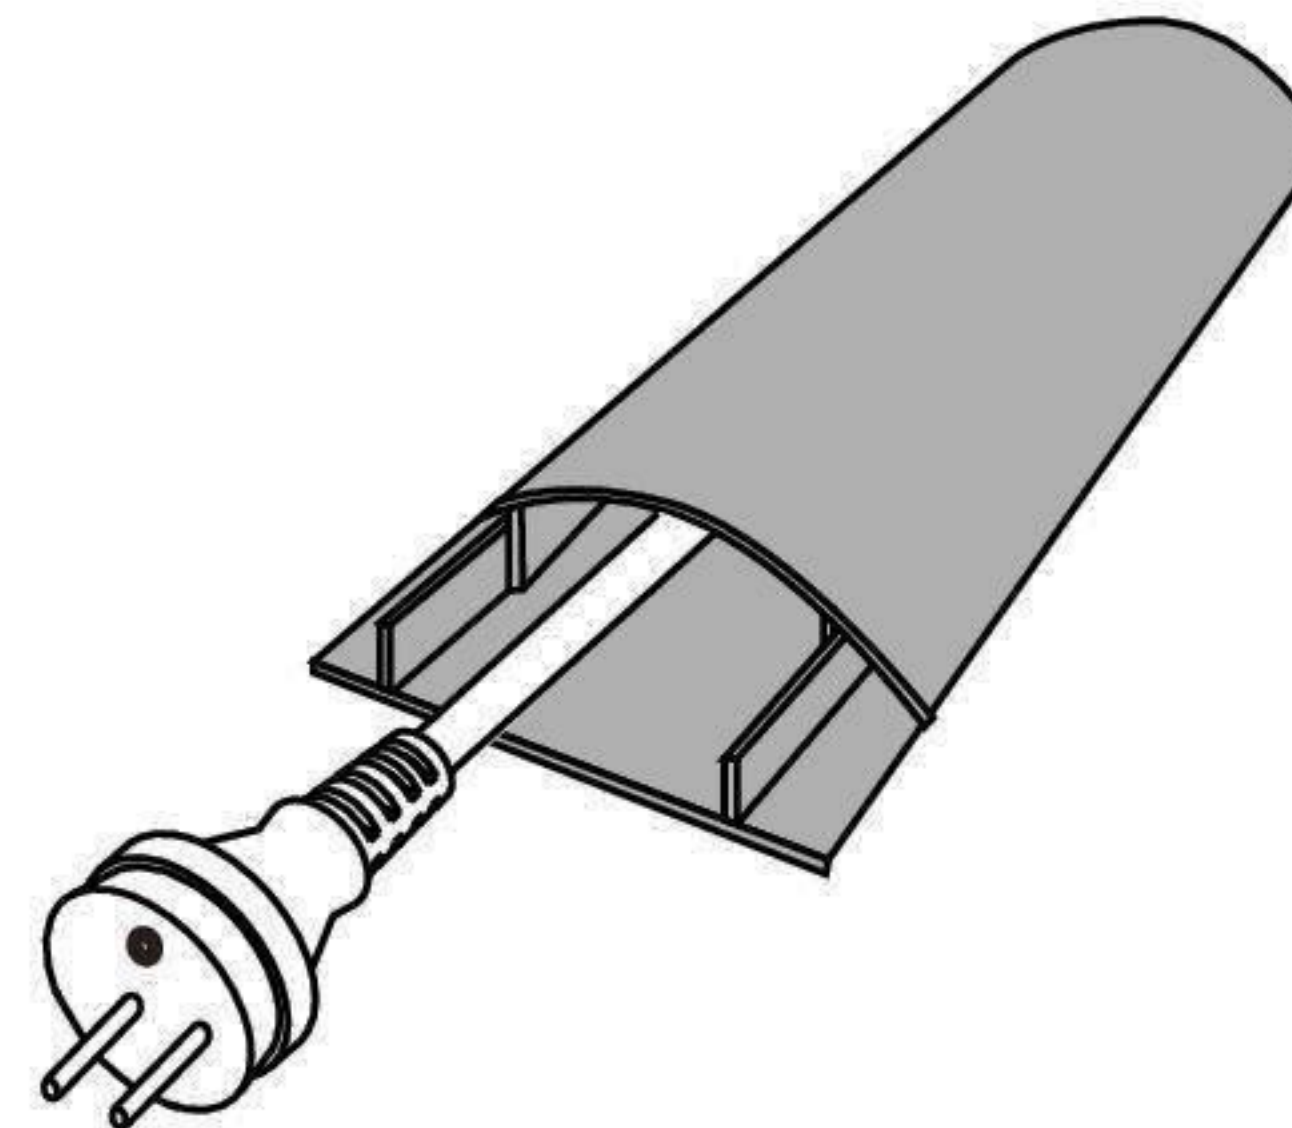

Each Part of the smart mini bar

All diagram in this manual are schematic diagram, thus some features or equipment may not completely consistent with your product. specific please in kind prevail!

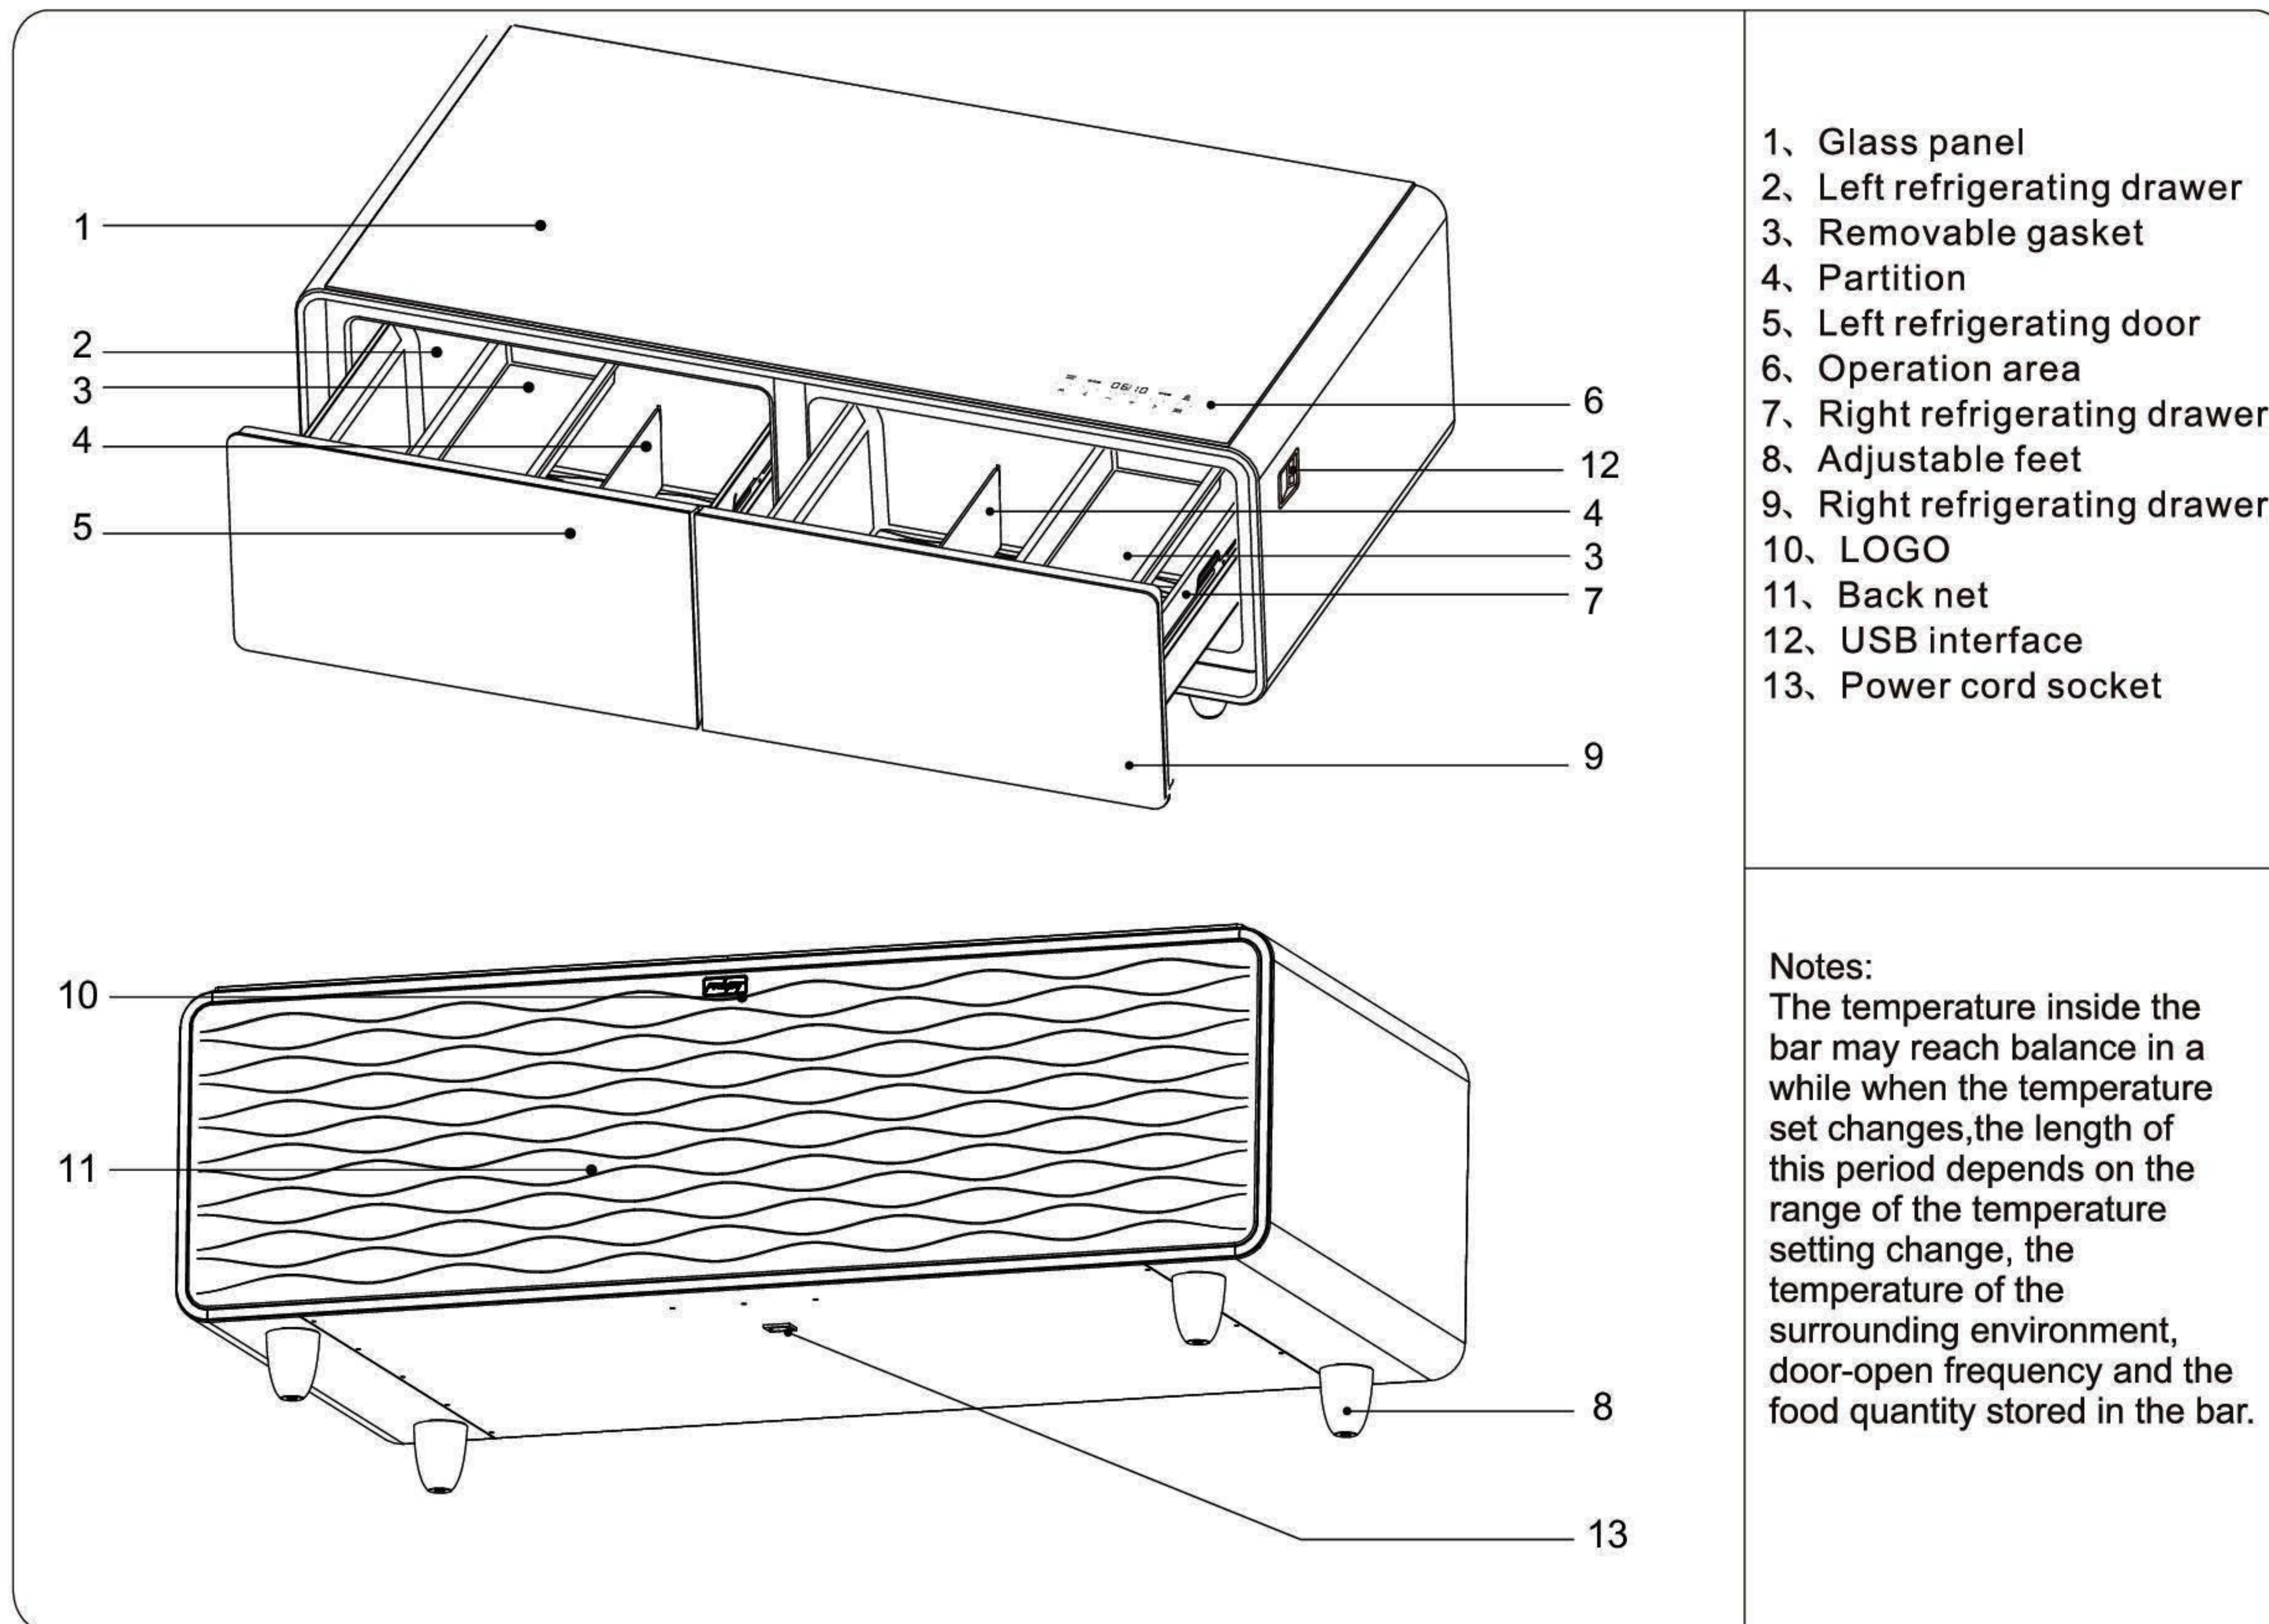

Steps for the first use of smart mini bar

First use instructions

Power on

First power, fridge enter into intelligent mode(ECO), all buttons are not locked.

Power Memory

It should be operated in accordance with the setting of last power off for each power time after the first power (please refer to the page11,"Operation instructions at freezer section"for more details)

Put food inside drawer

After fridge working some time and temp is cool down, put food inside drawers.

Cooling area usage advise

After power on, it is under ECO mode

Music Player

Power on first time, music player is off. Please turn it on again

USB charging

Once Bar is on, you can charge


Main function instructions of Smart mini bar

Display and control instructions

There are two parts in display control area. It is for refrigeration control, which is above the line and the area below the line is for audio control.

Keep pressing “unlock” button of refrigeration zone for 3 seconds, then a series of notes will appear. You can touch other buttons of this zone for operating Refrigeration zone.

Keep pressing “unlock” button of audio zone for 3 seconds, then a series of notes will appear. You can touch other buttons of this zone for operating Audio zone.

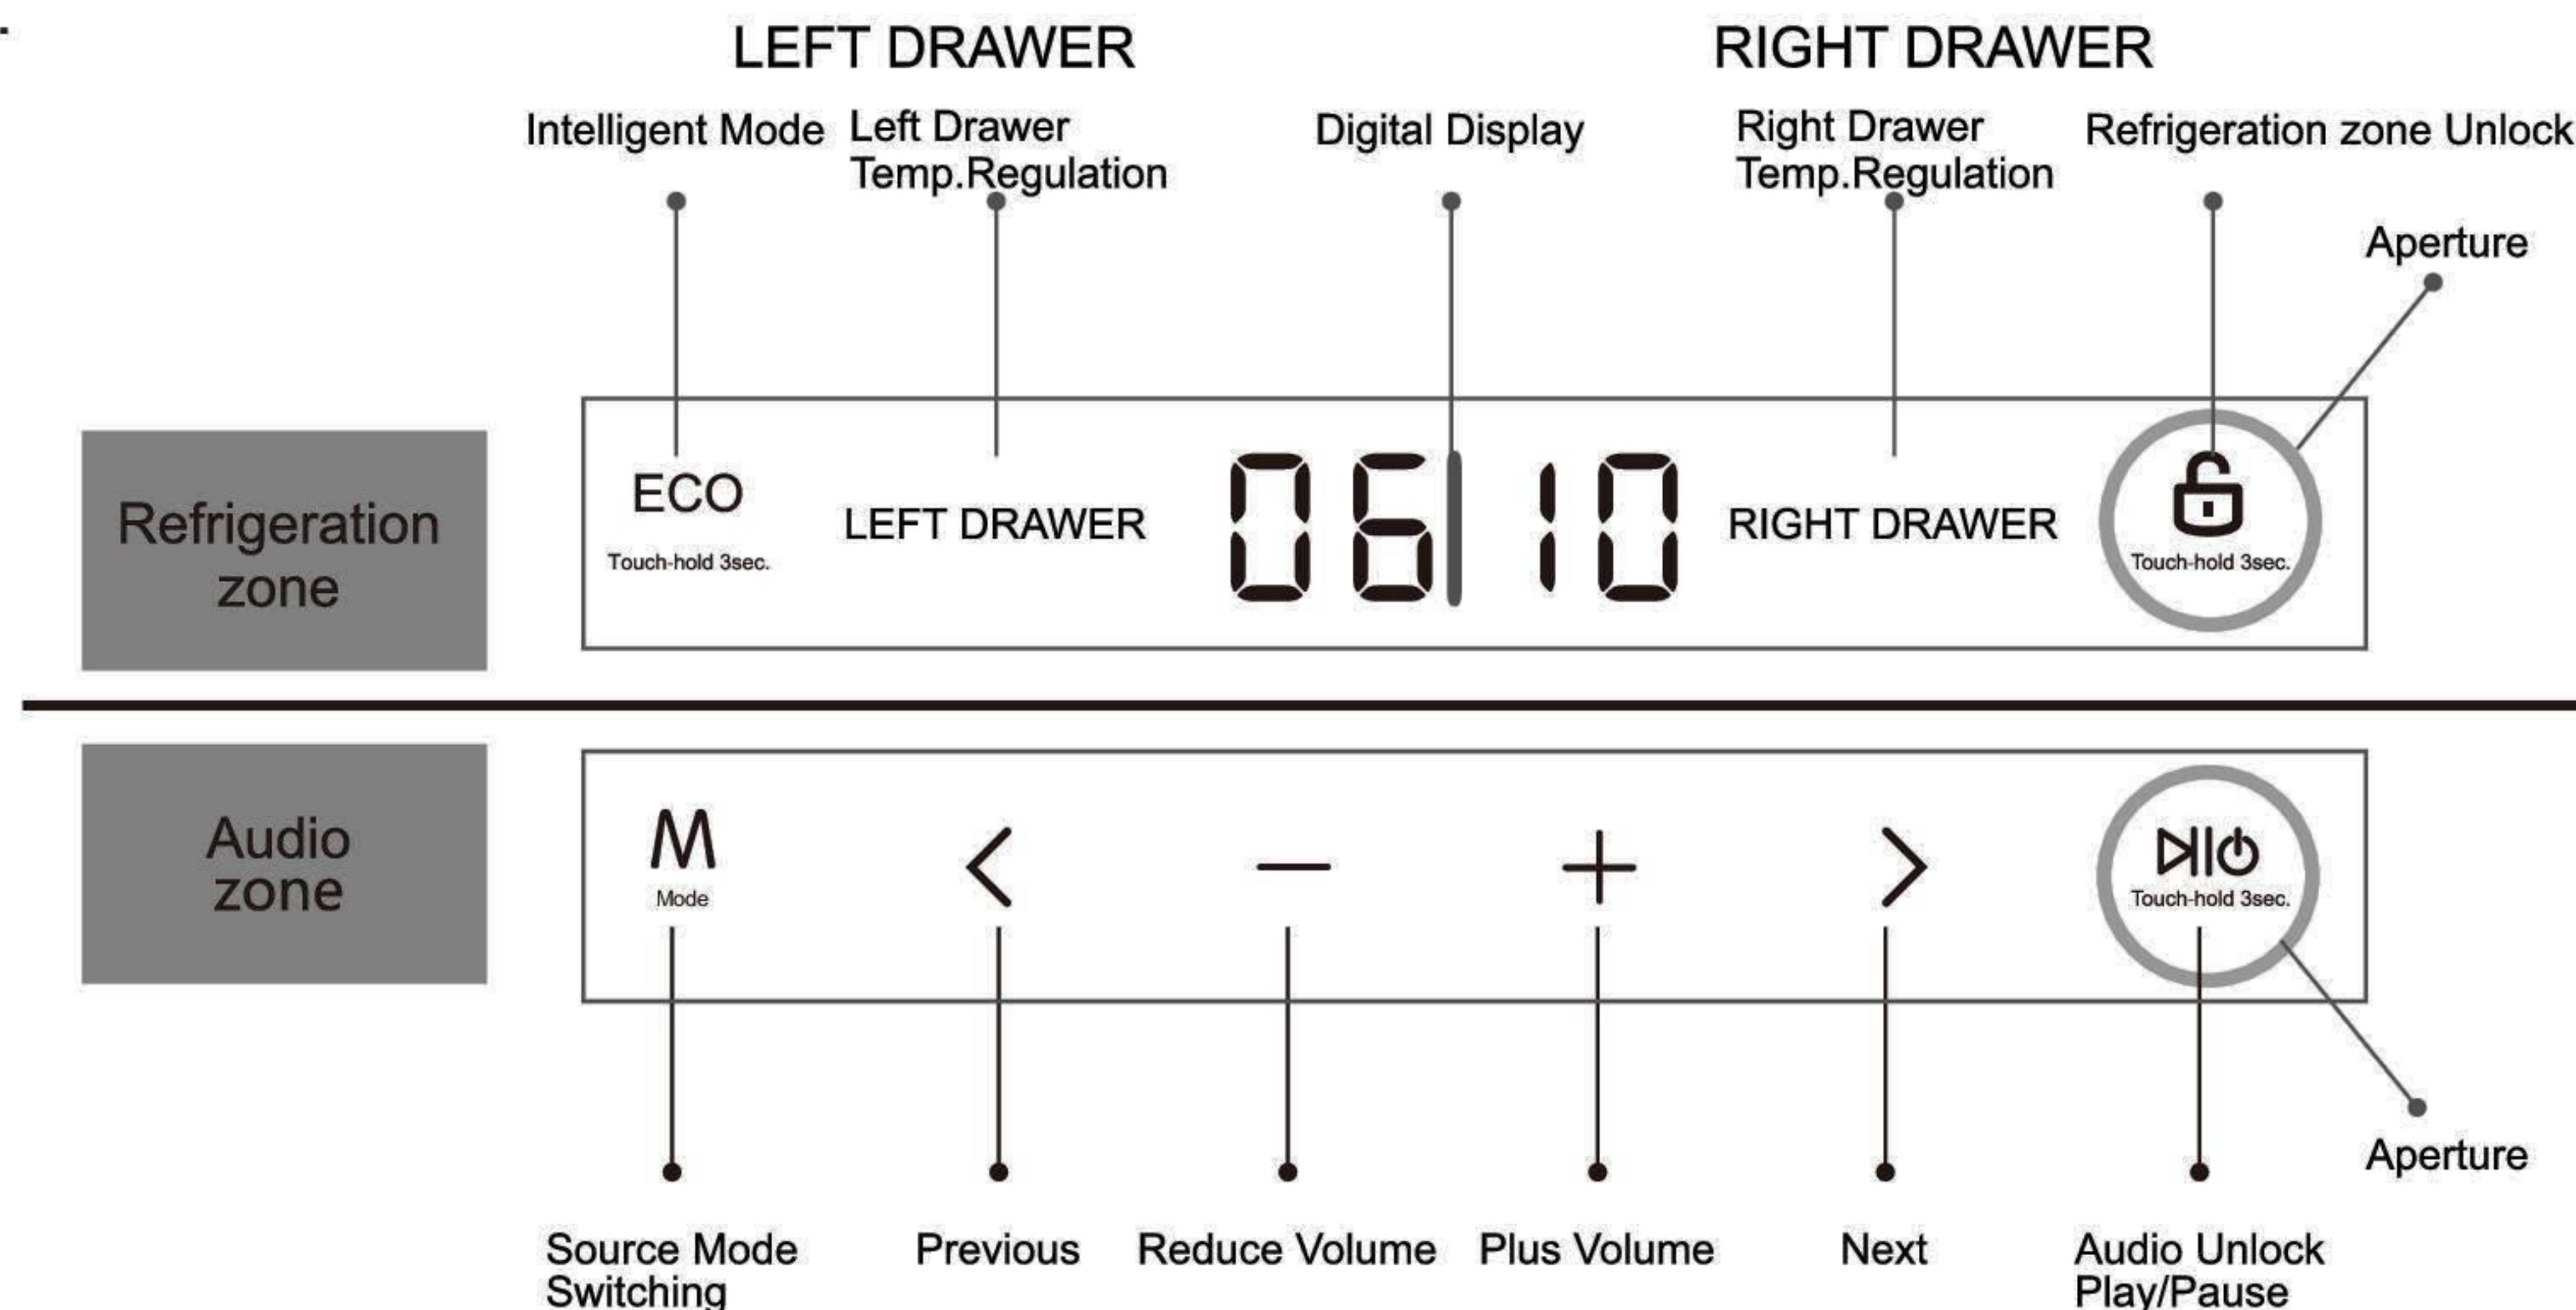

Note 1: Refrigeration and Audio share the same digital display zone.


Note 2: After regulating Temp. Adjustment of refrigeration zone, when setting audio function, there will not appear the temp. , but current sound operation.

Note 3: When the audio is on , you can also operate the refrigeration zone by pressing “unlock” button for 3 seconds. The operation of audio and refrigeration zone is independent of each other. The audio can be activated and closed independently.


Main function instructions of Smart mini bar

Operation description of cold storage area

After Powering on for the very first time, Minibar will enter the ECO intelligent mode automatically. The buttons are in a non-locking state and they will enter into the locked state after 10 seconds without any operation.

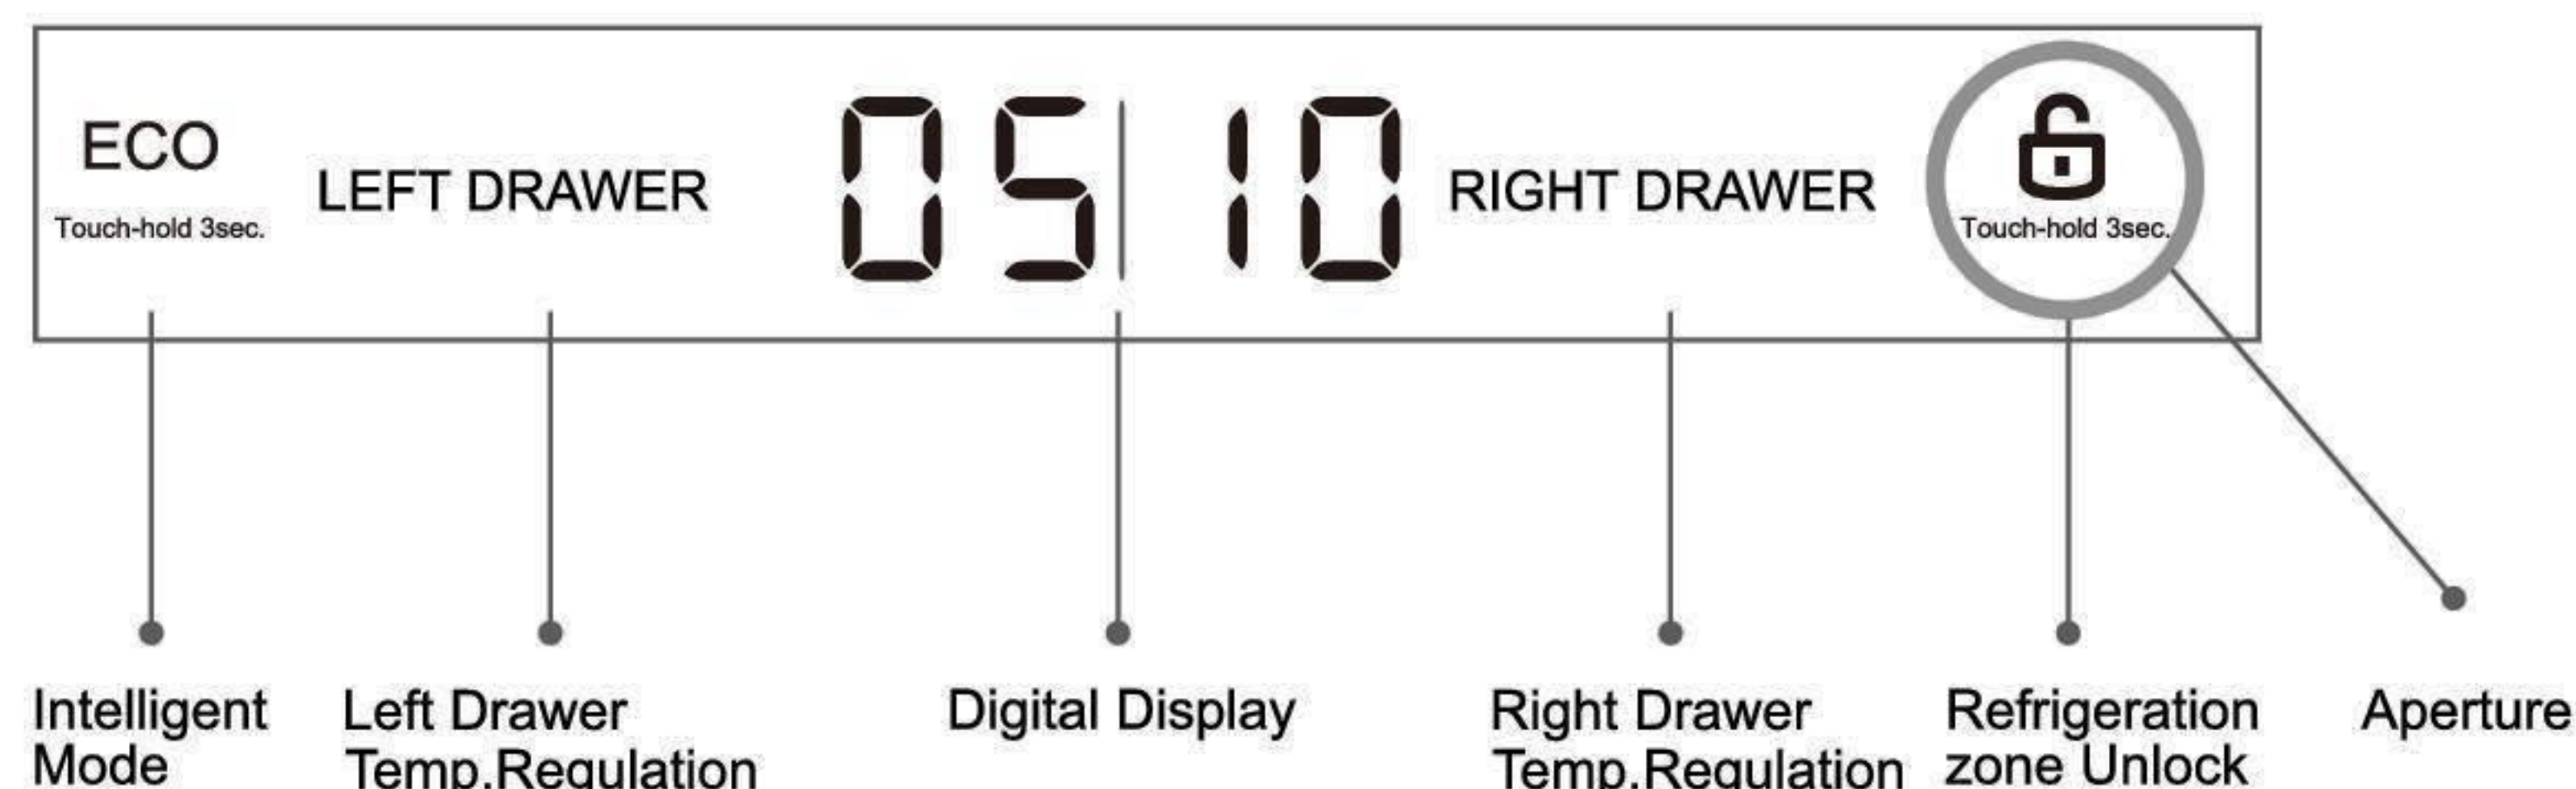

Unlock Key

It will automatically enter the lock state without any operation for 10 seconds . Keep pressing  button of refrigeration zone for 3 seconds, then you can touch other buttons of this zone for operating

Note: When the unlock button is pressed for more than 15 seconds, it will be regarded as mis-operation. The display board will not respond to this operation and please remove the finger instantly. Then you can operate again.


Right Drawer

After unlocking, touch "Right Drawer" button , the current drawer Temp. will flash, which means you can operate it. Each time of touching the button, the temperature will rise and cycle as 5→6→...→10→11→12→OF→1→2→3→4 (where "OF" means closing the freezer of right drawer). If there is no operation for more than 3 seconds, the default will be confirmed and the display will stop flashing, then the settings take effect.

Right Drawer


The operation of left drawer is the same as the right one.

Intelligent Mode

After the refrigeration zone is activated, keep pressing  for 3 seconds until the digital display show "ECO" , then it will show the temperature of left and right drawers which will flash.If there is no operation for more than 2 seconds, the default will be confirmed and the display will stop flashing, then the settings take effect.

Alarm Function when the door opening

When opening the drawer, the display shows the current temperature of it. If the door keep opening too long or is not closed very tight, the buzzer will alarm at intervals and the corresponding drawer's temperature zone will flash "dr" to remind you to close the door in time.

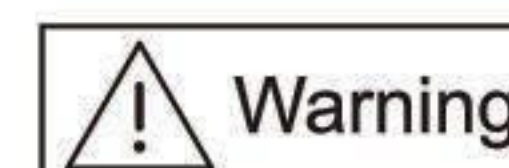

Warning

Lock Function Memory - minibar is in unlocking state after powering on.

Main function instructions of Smart mini bar


Cold storage use techniques and food storage recommendations

Precautions for storing food

1. Refrigerator is used to store fresh food. It is very important to store food in the right way.
2. Don't store foods which are easily addled at low temperatures, such as bananas, cut tropical fruits. Excessive cooling will make food discolored and will reduce the vitamin content.
3. Hot food should be placed after cooling, otherwise it will increase the temperature inside and affect the freshness of other foods. Don't open the door frequently. When the door is open, the hot air will come in the drawers to cause the rising of the inside temperature.
4. Please use plastic wrap or bags to seal containers or use a covered container to store food to avoid the evaporation of food moisture in order to retain the flavor and nutrition of food and to reduce the smell inside refrigerator.

Tips for using and storing comments



1. Food such as vegetables and fruits should be washed and be scrubbed clean. Food packaging should also be scrubbed to protect the storage of other food nearby.
2. The bottles should be tightly placed to prevent them from tilting when opening the door.
3. Don't place tall cans, otherwise the door cannot be closed properly.
4. The partitions in the drawer can separate different types of food. It can be adjusted according to the requirements. Please remove the partitions if the food volume is too big.
5. The sliding tray in the drawer can be used to store washed fruit (g. grapes\strawberries) and it is unnecessary have a fruit tray.
6. The temperature of the Left and Right refrigerator can be controlled independently. Please adjust the temperature according to the food characteristics. Refer to "Food Storage Temperature Recommendations" for the details.
7. In winter or cooling weather, you can turn off the refrigeration function of it. The drawers can be used as a daily storage.

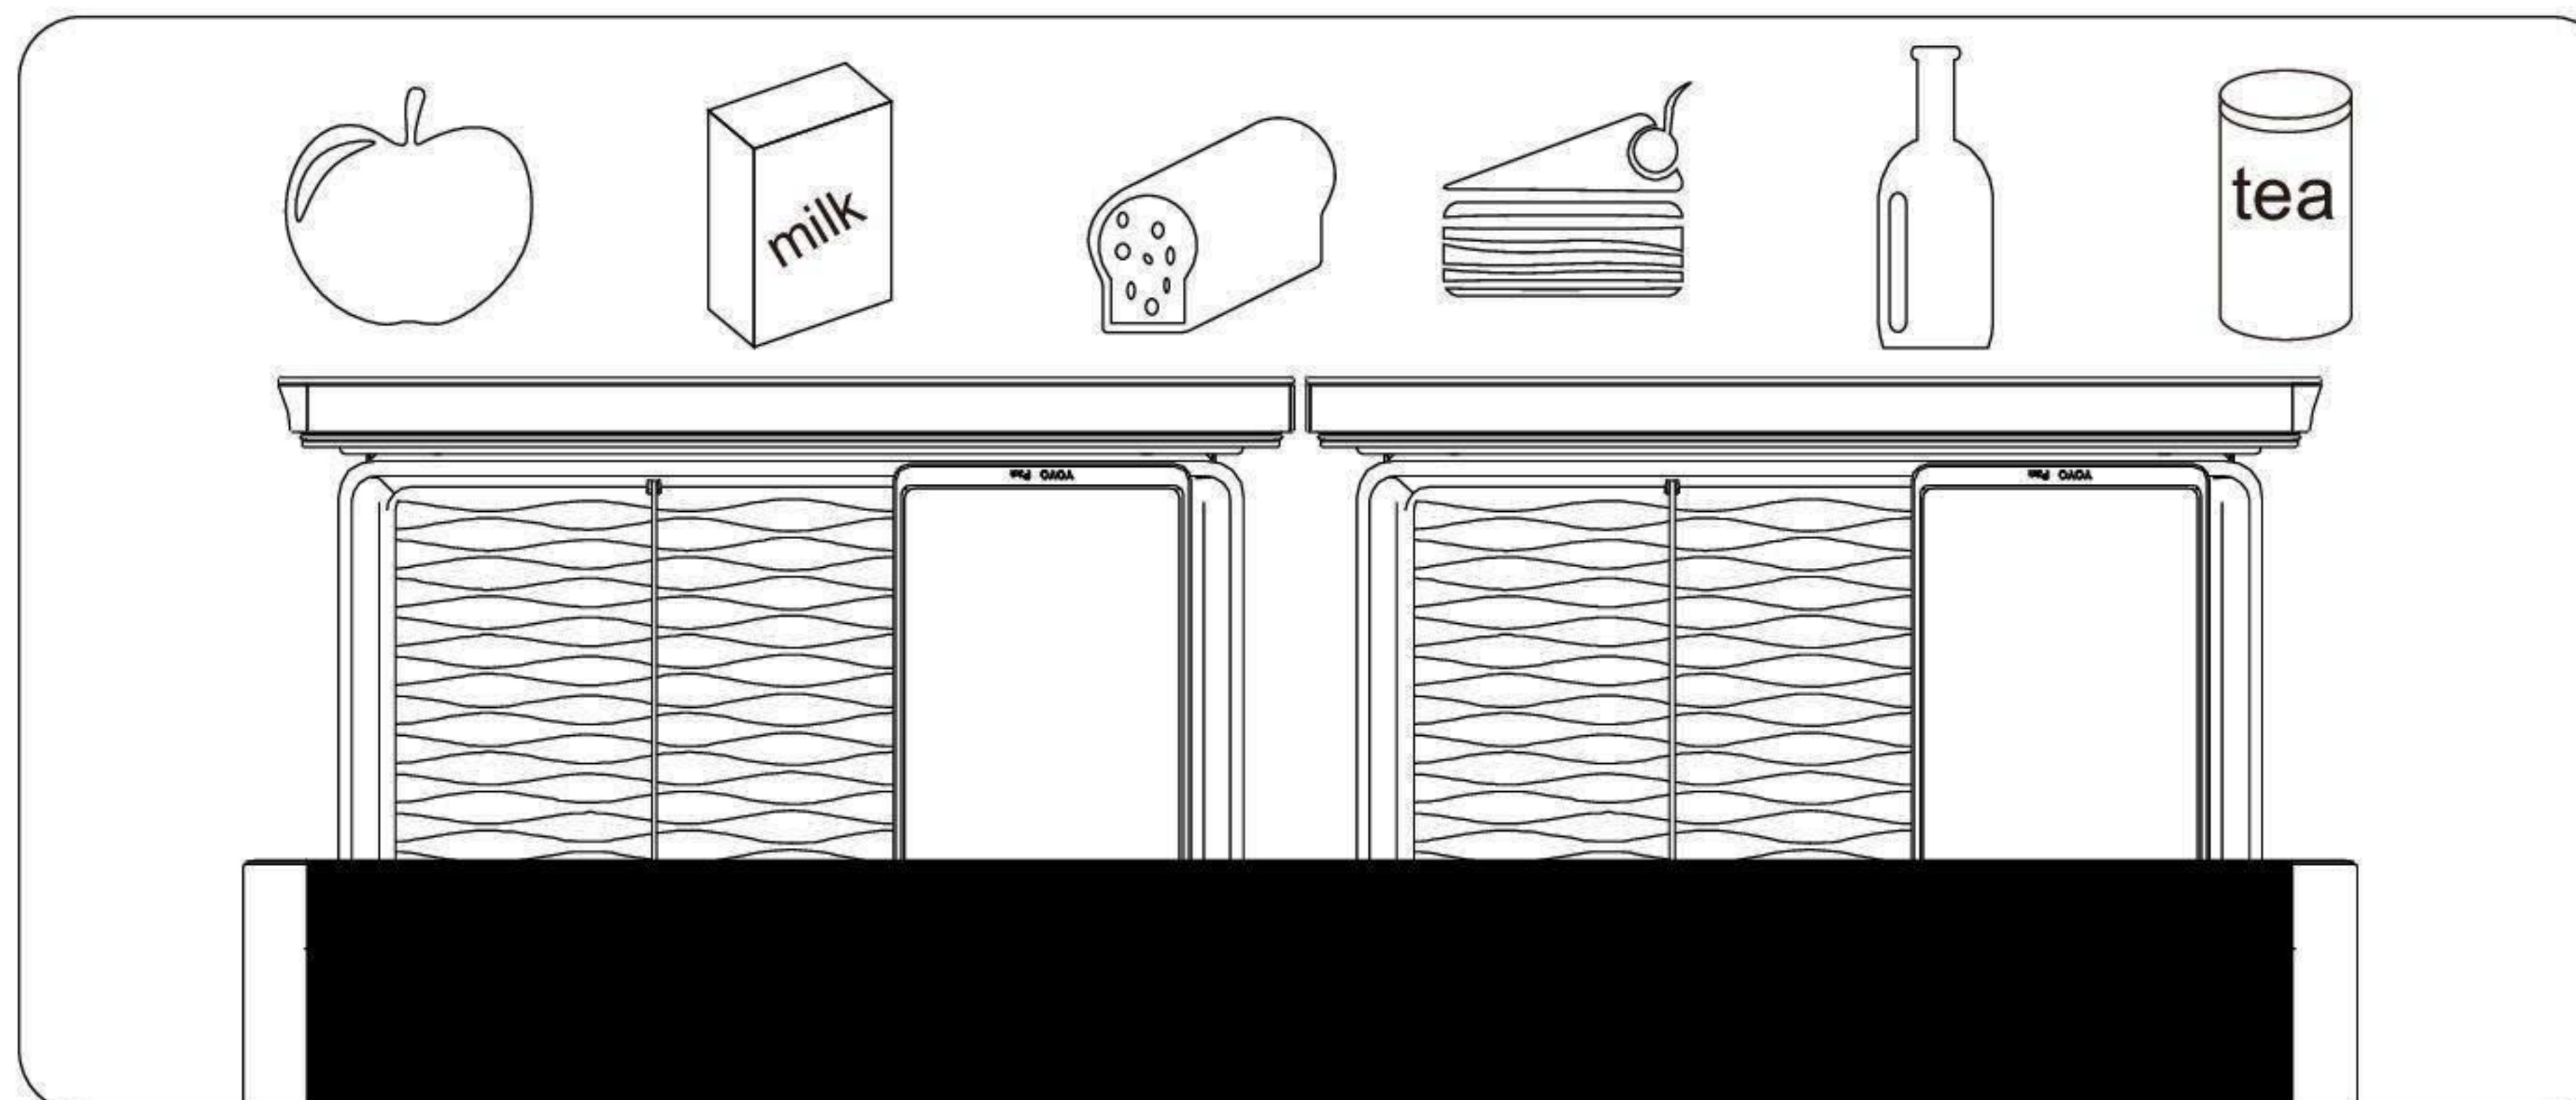

Main function instructions of Smart mini bar


Audio operation instructions

As the power is on, the audio is off. Please keep pressing the button for 3 seconds to activate the sound.

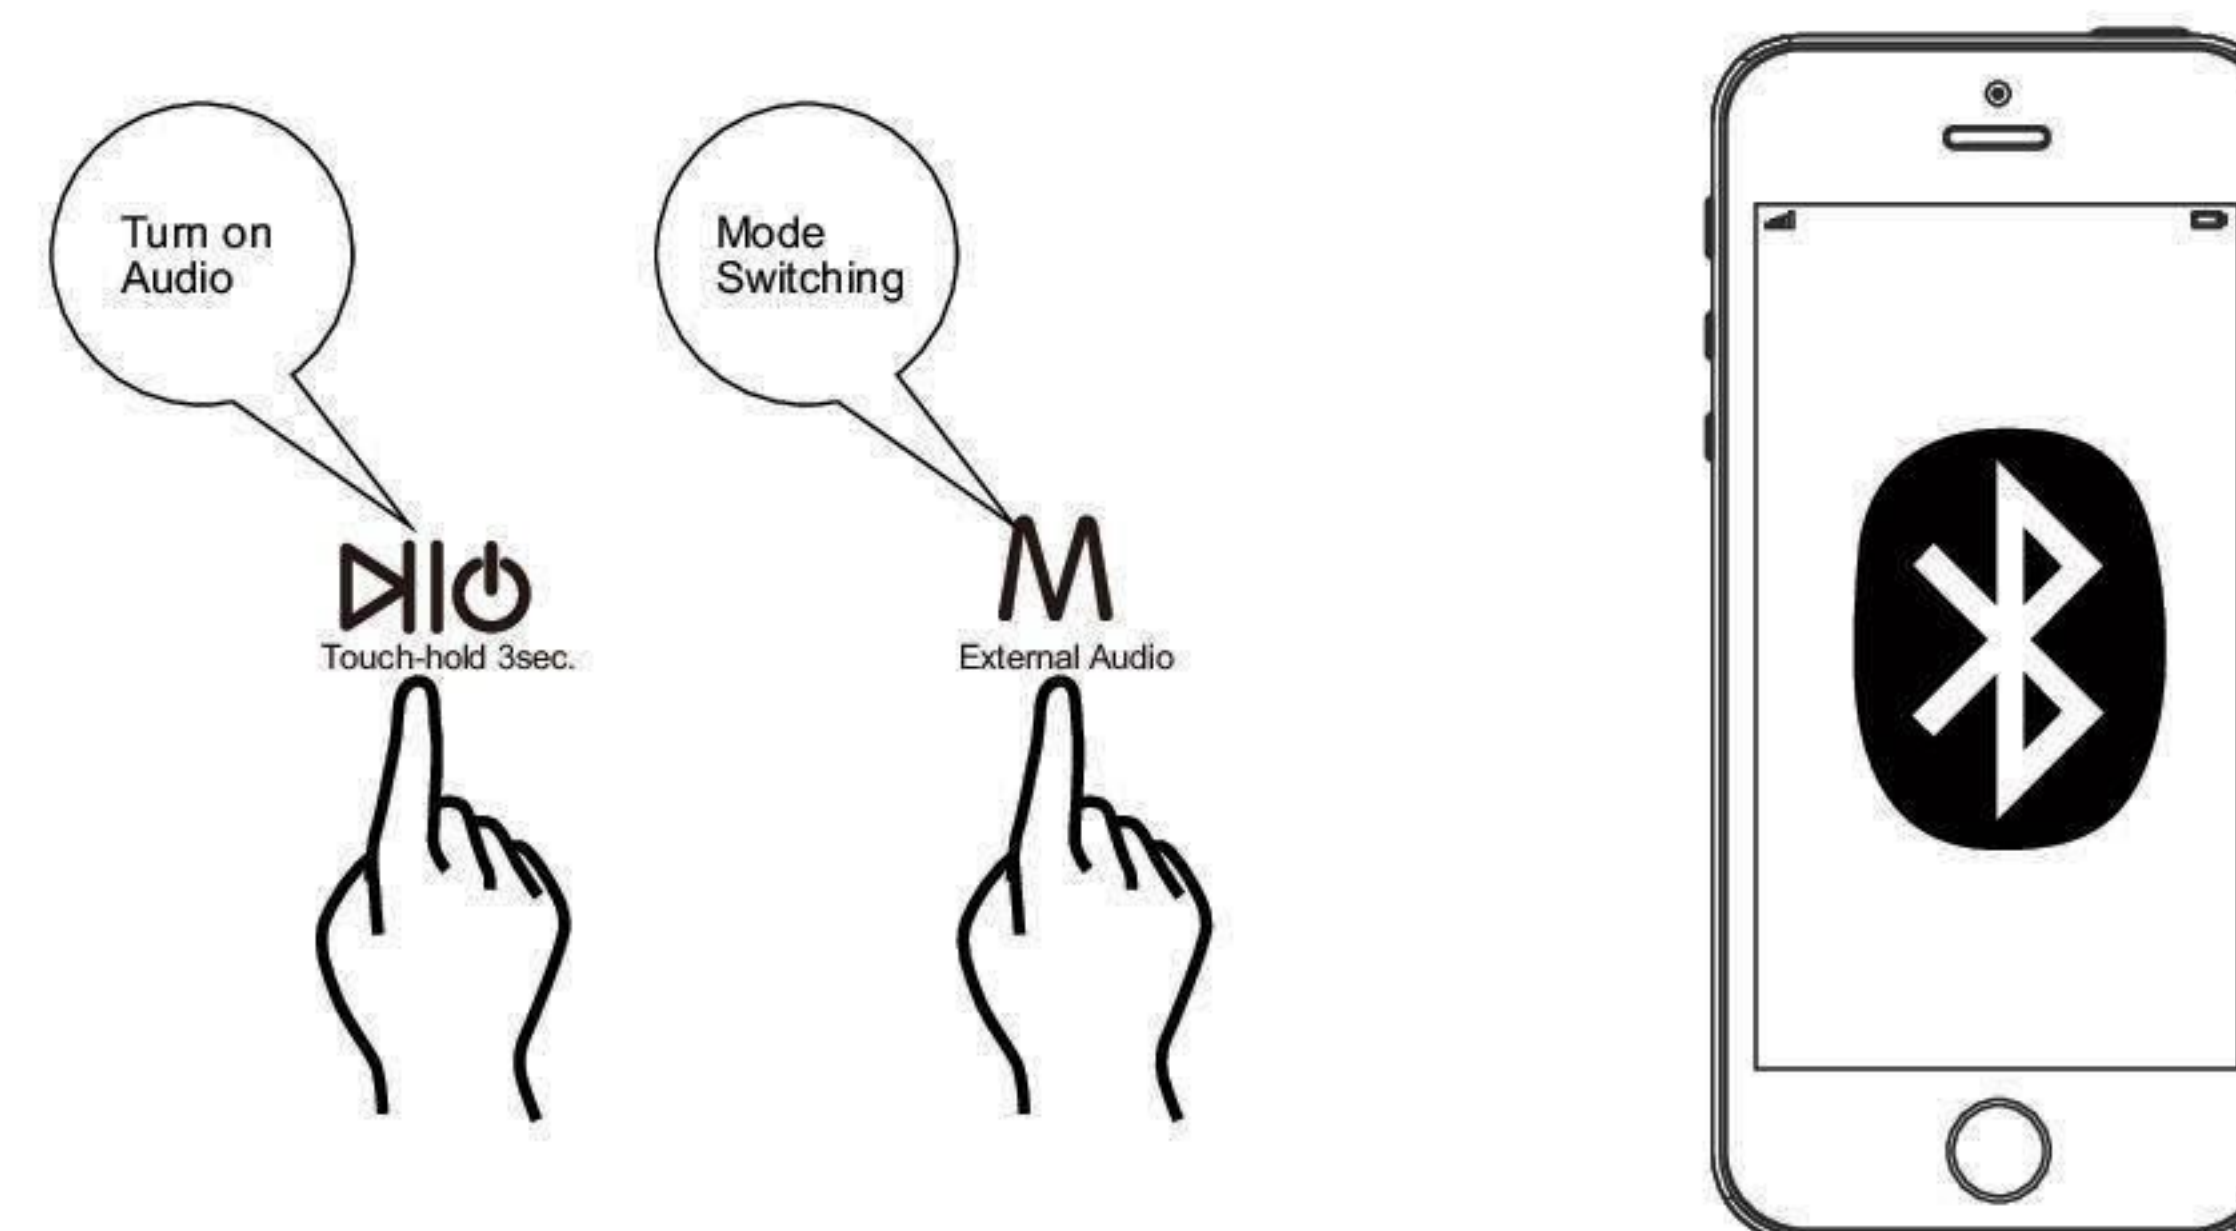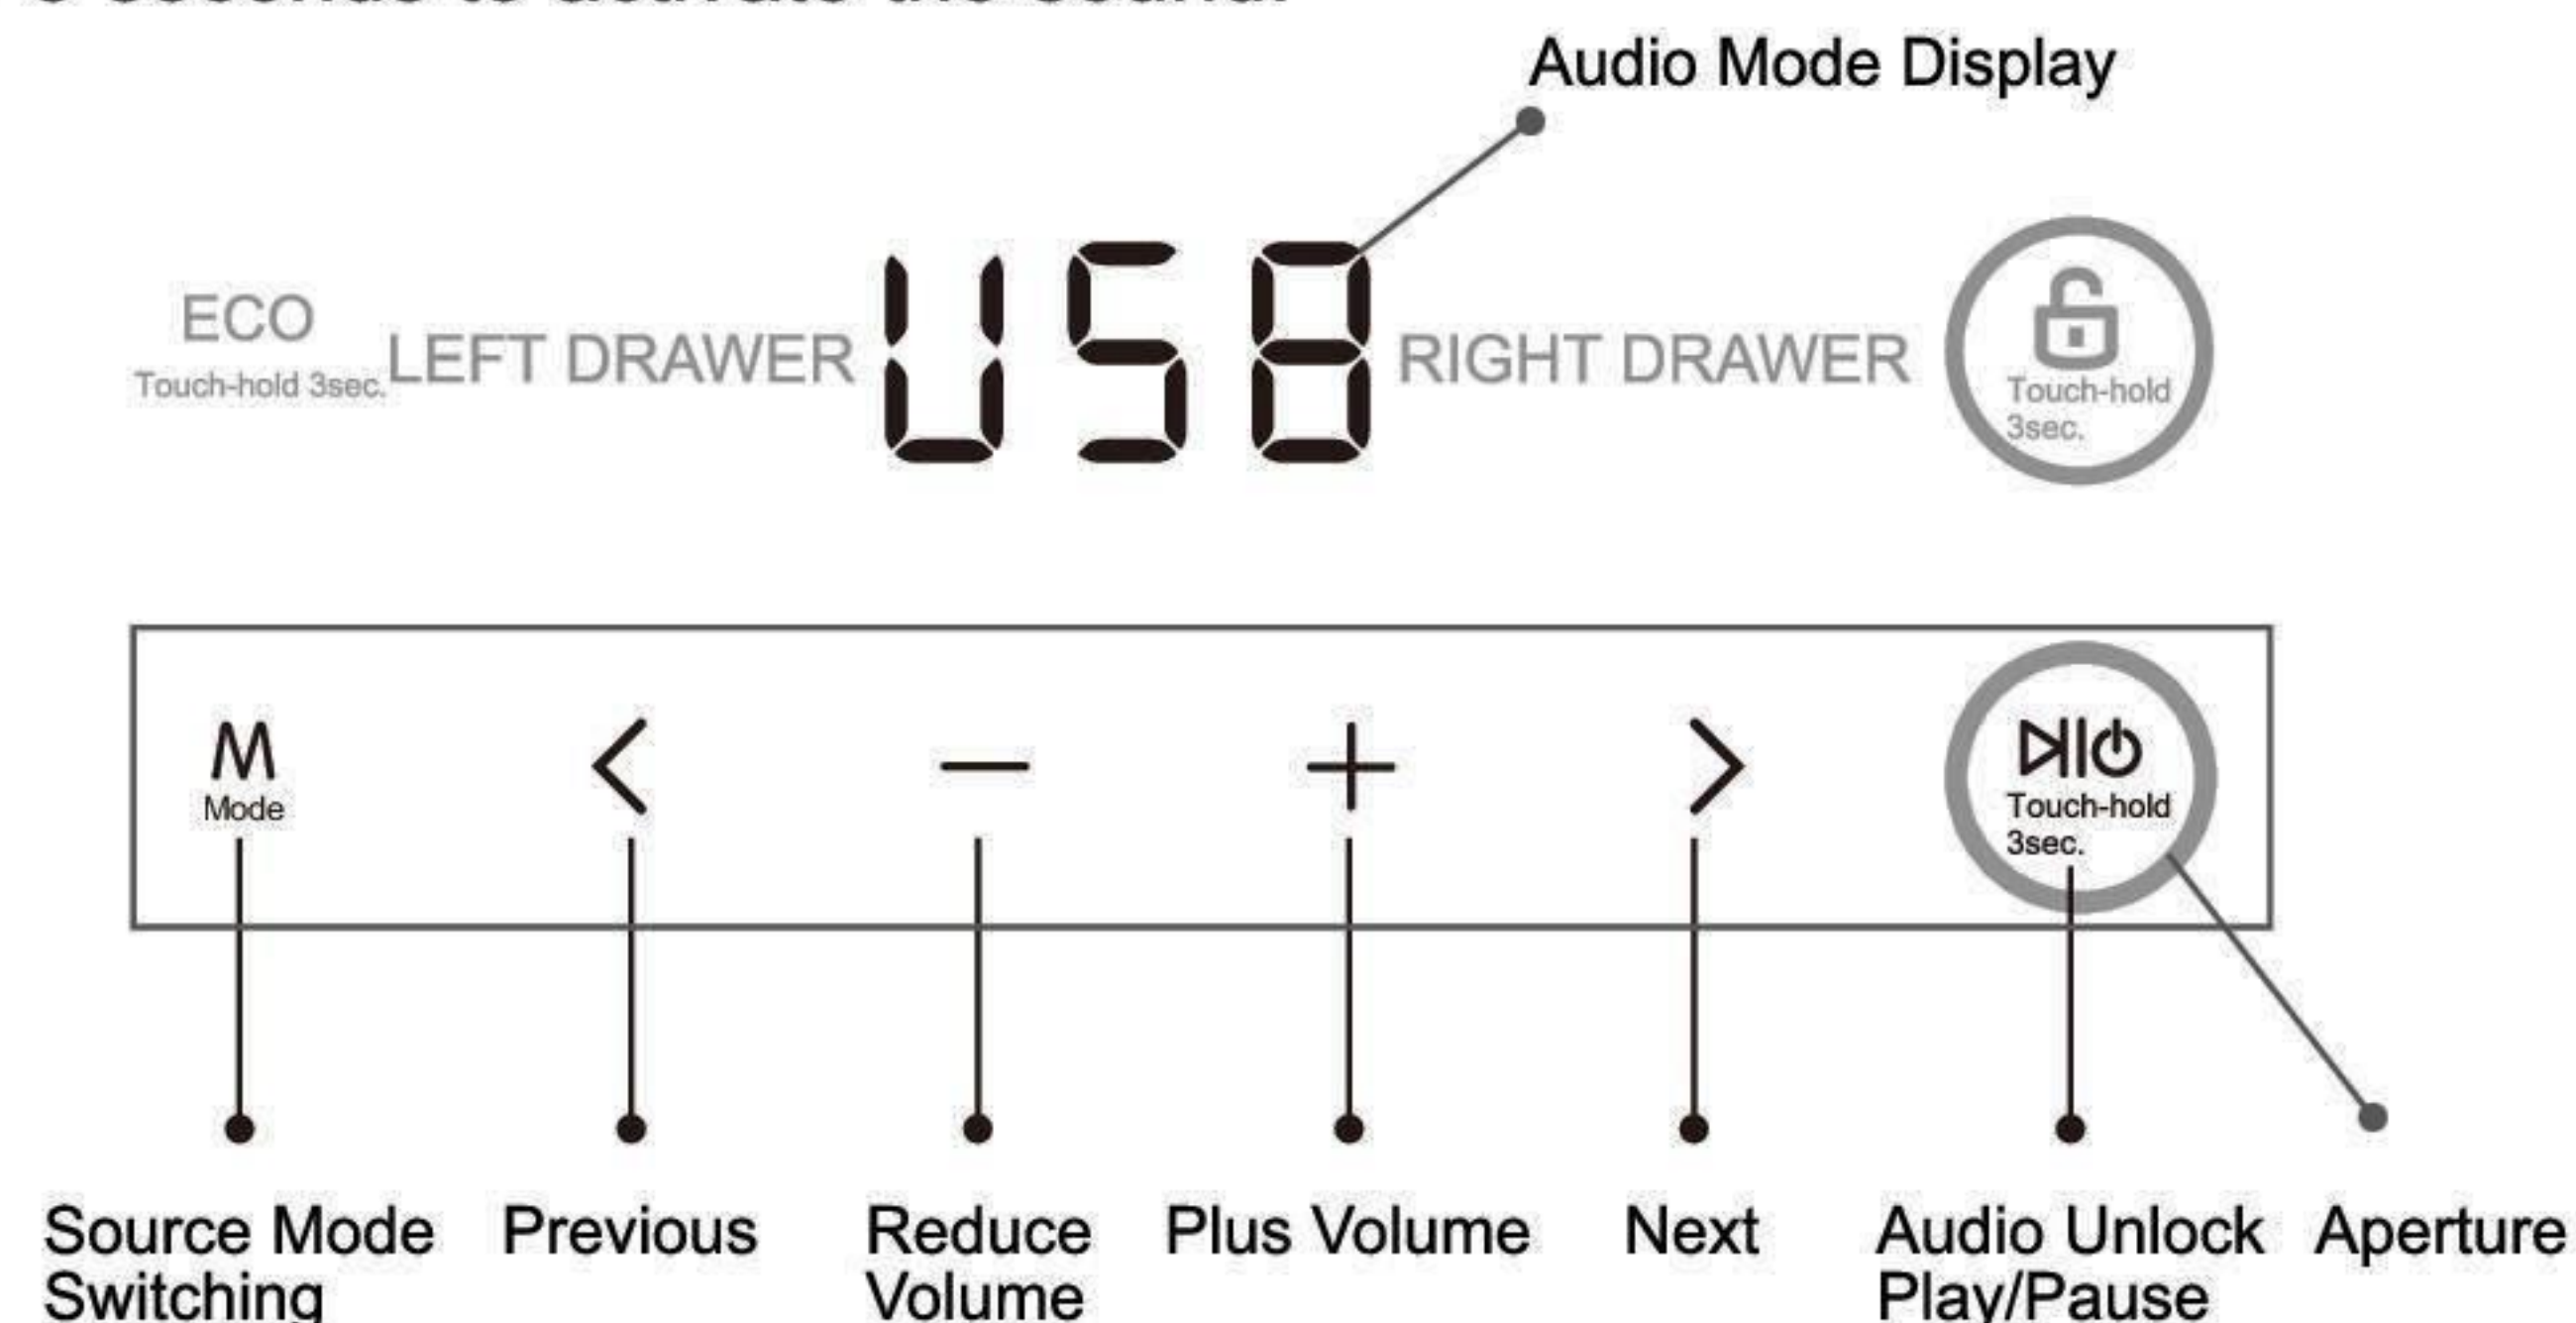


2.) Select" External Audio Mode", LED will display "BL" , while voice broadcast is 'External Audio Mode". The audio can be used as external audio of mobile phone/computer by inserting a 3.5 mm audio cable to earphone output hole of them. Then you can control the music by mobile/PC.

Note: In this mode, audio interface does not support the Previous or Next music switching

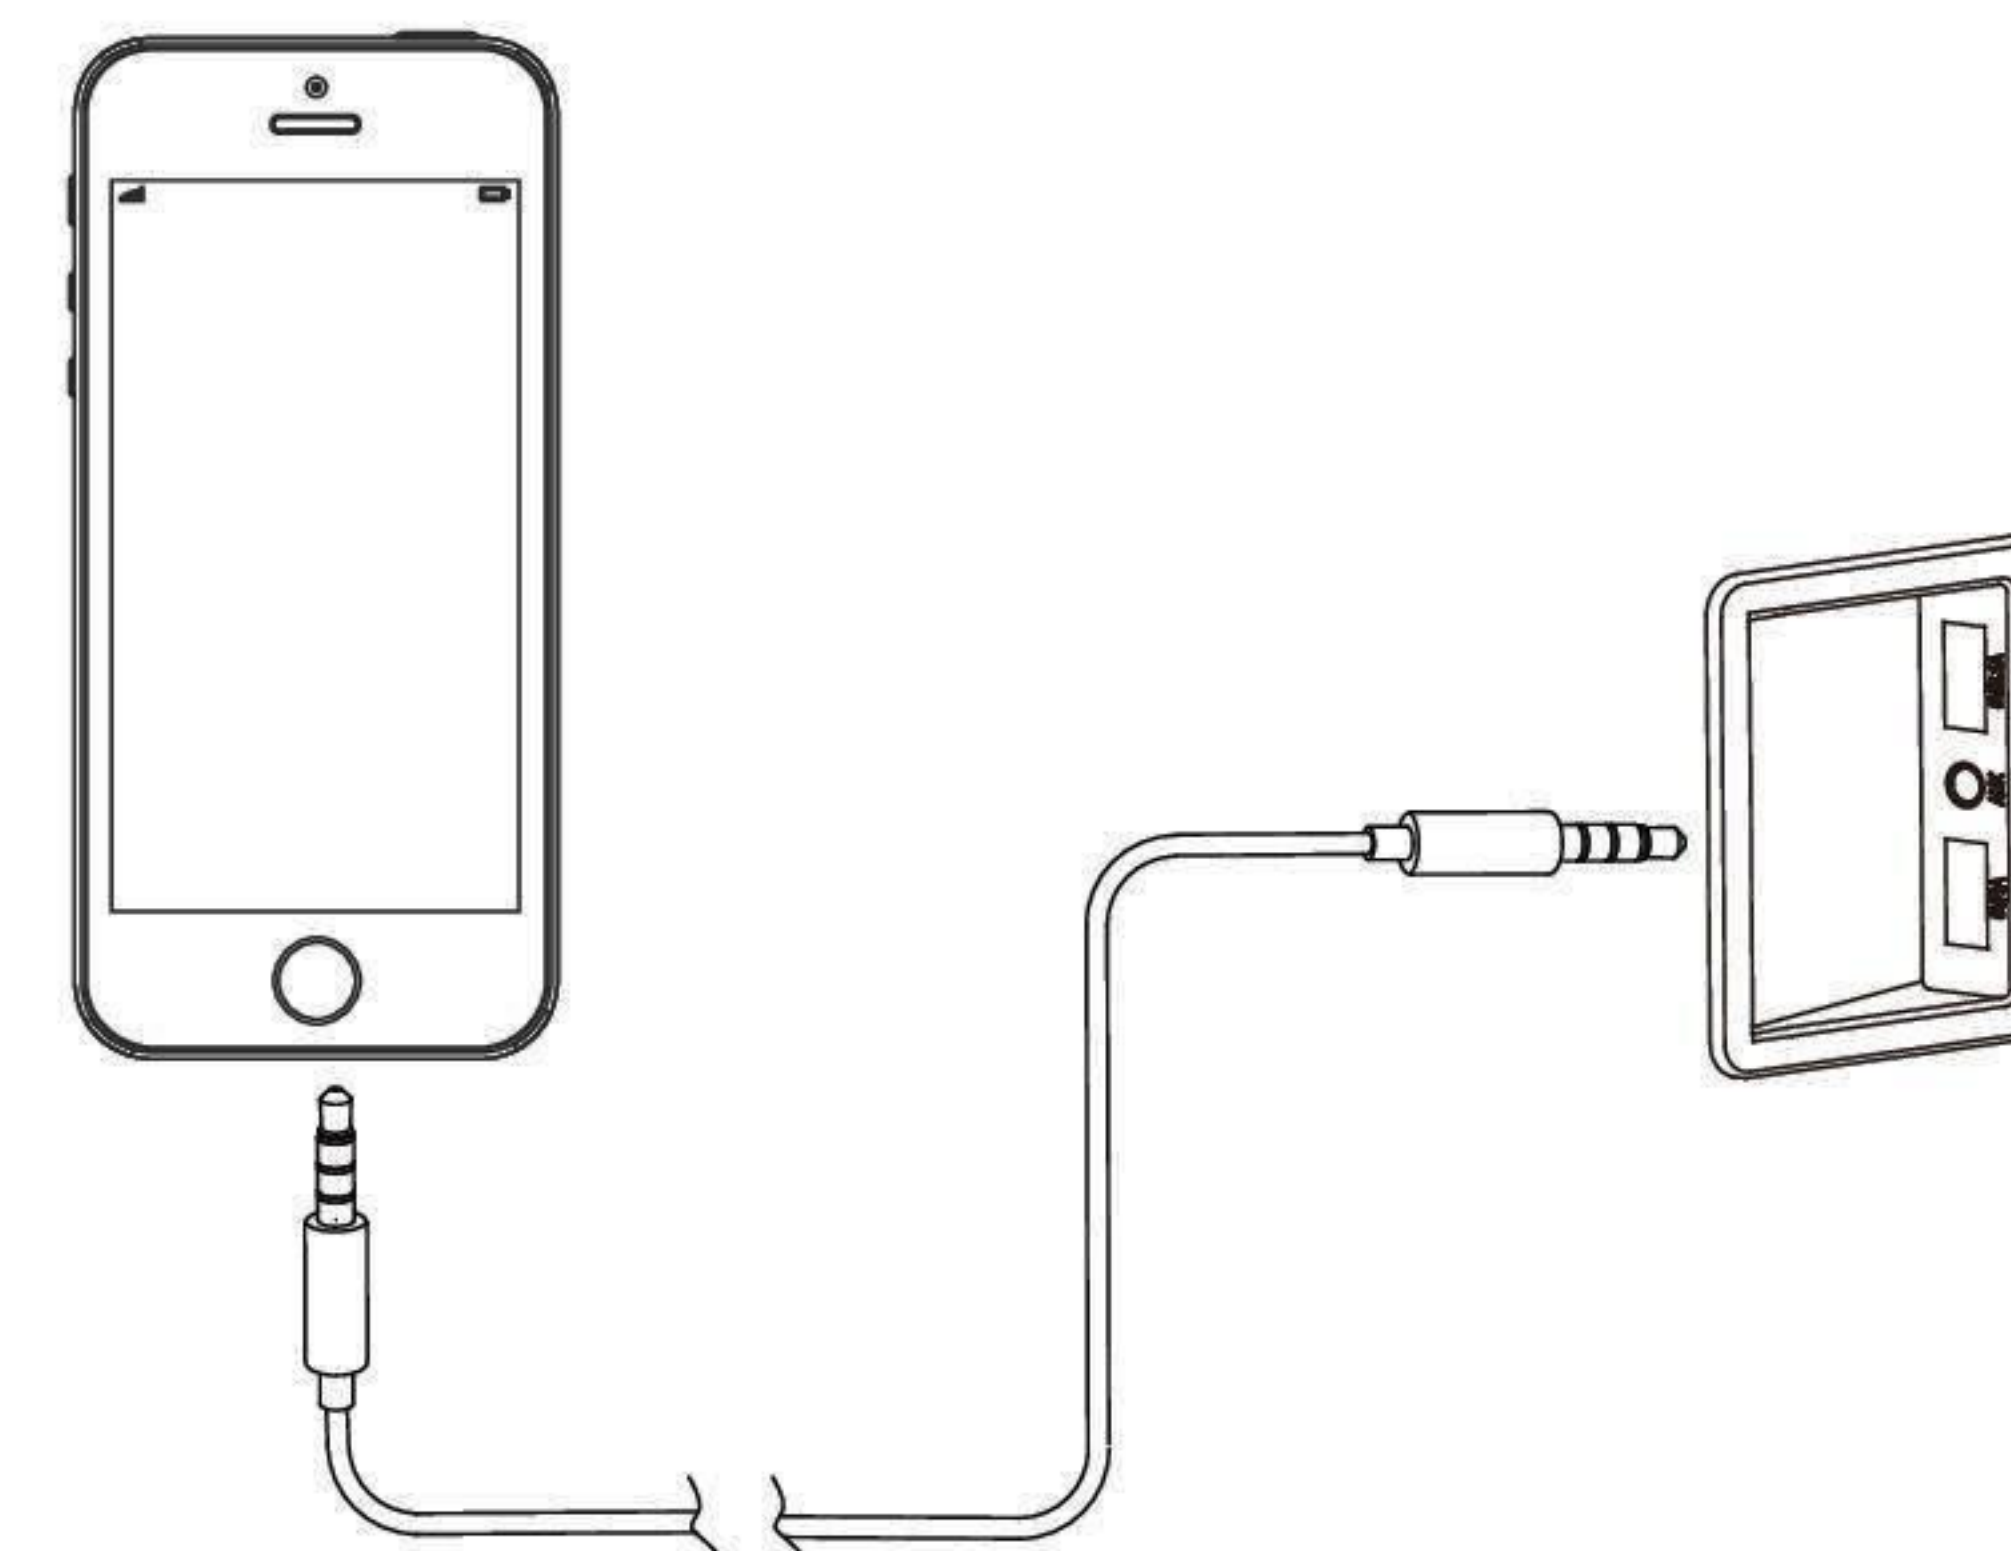

Turn on :

When turning off, keep pressing  for 3 seconds. When Buzzer alarms sound and white aperture flashes, it means the audio is on and the digital display shows (BL) And the buttons of the audio module are all activated.

Music Play


Touch button to cycle through the Bluetooth mode(BL), external source mode(LINE) and USB mode with each touch.

1. Select "Bluetooth Mode" and, LED will display "BL", while voice broadcast" Bluetooth Mode ", then open mobile phone's bluetooth device to search new devices. Please connect to device and input "0000" if the phone requires to "input the pairing code . (If mobile system version is new enough, pairing code is not needed). When it is prompted to be connected successfully, minibar's speaker is an external speaker of mobile. When the bluetooth data transmission is disconnected, the voice prompts "bluetooth has been disconnected".After 5 minutes, the bluetooth connection will be emptied to reset.When the previous mobile device come back to connectable range,the bluetooth will automatically connect.

Main function instructions of Smart mini bar




3.) Select "USD Mode", LED will display "USB", while voice broadcasts "USB Mode" and the music data in the USB disk inserted into the minibar will be read. When USB is pulled out, the voice broadcasts "USB is disconnected". USB music player supports MP3\WMA\APE\FLAC\WAV etc.

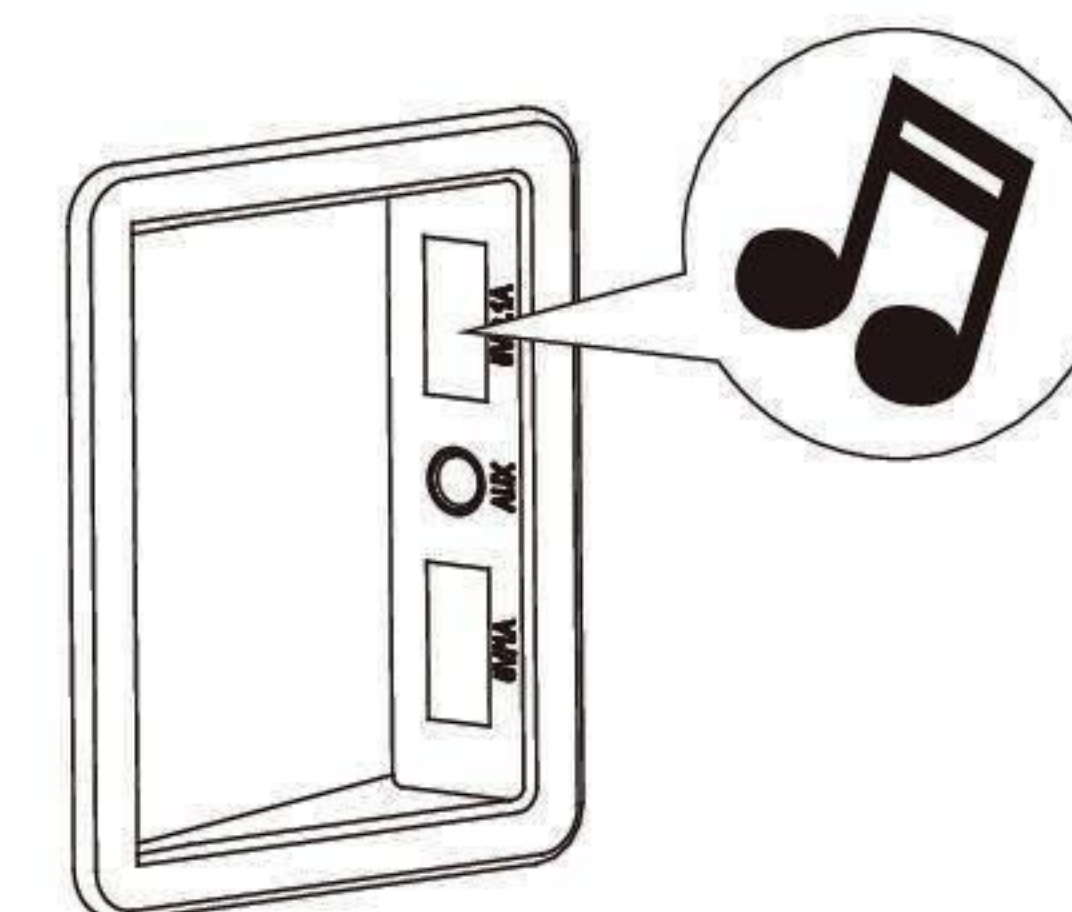Note: Only the top USB port can play music.



The Pause of Music

When music is playing, if you need to pause it, there are two ways:

- 1.) Through the external audio device directly to control pause or play.
- 2.) Keep pressing  for 3 seconds to unlock and touch  once to pause and the digital display shows "--". Then touch  the music will play and the digital display shows "-II".

The Switching of Music

Keep pressing  for 3 seconds to unlock, and touch the selection key to select a song. Each time of touching ">", the digital display shows "-I" for 2 seconds, which means next song will be played; Each time of touching "<", the digital display shows "I-" for 2 seconds, that means- previous music will be played.

Note 1: The digital display will return to original audio mode after 2 seconds, when finishing song selection.

Note 2: In AUX mode "<" and ">" button does not support music switching.

Volume Adjustment

There are 16 levels of volume. The default volume is No. 8 and each time of pressing "+", the volume increases one level; Each time of pressing "-" the volume decreases one level.


Note: The digital display will return to current audio mode after 2 seconds when finishing volume setting.


Audio Lock

The audio will enter lock state automatically if no operation state maintains more than 10 seconds. The aperture will be off after locking, but the digital display will always show the current audio mode.

In lock mode, all buttons are not available including Mode, Music Switching, Volume Adjustment, and Pause/Play.

Audio Close


Keep pressing  for 6 seconds. In the first 3 seconds, the aperture lights up. And at the 6th seconds, the digital display shows OFF(1 second) and the aperture goes out, then audio is off. There will be a prompt note when audio is off.

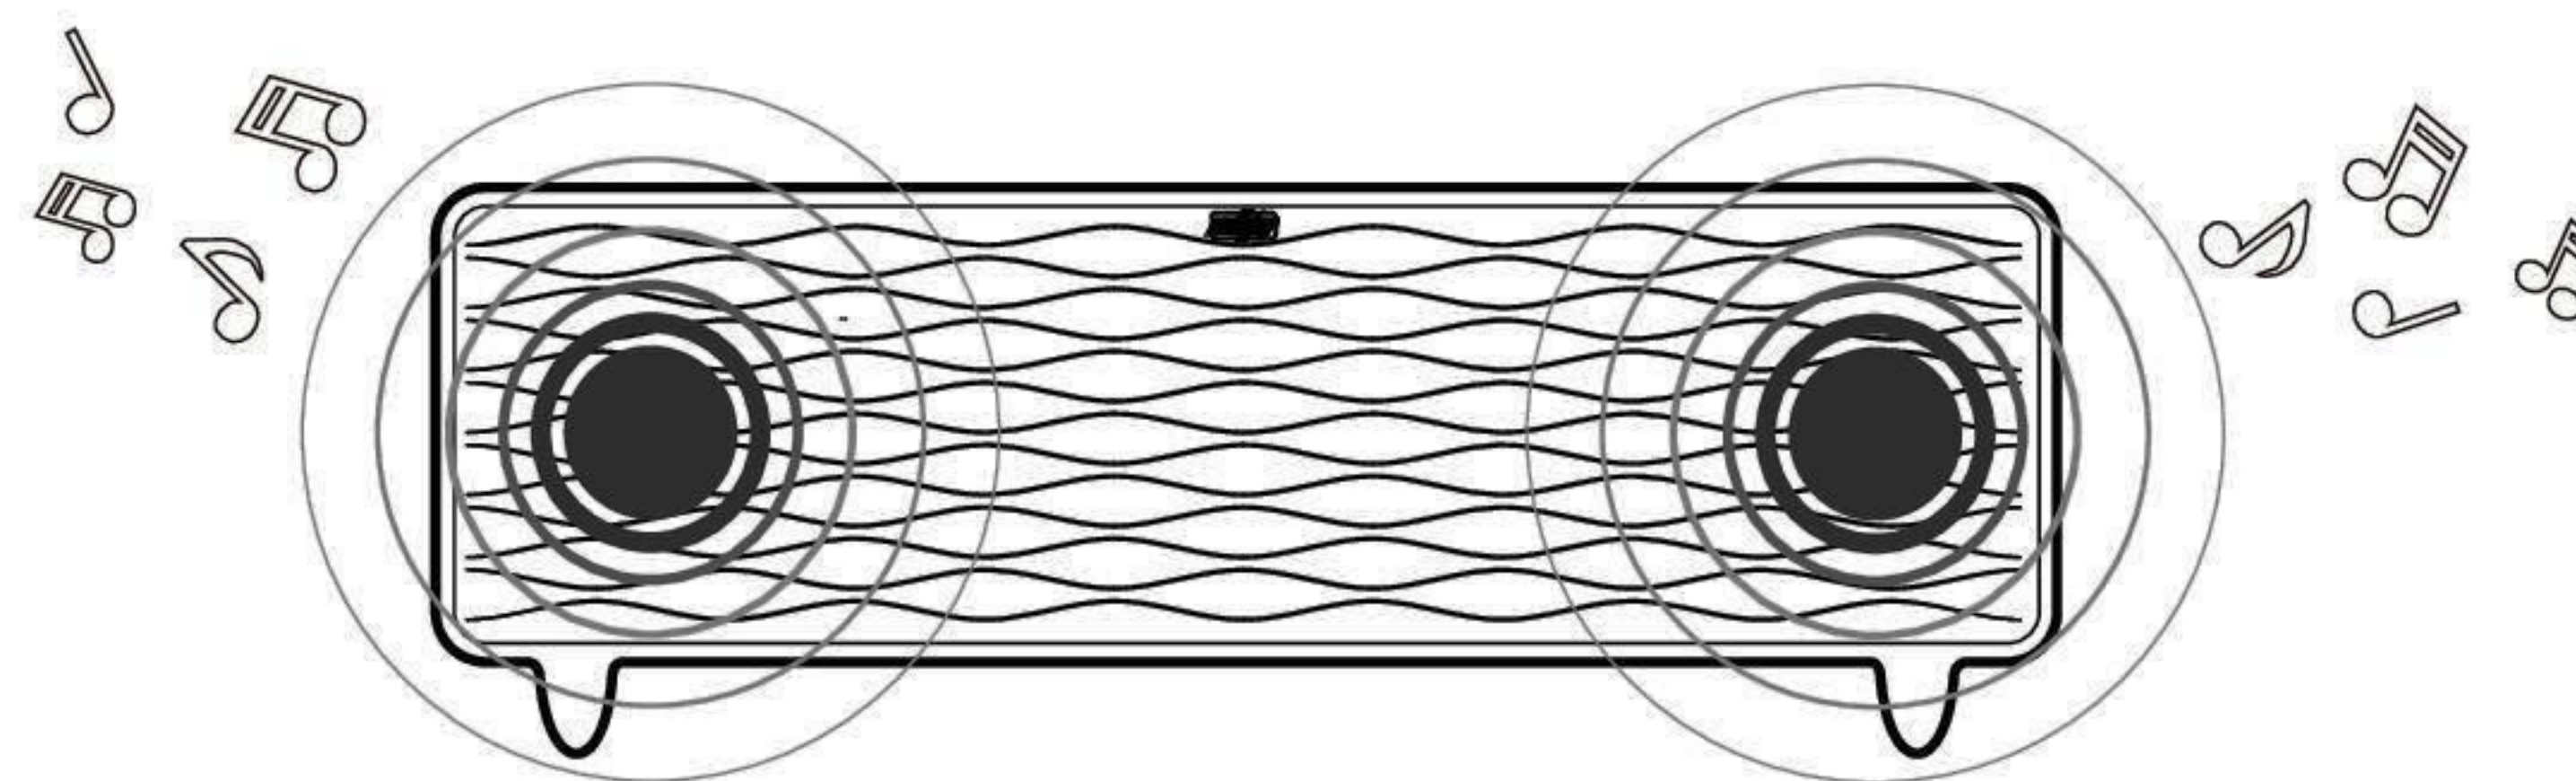

Instructions for the main function

USB charging

There are two USB interfaces. In the power-on state, please connect it with mobile phone/lpad and other devices by data cable, then you can recharge directly.

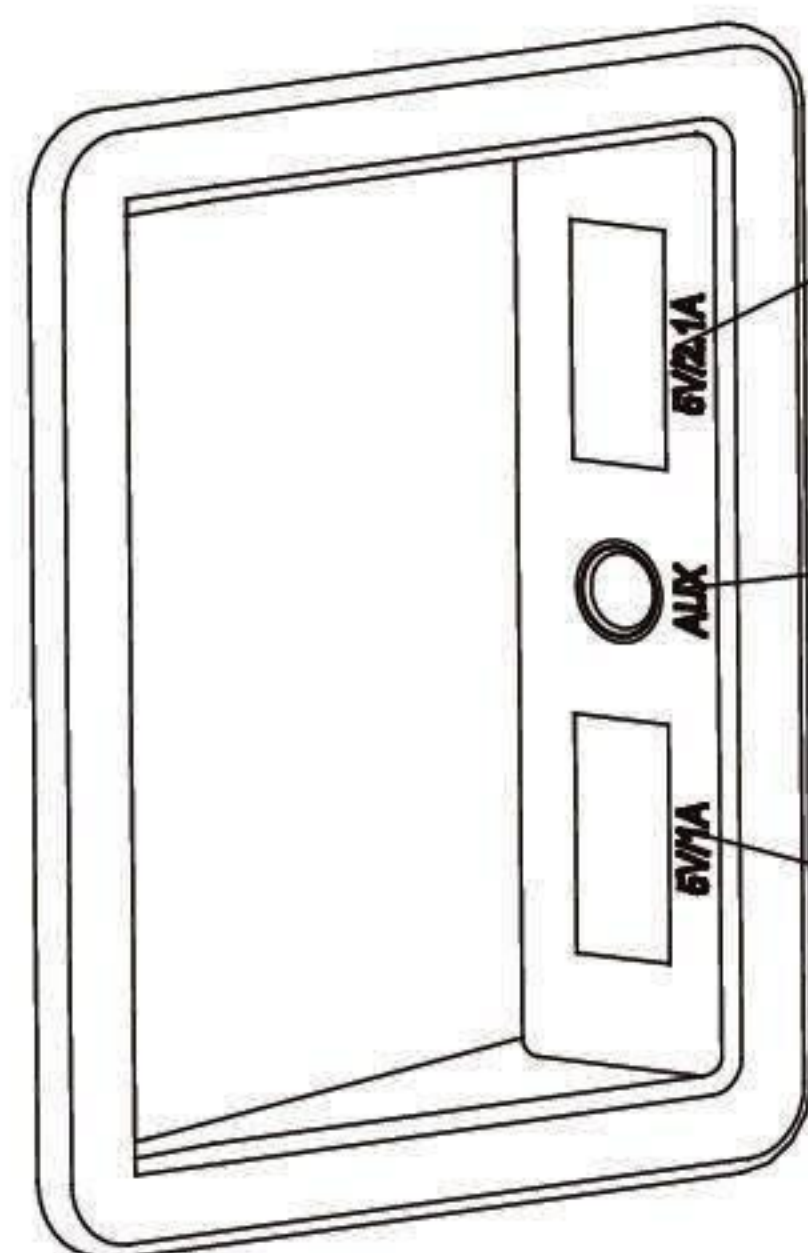

► USB 5V/2.1A Suitable for mobile devices to charge/USB music player




► AUX Suitable for mobile devices to charge



► 5V/1A Suitable for mobile devices to charge



Note : The two USB both can be used to charge. And the upper one can also read music data to play along with charging.

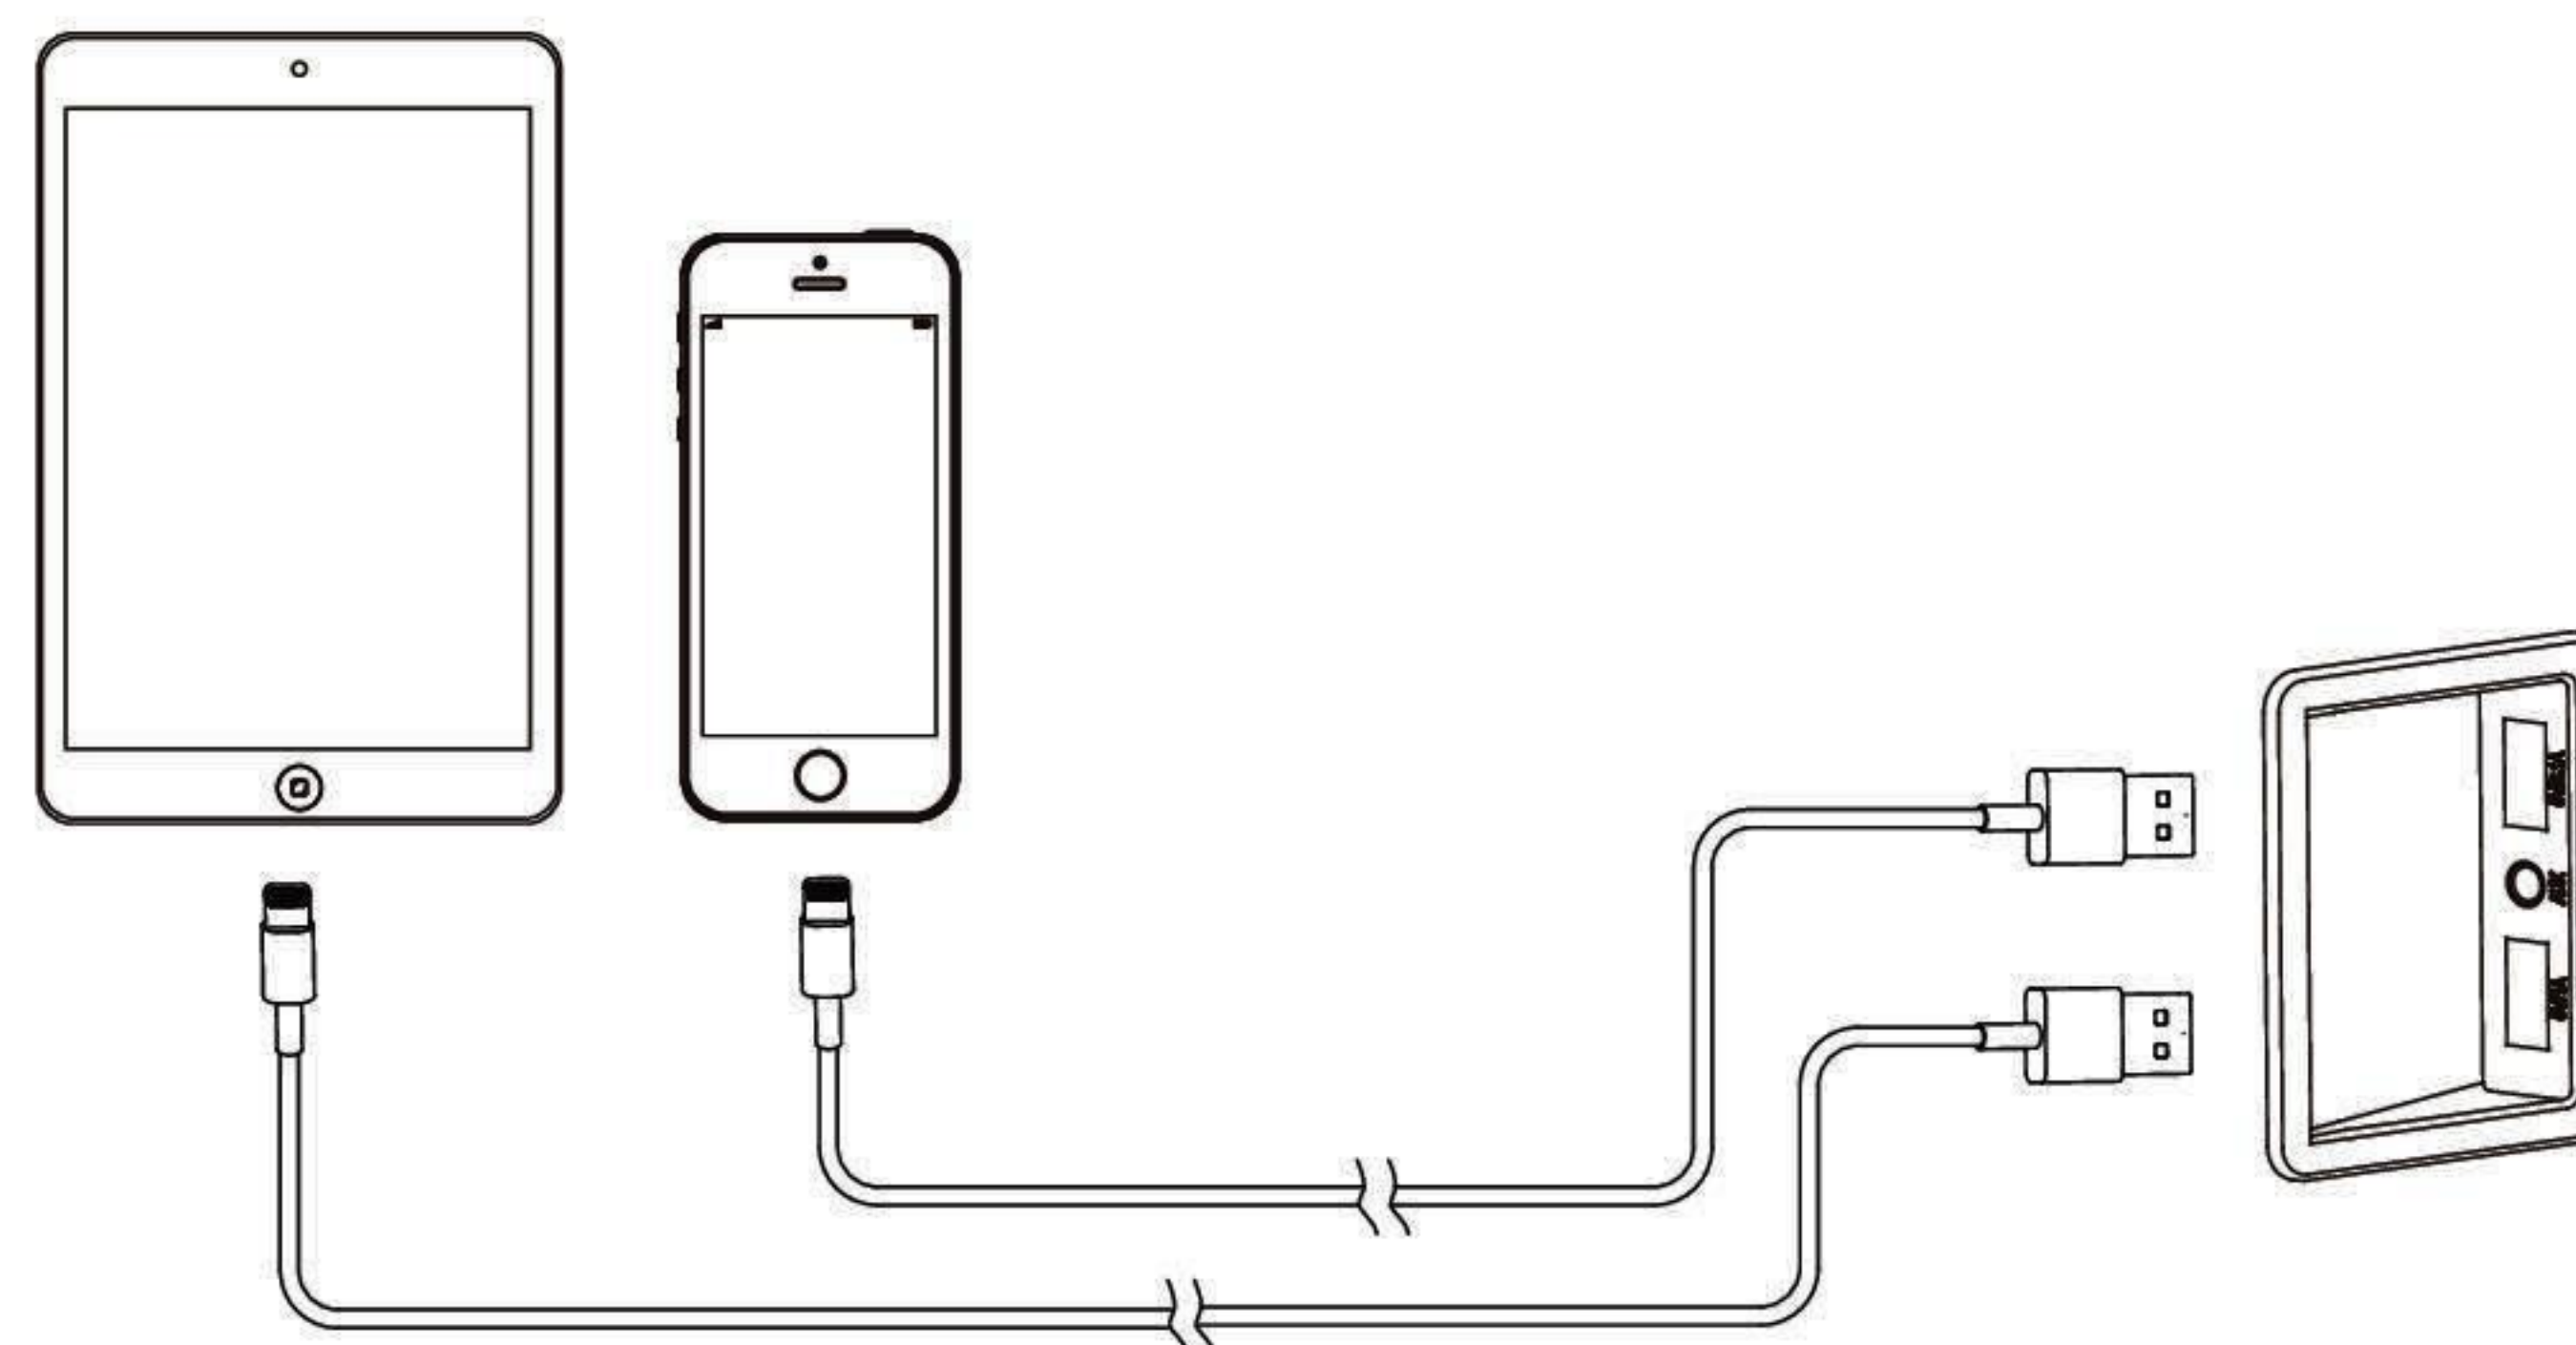

Notes for using Smart mini bar in energy-saving way

PRECAUTIONS

1. As much as possible to install minibar in the cool and well ventilated space. Please keep it far away from heat and avoid direct sunlight.

2. Try to minimize the time and frequency of door-opening.

3. Cover the food after picking it up or storing it.

4. Hot food or drink cannot be put into cold drawers before cooling.

5. Don't over-fill the drawers, and let the air flow.

6. In order to meet the food storage conditions, please as much as possible to set a higher temperature. Because lower temperature needs greater energy consumption.



Daily maintenance and repair of smart mini bar


Ice bar cleaning

There will be residue left inside cooling drawer. Please clean it regularly.

During cleaning, please pay attentions to the following things :

1. Before cleaning, please take off plug and cut off the power. And make sure your hand is dry.
2. Please don't pull power cord hardly.
3. Use soft clothes with neutral cleaning solvent to clean it and make it dry.
4. After cleaning, pleasemake sure power cord is dry and check if there is residue or water inside USB, AUX socket.

Remark: Door seal is easy to be dirty. Please clean it regularly to make sure the door is sealed well.

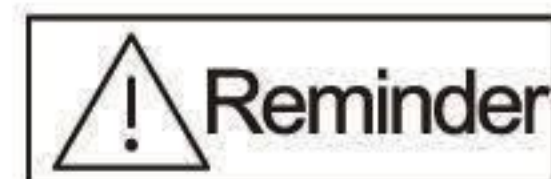

Reminder


Reminder Avoid electricity shock, don't spray water to mini bar. Clean ON/FF, USB socket and LED lighter with dry clothes.



Remark

Remark to protect mini bar, please don't use the following materials for cleaning:

1. Weak acidic or alkaline cleaning agents
2. Grinding powder catharsis materials
3. Benzene zinc sodium water, alcohol, various acid oil
4. Stiff brush, abrasive sponge brush, etc.
5. Hot water

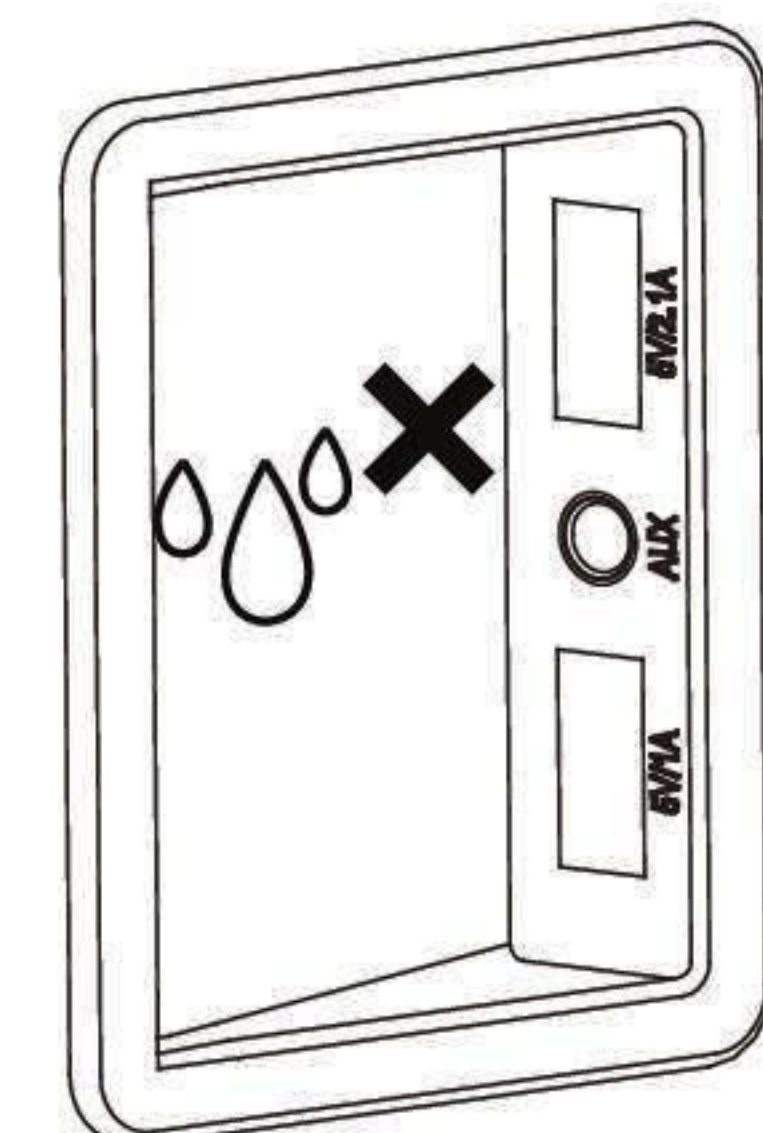

Mini bar is heavy. When moving it, please protect the floor and keep upside right. Don't shake mini bar.


Please don't use hot water to clean partition or YOYO pan.

When cleaning, please don't touch the parts inside mini bar to protect your hands.

Daily maintenance and repair of smart mini bar

Disassembly of drawers in cold storage room

Takeout YOYO pan, partition and food before removing drawers;
Pull big drawer to the end, take the whole drawer upside and back forwards, and take the drawer out;
Clean drawer and YOYO pan with soft clothes.

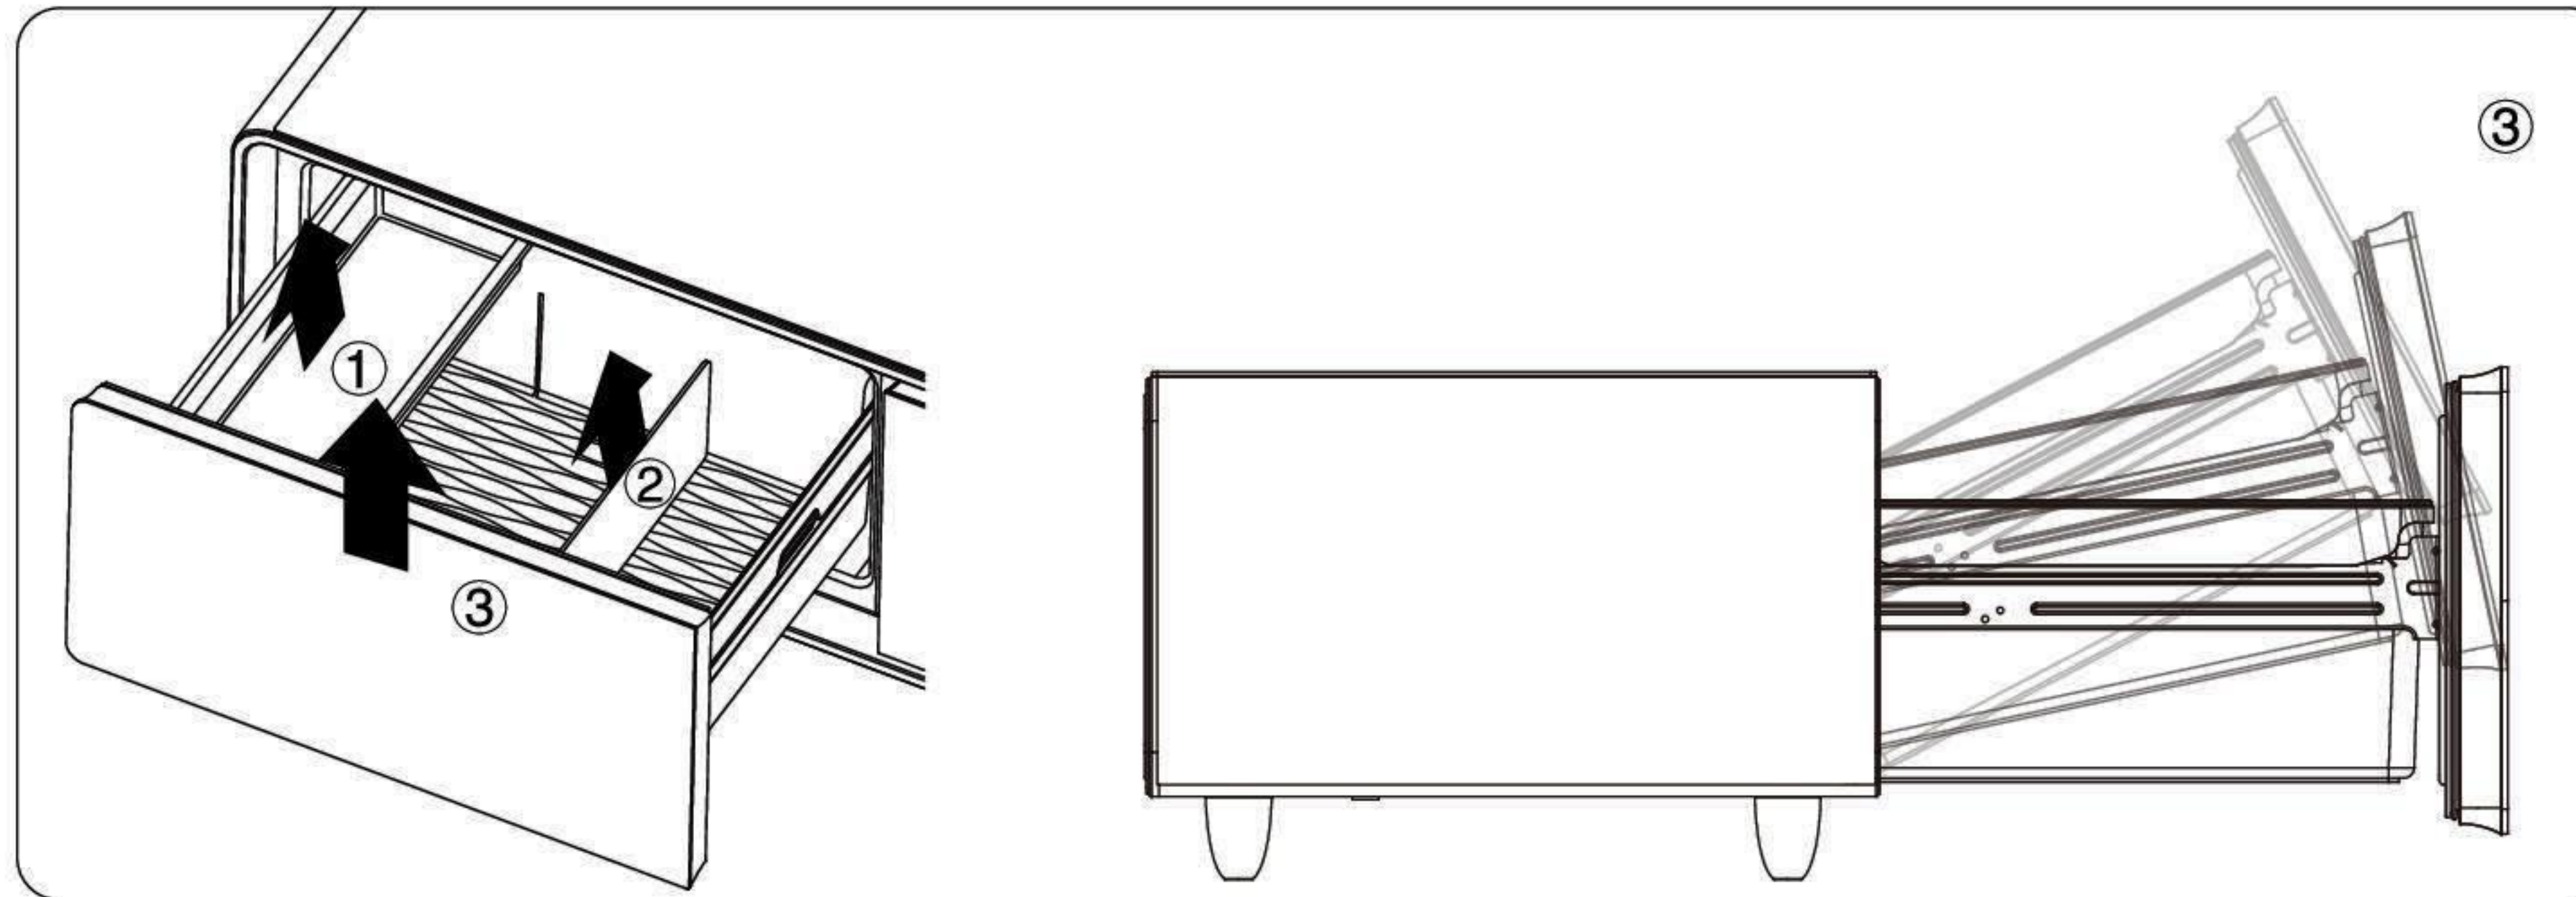

Clean surface and door seal:

First, use soft clothes with neutral detergent and then make the surface dry.

Door seal is very easy to be dirty, aged and damaged, which will cause the declining refrigerating effect so. Keep it clean.

Please only use water to clean and make it dry. Don't clean metal net too hard and make it deformed. Don't let clean water flow into the mini bar to avoid short circuit. When cleaning USB area, please don't let clean water flow inside and avoid short circuit.

Defrost

Cooling area defrosts automatically and condensed water will go inside water tray. Water will evaporate by compressor heat.

Safety checking after cleaning:

Whether the power wire is connected to minibar socket or not.

Whether the power cord is damaged or not.

Whether the power wire plug is overheated or not.

Whether there is liquid or other unsuitable material inside USB, AUX socket.



Ice bar handling and outage

Mini bar handling

1. Switch off and take off out the plug
2. Take out all food.
3. Fix YOYO pan and other moveable parts with tape.
4. Close drawer door and fix it with tape.



Please don't put mini bar upside down under any circumstance.
During the move, please keep max angle at 45 degree in order to avoid cooling system problem.

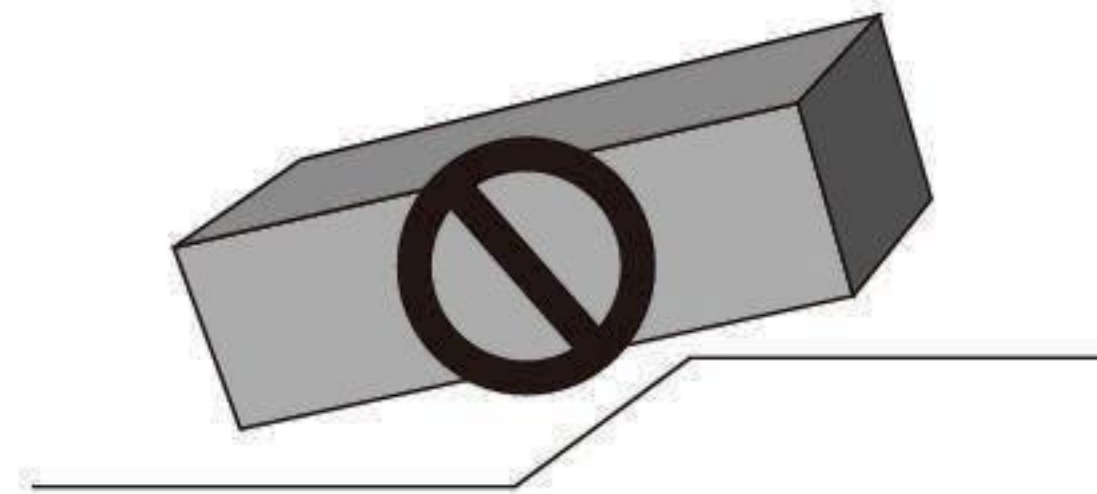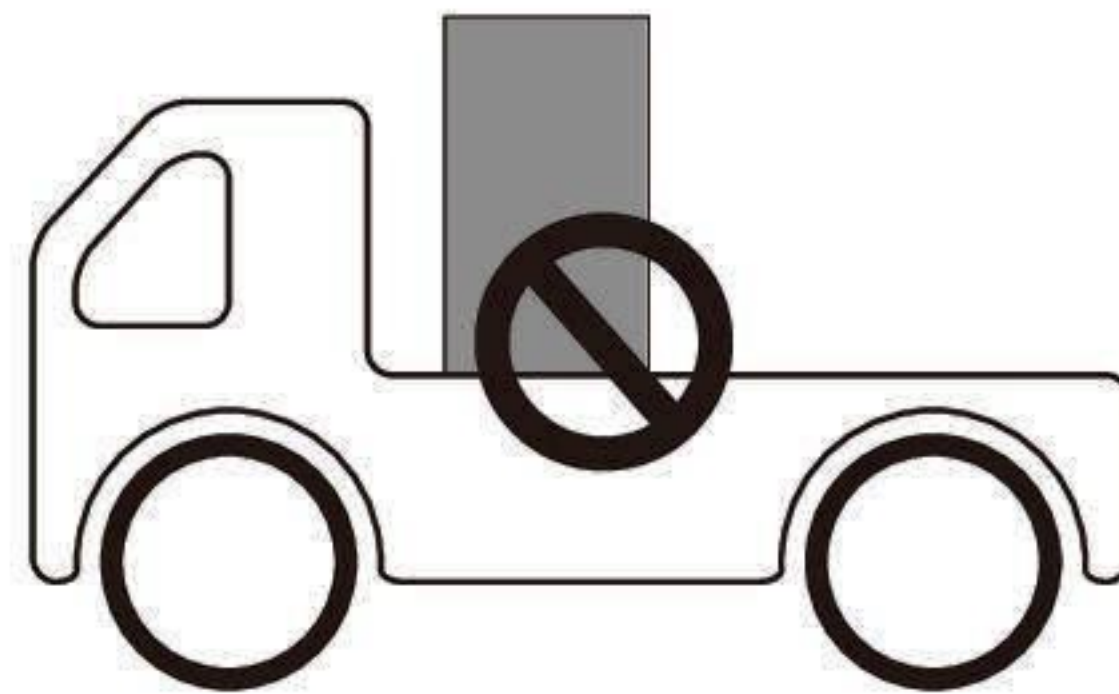

Mini bar outage

Power failure

If encountering power failure, Temperature inside will not be effected within 1-2 hours even in summer.
When encountering power failure, please put no more food inside cooling area. If you can know it in advance, please put some ice in cooling area.



Temperature inside cooling area goes up caused by power failure or other reasons will affect food quality.

Stopping Mini bar

If stop using mini bar for a long time, you'd better pull off plug and cut power and clean mini bar.
Stop mini bar, you'd better open drawer door to avoid smell.



Cut power, please keep five minutes if you need to turn it on again. Please don't stop mini bar very often.

Out for holiday

If you are out for holiday for a long time, please cut off the power, and clean inside cooling area to avoid smell.

1. Cut power 2. Take food out. 3. Clean cooling area.

Non fault phenomena

If fault information “E” is displayed on control board. You should ask for professional help. Please check as the ways below. If it does not work, please contact customer service center.

Non Fault Phenomenon, Please Be Assured.


1. There are dews on the casing: please remove with clothes. If the humidity is high, such as raining season, it is normal.
2. There is water flow sound: It is refrigerant flowing inside and it is normal.
3. Low voltage, compress or can't start: Please install voltage regulator with more than 500W.
4. Long time for turning on: In summer, the surrounding temperature is high. It is normal.
5. Button can't work: Please check if the unit is locked.
6. There is op sound: It is caused by heat bilges, cold shrink with internal casing and pipe.
7. There is vibration: It is compressor working sound. Also If the mini bar is not placed flat, please replace it.
8. Can't connect to Bluetooth: Please check if your audio source supports A2DP. If it does , please switch to this mode.
9. No sound for music player: Please check if the sound volume is suitable.
10. USB can't charge: check if the wire is OK or if the mini bar is turned on.
11. There is water inside cooling drawer, please check if the water drain pipe is blocked.
12. No LED display: check if there is power problem or if the fuse is normal.
13. Bee sound alarm and flashing: alarming character . Check if the door is open for a long time.
14. Compressor works for a long time without stop: Check if setting temperature is too low. And then check if the door is open for a long time, or the food is too hot, or if mini bar is under sunshine, or if the heat dissipation is OK.

Analysis and elimination of simple faults

Fault	Reason	Solution
Compressor can't work properly but power light is on	Power supply is less than 187V	Turn off at once and adjust power supply to the range of 187V-242V, If it doesn't work not OK, please install more than 2KVAAC Voltage regulator.
Compressor starts but stops in one minute and starts again	Power supply is more than 242V	
Compressor works for a long time but there is no frost	Refrigerant Leakage	Ask professionals for help
	Pipe blocked	Ask professionals for help
There is frost but compressor doesn't stop	Too much frost on evaporator	Defrost
	Open the door too often	Lessen opening time
	Too much food inside cooling area	Take out some food
	Heating dissipation is not good	Let airflow very well
	Temp, sensor can't work properly Ask	Ask professionals for help
Mini bar doesn't work and can't refrigerate	Fuse faulty	Change fuse
	Main board faulty	Ask professionals for help
Too much noise	Cooling drawer not flat	Adjust
	Some part loosing	Tighten loosing parts
	Pipe touch each other	Split pipes touched
Cooling but feeling electricity when touching the case; When using electro probe to test, electro probe is lighting	Electro probe wet	Check ground wire and fix it again

Technical parameters and packing list

Technical sheet

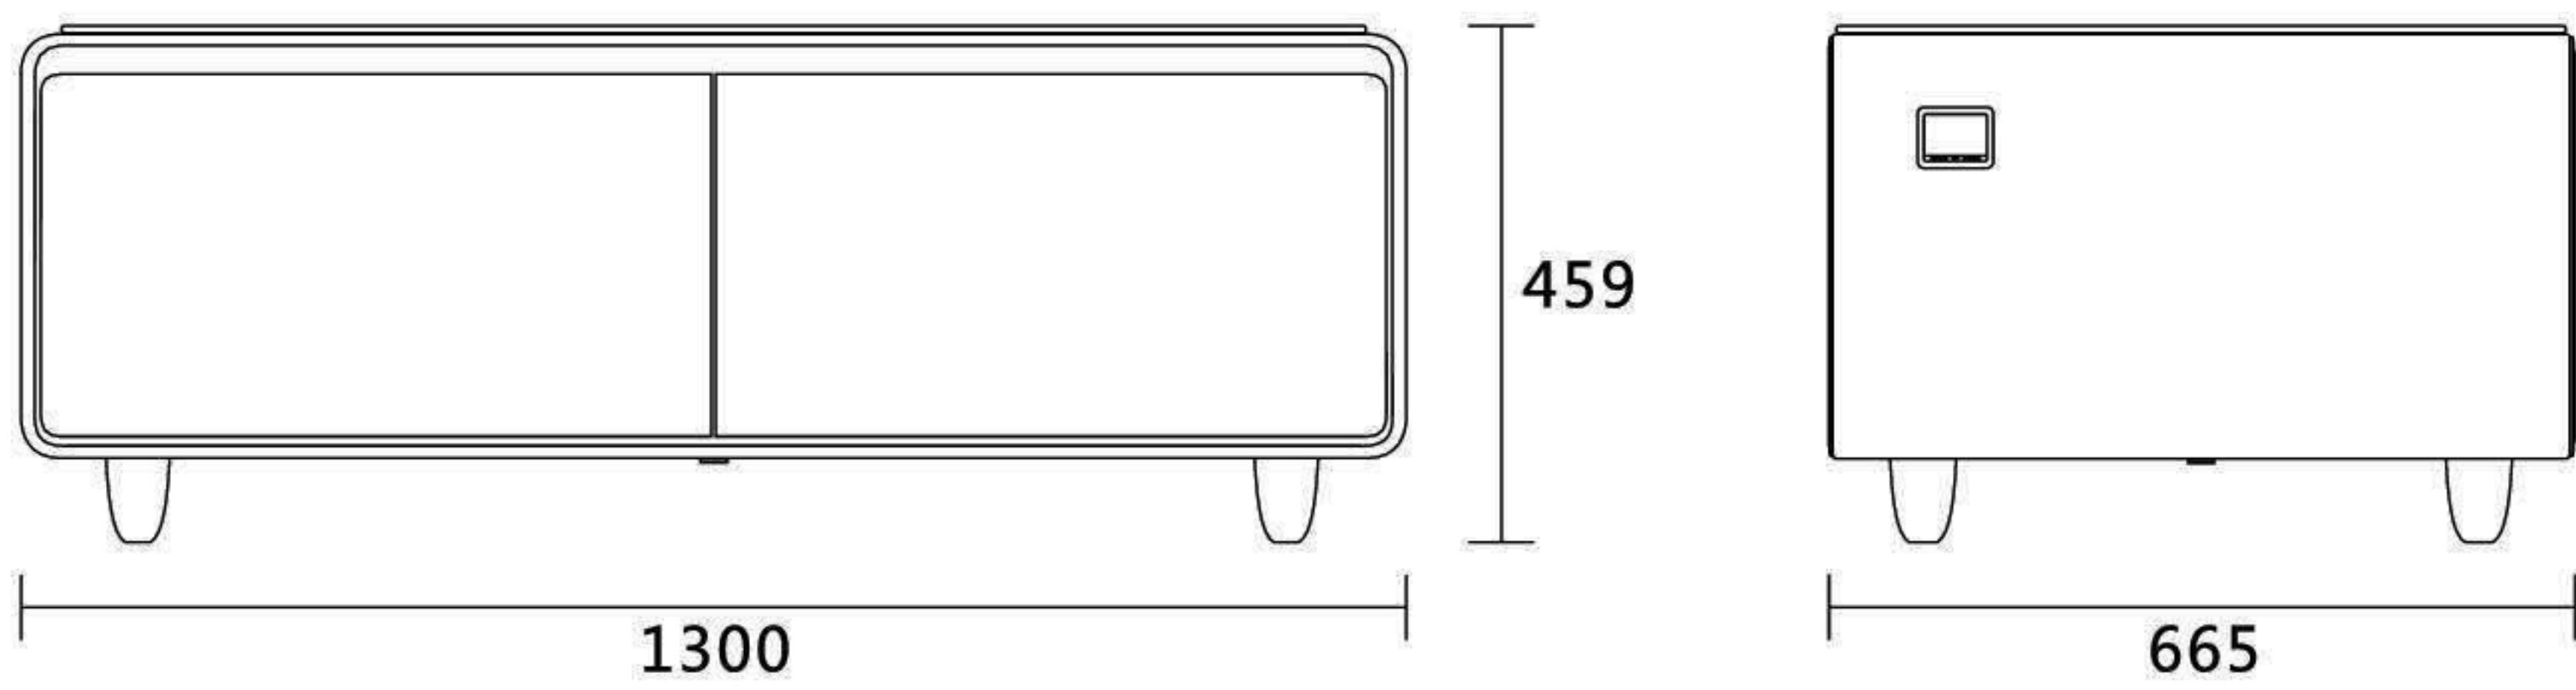

Power Consumption	0.41kW • h/24h	Temp Control	Electronic	Operation control	LED touch screen
Noise	36db	Refri. Mode	Direct cooling	Product size	1300*665*459
Net Weight	58kg	Cooler Volume	2*65=130L	Packing size	1357*732*503
Gross Weight	65kg				

Note: parameters like the values input power and power consumption are measured under a given working condition; and the parameters will differ greatly under different environmental conditions, please use them at ease. The value of power consumption indicated in the table is measured value tested as per the international standard.

Packing list

Name	smart mini bar	Drawer	Partition	Mover	Power Cord	Manual	Slot	Audio line
Quantity	1	2	4	2	1	1	1	1

Important Note

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product, or on the documents accompanying the product, the Crossed Out Wheelie Bin, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product.



We continuously try to improve our products for the benefit of our customers. For this reason we reserve the right to make changes to any product at any time, without notice