


MEASURING for a STOCK Size Basement Window Glass COVER which attaches directly to the GLASS




Note: (There is always some glass exposure) how much exposure depends on the standard size cover you select for your actual window size . If you have a protruding inside lock as in Fig. 1 you need to measure to top of lock.

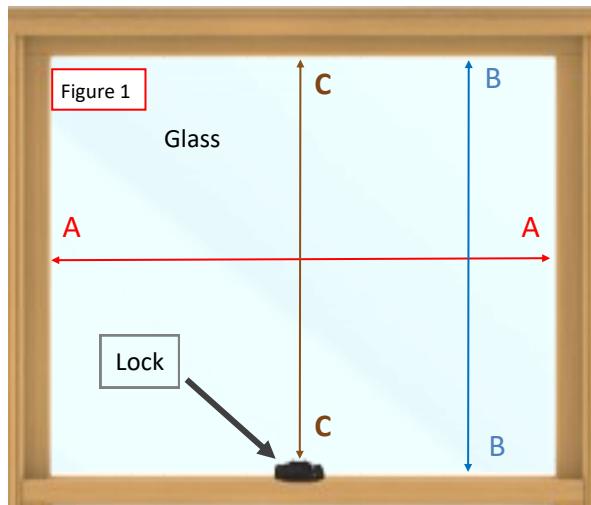

Basement Window with an inside lock

Only measure
the glass
area

Left to Right
Top to Bottom or
To Top of LOCK

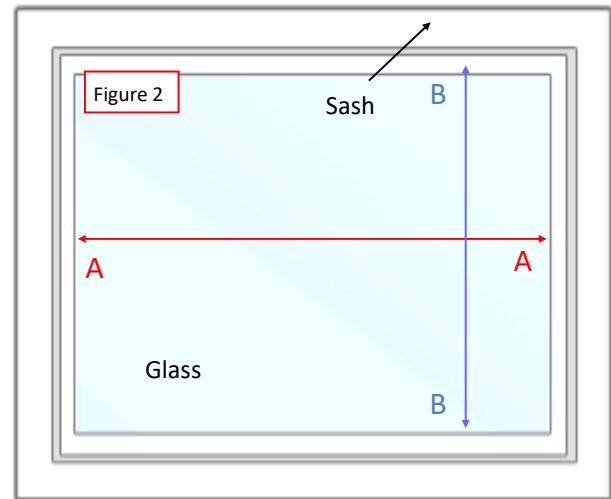

Basement Window with NO inside lock

SHAADS™ covers will attach and sit right on the glass - MEASURE:

Left to Right "A" _____

Top to Bottom "B" _____

Latch inside window Yes or No — Top of glass to top of latch "C" _____

"Basement Window with an inside lock Standard size covers my not fit."

You will need to select a smaller cover with some glass exposure or from our custom sizes.

OUR STOCK STANDARD SIZES ("A" - "B" - "C")

In standard sizes what size can I use for my window?

If your window glass measures 27 X 9 1/2 A - will fit "A" being the tightest fit.

(Actual size of Stock COVER "A" - 26 7/8 X 9 3/16)

If your window glass measures 27 X 13 1/2 A - B - will fit "B" being the tightest fit.

(Actual size of Stock COVER "B" - 26 7/8 X 13 3/16)

If your window glass measures 27 X 17 1/2 A - B - C - will fit "C" being the tightest fit.

(Actual size of Stock COVER "C" - 26 7/8 X 17 3/16)

**** the smaller the size cover on a larger basement window will leave more uncovered glassed area ****