



## OPERATIONS MANUAL - DJAP-B890BT


### Professional ABS Molded Loudspeaker - 8"

#### Introduction:

Congratulations on your purchase of this amplified loudspeaker enclosure, this amplified loudspeaker enclosure includes the very latest technology in lightweight ABS design. The trapezoidal design was used in order to achieve a more precise and accurate sound furthermore it increases the sound definition on vocal frequencies. This state of the art amplified loudspeaker enclosure will provide years of enjoyment.

#### Features:

- Wireless Music Stream
- Steel basket woofer
- High temperature voice coil
- High wattage class A/B amplifier
- Custom (Ap) stamped metal grill
- Strong sturdy handle for ease of carrying
- Stand mounting socket
- Auxiliary RCA Line Output
- Rubber Feet
- Memory Stick
- Microphone input

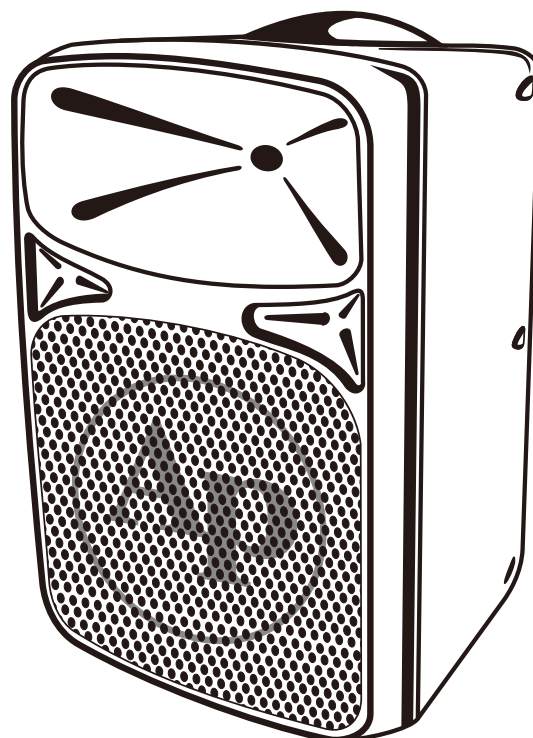


#### Cautions:

1. All operating instructions should be read before using this equipment.
2. To reduce the risk of electric shock, do not open the unit. There are NO REPLACEABLE PARTS INSIDE. Please refer servicing to a qualified service technician.
3. Do not expose this unit to direct sunlight or to a heat source such as a radiator or stove.
4. This unit should be cleaned only with a damp cloth. Avoid solvents or other cleaning detergents.
5. When moving this equipment, it should be placed in its original carton and packaging. This will reduce the risk of damage during transit.
6. DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.
7. DO NOT USE ANY SPRAY CLEANER OR LUBRICANT ON ANY CONTROLS OR SWITCHES.
8. Make sure ALL of your VOLUME, LEVEL and GAIN controls are in the low position, the unit must be completely in off position before making a connection to your amplified loudspeaker enclosure.

**Disregarding any of the above will void your warranty!!!!**

## Functions:

1. **LCD Display:** Displays the current status and English file names.
2. **IR Receiving Indicator/ Play Indicator.**
3. Memory Stick Port
4. **MIC Volume controller**
5. **MIC Signal (Imbalanced signal) Input Channel**
6. **LINE OUT:** (Imbalanced signal) RCA channel LINE OUTPUT.
7. **LINE IN:** RCA connector input Socket.
8. **LINE LEVEL:** Allow you to adjust LINE level to be sent to the master connection of high level sound sources.
9. **LED:** 1. Turning off the Power Switch and connecting to 115V/230V AC power, Battery and AC Power Switch LED illuminates. Then, the battery is under the charging state.  
2. Connecting to 115V/230V AC power and turning on Power Switch, all the LED will illuminate.  
3. Disconnecting 115V/230V AC power and turning on Power Switch, the battery LED will illuminate.
10. **BATTERY DISPLAY LIGHT:** When light is off, please charge it.
11. **Voltage Selector:** Changes AC Power between 115V and 230V.
12. **Power Supply Input Connector:** Use with power cord (For the power with voltage switch, before using it, please make sure that correspondent (11) arrow voltage is in accordance with the network voltage).
13. **POWER SWITCH:** Please make sure that all the volume pots are in lowest position when you want to turn on this unit.
14. **MP3 LEVEL:** Allow you to adjust MP3 level to be sent to the master connection of high level sound sources.
15. **12V DIRECT CURRENT POWER CONNECTOR.**  
12V direct current power supply connection.
16. **Volume:** Controlling the output power of speaker box.
17. **BASS controller of music effect**
18. **TREBLE controller of music effect**

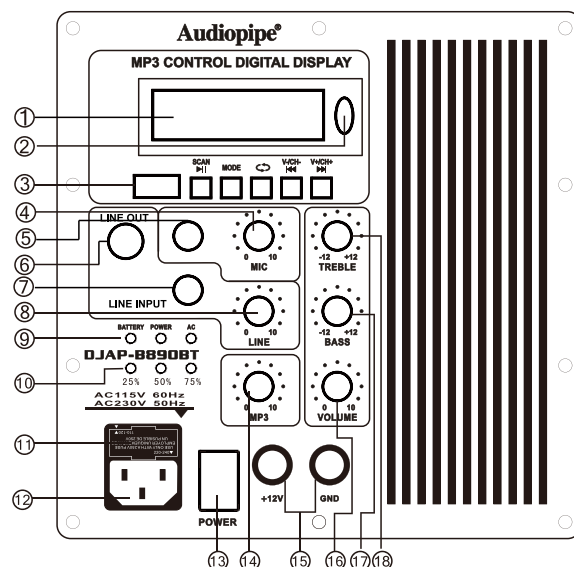

**MODE Button (MODE):** Press to alternate among radio, Memory Stick, wireless mode and Line Input Conversion.

**Down Option Button (◀◀ /VOL-):** To select a next song or a channel; To turn down MP3 volume.

**Up Option Button (▶▶ /VOL+):** To select a previous song or a channel; To turn up MP3 volume.

**FOLDER/REPEAT Button(↻):** Pressing this button for selection from single repeat, repeat all and random play, and Conversion for FOLDER internal recycle player.

**Play/Pause Function Buttons (▶|| /SCAN):**

- a. A short press for Play/Pause;
- b. While in FM mode, pressing to activate the automatic scan, the strongest stations will be memorized.

## Connections:

Make sure all of your equipment is completely OFF and lower ALL VOLUME, LEVEL & GAIN controls before connecting the speaker.

For this unit you can connect a mixer or microphone directly into your speaker, To connect a microphone use an XLR connector to connect to the **MIC(5)** input.

1. To connect a CD player, turntable or mixer use an RCA connector to connect to the **LINE IN(7)** input, if connecting a powered mixer use the mixers line level signals only.

2. Turn on your mixer/microphones or other signal source, then turn on your unit, the **LED(9)** will be lit.

Now you can adjust your volume controls to a reasonable level.