

Glazer Fires *Featuring OMNIGLIDE®*

This product is only suitable for well insulated spaces or occasional use



Installation & Precautions

Warning: Due to the weight of the fireplace, you should be mindful that during the installation there is a high risk of falling forwards, we recommend two persons throughout fitting.

Carefully remove the fire from the packaging, checking that neither the heater nor the power cable has been damaged during transport. Do not operate the fire if either is damaged. Please bear in mind the weight of the fire before removal from the packaging and installation. Consider if help is required. Any alteration to the power cable should only be done by a qualified electrician and to the Flamerite Fires guidelines stated below. Your fire is guaranteed for one year from the date of purchase. In the unlikely event of a breakdown you have access to our customer services team, simply call **01543 251122** during office hours, 9am – 5pm or e-mail on info@flameritefires.com The accessories are found in a box that is packed at the side of the fire.

INSTALLATION

- 1. Where a chimney is not blocked off completely it will cause the heater to cut out during use. ONLY if installing into a chimney where you are not sure that you have cut off 100% of the drawn air then we recommend covering the slots in the rear and at either side.**

Automatic safety cut out: The heater is fitted with an automatic cut out to prevent any damage due to overheating. The element will continually and automatically cut out if the airflow is obstructed. **Never** cover the air outlets. To reset, switch the fire off, disconnect from the mains supply, remove the cause of the overheating, check the micro switches and allow to cool for a suitable period then switch the fire back on. **Caution:** In order to avoid a hazard due to inadvertent resetting of the thermal cut out, the appliance must not be supplied through an external switching device, such as a timer, or connected to circuit regularly switched on and off by a utility.

- 2. Insert the plug tightly into its IEC connector underneath the fire if not already done so. If the removal of the plug is absolutely necessary for installation, cut off in an area within 100mm only of the plug itself. Any further will affect your warranty.**

Electrical connections. Your appliance comes fitted with a plug that incorporates a 13A fuse. The replacement fuses must be 13A and ASTA approved. If the fuse cover is lost the plug must not be used until a replacement cover, of the same colour, is obtained from an electrical retailer. The appliance is fitted with a moulded plug if it is necessary cut off the plug, for any reason, it must be discarded immediately with the fuse removed. Under no circumstances should any attempt be made to reuse the plug, do not insert into any 13A socket as this could cause a hazard. If the mains cable is damaged it must be replaced by the manufacturer or an authorised technical service centre.

WARNING THIS APPLIANCE MUST BE EARTHED

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code.

Green and yellow:	EARTH
Blue:	NEUTRAL
Red:	LIVE


As the colours of the wires in the mains lead of this appliance may not correspond with the colour markings in your plug proceed as follows: -

- The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E, or coloured green or coloured green and yellow, or marked with the earth symbol
- The wire which is coloured blue must be connected to the terminal in the plug which is marked with the letter N, or coloured black.
- The wire which is coloured brown must be connected to the terminal in the plug which is marked with the letter L, or coloured red.


Fitting options: The Glazer fire can be fitted as part of a freestanding fireplace or wall mounted. If freestanding the fire can simply be sat on its base as long as it is secured into place as part of the overall fireplace. If fitting into a Flamerite modular suite separate instructions will be provided, however if the suite is wall mounted the below instructions will need to be followed first.

Wall mounting fixing kit: 7 x M10 x 50mm Rawl plugs. 7 x 60mm screws. 2 x M6 x 25mm bolts. 2 x M6 washers. 4 x 13mm screws (fitted)


Using as Wall Mounted: The fire comes with two hanging rails, top and bottom to enable fixing the Glazer to the wall. Although your preference, we recommend no lower than 400mm from the bottom of the fire opening to the floor so the bottom bracket should be fixed 290mm or above from the floor. Mark the holes, drill and fit the rawl plugs using an M10 bit. Using the 60mm screws fix the bracket to the wall.

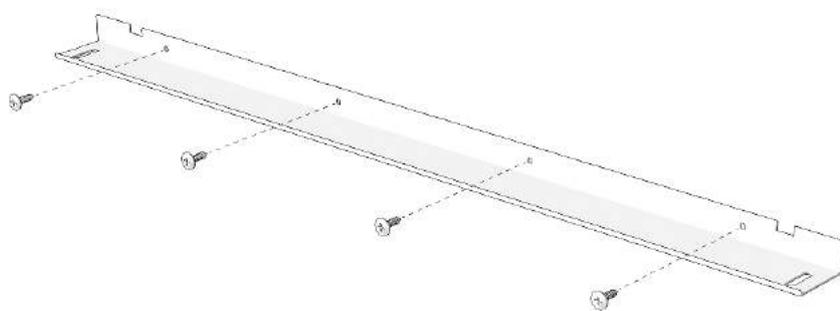

Position the fire on top of the bottom bracket making sure the corner bolts fit through the slots either side and can screw into the underside of the fire. With the top bracket attached to the fire, mark across its length and into the slots above each hole on the back edge. Remove the fire, remove the top bracket and 13mm screws from the fire and mark the holes on the wall, drill and fit the rawl plugs using an M10 bit. Using the 60mm screws fix the bracket to the wall.

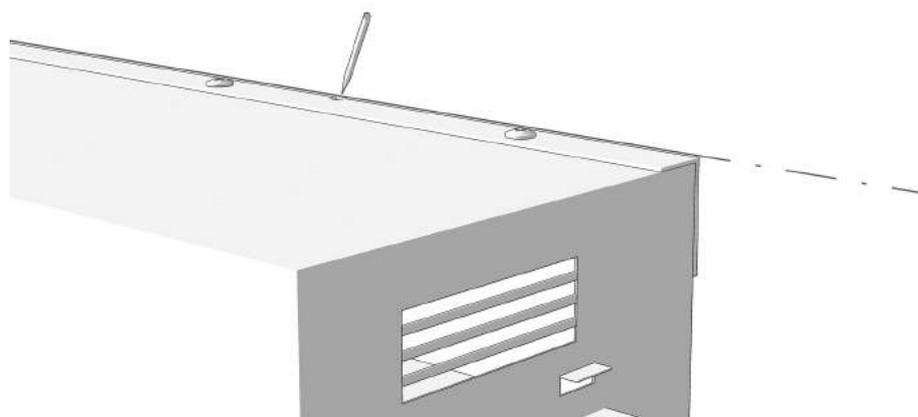


Slide the fire into the channel created by the top and bottom brackets. Screw the top bracket back onto the fire with the 13mm self-tappers and bolt each corner of the bottom bracket through the slots either side into the fire using the M6 bolts and washer supplied. At this point you will be able to level the fire accordingly at the base by loosening and tightening the bottom bolts.

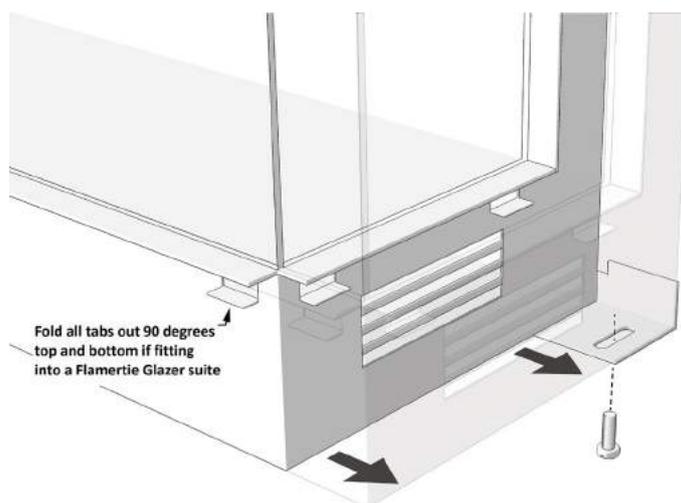

Fitting the Glass:


A: Push the side glass back towards the rear of the case

B & C: You will notice there is a long gap on the underside of the opening 10mm in width that runs along and in front of the heater grills. At an angle of approximately 45 degrees push the glass up into this void making sure the bottom of the glass clears the lower edge of the opening. Tilt the glass back into the fire and carefully lower into the large channel that runs across the opening avoiding the dampers.

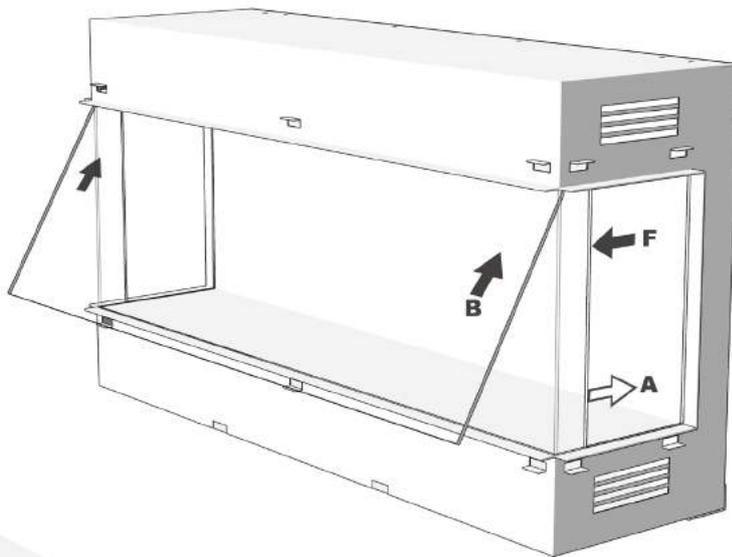


D: Slide the handle along the top right hand side of the glass.

E: The upper glass rail is magnetic and will fix easily into place along the top of the opening, adjust the position of the handle accordingly into the gap on the rail.

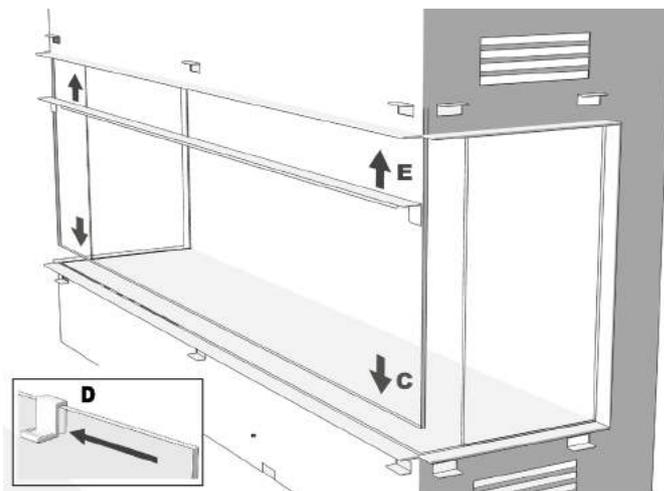

F: With the front glass tilted rearwards pull the side glass side forwards. Finely position the front and side glass panels to give the best possible fit and finish making sure the front glass glides back with ease and depresses the micro switch arm on the underside of the heat housing.

Fitting the décor trim: The décor trim is the long black channel that provides a neat edge along the bottom of the fire. Using the magnets simply fit along the front and sides.

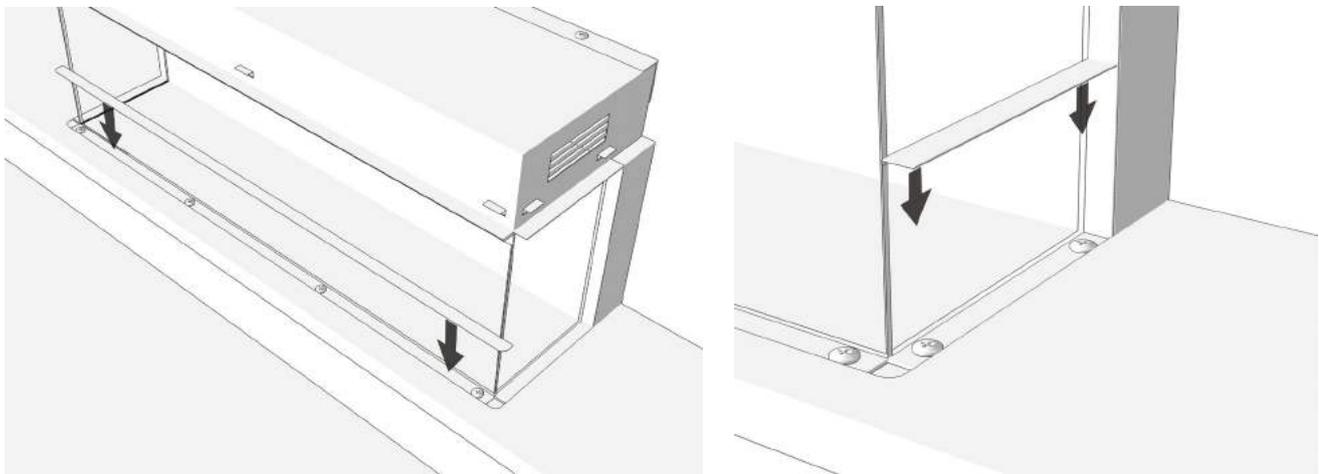

MAINTENANCE

Before any maintenance/cleaning is undertaken, always disconnect the fire from the mains power supply.

Replacing Lamps (Dimmable 240V 7W 3000k E14 LED lamps): Replacements are available from Flamerite Fires info@flameritefires.com. Allow a suitable time for the lamps to cool then remove the glass & fuel effect (see Installation). Remove the two screws from either side of the fuel bed and lift out of place. Remove and replace the lamps, fuel bed, fuel effect and glass. Please note that replacement Lamps are only covered from purchase by a 2 year warranty

Cleaning

The glass can be cleaned with a soft cloth and none abrasive glass cleaner.

WARNINGS

- Do not open and close the glass repeatedly while the heater is on or the cut out will activate.
- Do not use the fire in the vicinity of a bath shower or swimming pool.
- Never use the fire to dry laundry.
- Never install the fire directly underneath a fixed main socket.
- Never cover the appliance during the operation of the fire.
- The use of an extension lead is not recommended.
- Particular caution should be applied to ensure that children do not play with the fuel effects.
- As with any electrical appliance whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of small children.

Areas around the fire will become hot when activated. We strongly recommend small children be kept away from having any direct contact with the appliance by means of fitting a fireguard. This appliance is not intended for use by persons (or children) with reduced physical sensory or mental capabilities or lack of experience or knowledge unless they have been given supervision or instruction concerning the use of the appliance by the person responsible for their safety. Children should be supervised to ensure they do not play with this appliance.

PROBLEM SOLVING

- **No power to the fire:** Check the wall socket, plug, fuse and lamps.
- **No illumination:** Make sure fire is turned on. Check heater is working, if so check lamps.
- **Illumination but heater blowing cold:** The safety cut out may have operated. Check for obstruction around the heater. If installed into a chimney or cavity wall is 100% of drawn air blocked off from the fire.
- **Noise when illuminated:** Due to moving parts, the electric fire will make a noise.
- **Noise from the heater when in use:** The sound of rushing air is normal.

RECYCLING

Please recycle responsibly. Take your item to your local recycling centre – you can easily locate your nearest centre on the [Recycle Now website](#) or check with your retailer for details on either a collection service or a store take-back scheme (some may apply charges). Councils may offer a household recycling collection service for small electrical items; contact your local authority for more details.

Model identifier (s)		Glazer 900	
<i>Item</i>	<i>Symbol</i>	<i>Value</i>	<i>Unit</i>
Heat output			
Nominal heat output	P _{nom}	1.5	kW
Minimum heat output (indicative)	P _{min}	0.75	kW
Maximum continuous heat output	P _{max,c}	1.5	kW
Auxiliary electricity consumption			
At nominal heat	e _{lmax}	0.24	kW
At minimum heat	e _{lmin}	0.24	kW
In standby	e _{lSB}	0.0015	kW
Type of heat output/room temperature control			
With electronic room temperature control plus week timer			Yes
Contact details:	Flamerite Fires Ltd. Greenhough Road, Lichfield. Staffs. WS13 7AU e: info@flameritefires.com t: 01543251122		