serenitybouncer



BP 6616

PLEASE KEEP INSTRUCTIONS FOR FUTURE REFERENCE

Congratulations

Congratulations on purchasing your new Love N Care rocker.
In just a few steps you should be able to assemble this unique product and have it ready to meet your beautiful child:)







WARNINGS

WARNING: Prevent serious injury or death:

WARNING: NEVER leave child unattended.

MARNING: ALWAYS use restraint system.

MARNING: NEVER use for a child able to sit up unassisted.

FALL HAZARD: Child's activity may move product. Use only on floor. Never use on an elevated surface.

SUFFOCATION HAZARD: Never use on a soft surface (bed, sofa, cushion), as seat may tip over and cause suffocation.

- Never leave baby in the rocker without supervision.
- Do not use the rocker once the child can sit up unaided.
- Baby's movements could make the rocker tip over.
- Do not use the rocker if any part is broken or missing.
- Always use the safety attachment system.
- Before using, check that all parts are properly locked into position and adjusted correctly.
- Check the suspension system of the rocker regularly.
- Only use a 3-point safety harness.
- Do not use the rocker without its seat liner.
- It is dangerous to put this rocker on any surface high up.
- Never place the rocker on a soft surface (bed, sofa, cushion), as seat may tip over and be dangerous for baby.
- This rocker is not designed for baby to spend long periods asleep in it. You are recommended to put your baby in a bed.
- The rocker is not a carrycot, nor a car seat. Always use the straps and adjust them properly, even if baby will only be in the rocker swing for a short time.
- Never lift the rocker using the toy bar.
- Never lift or carry the rocker with baby in it.
- Keep the plastic bags of the packaging out of reach of babies and young children to avoid any risk of suffocation.
- Never add any pillow, blanket or padding: use only the head cushion supplied with the rocker swing.

WARNINGS

- Do not put objects with strings around the neck of your baby, do not hang strings from the rocker swing and do not attach strings to toys. This could lead to strangling.
- Do not put the rocker swing close to a window where the strings of a blind or curtains could lead to strangling.
- Do not allow your baby to play with the rocker folded up.
- Do not attach other toys than those supplied.

NEVER place a child under 5 lbs. (2.26 kg) or over 20 lbs. (9 kg) in the product.

• Discontinue use of product should it malfunction or become damaged. Please contact our customer service department at 1300-732-599 to arrange for repair or obtain replacement parts.

Care & Maintenance!

- Check the rocker often for loose screws, worn parts, torn fabrics, or stitching that has come undone.
- Change or repair parts if required. Only use spare parts recommended by Love N Care.
- Clean the rocker swing regularly.
- Excessive exposure to the sun or heat may cause fading of colours or warping of parts.
- Seat pad and headrest: Using a damp cloth and mild soap, wipe clean and air dry. Do Not immerse in water.
- Toy bar and toys: Using a damp clothand mild soap, wipe clean and air dry. Do Not immerse in water.
- Frame: Using a soft cloth and mild soap, wipe the frame. Never use bleach.



Parts





Step 1. Unfold the Bouncer and pull the seat upwards (fig 2).



Step 2. Slide the sides of the canopy onto the latches on the side until the button passes through the centre (fig 3). The canopy can then be adjusted up or down.



Step 3. Clip the toybar to the sides of the bouncer (fig 5) and repeat on both sides.



Step 4. To Adjust the height pull on the height adjustor on the top of the bouncer and pull the bouncer up or down to the desired position.





fig 9.

fig 10.

Step 5. To use the bouncer in a stationery position push on the switches located at the bottom of the bouncer (fig 9) and then pull out the levers.





fig 11.

Step 6. Using the 3-point harness, Place your child in the seat. Position the restraint pad between your child's legs.

Fasten the restraint belts to each side of the restraint pad make sure you hear a "click" on both sides (fig 11). Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached. Then pull the fabric on the velcro to cover the clips.



fig 15.

Step 7. To fold the bouncer, pull on the height adjustor lever (fig 13) then press the folding levers (fig. 14) at the same time then push the bouncer downwards (fig 15)



Contact Us

Head Office:

Love N Care Pty Ltd. 297-299 Canterbury Rd, Revesby NSW 2212 Australia

Contact No: 02 9774 4655

Fax: 02 9774 4633

Email: info@lovencare.com.au

www.lovencare.com.au

let's be friends!

- f http://www.facebook.com/lovencare1
- http://twitter.com/love_ncare

