




NECTRE WATER HEATER GUIDELINES FOR LOW PRESSURE HOT WATER SYSTEMS LOW LEVEL (OPEN VENTED)

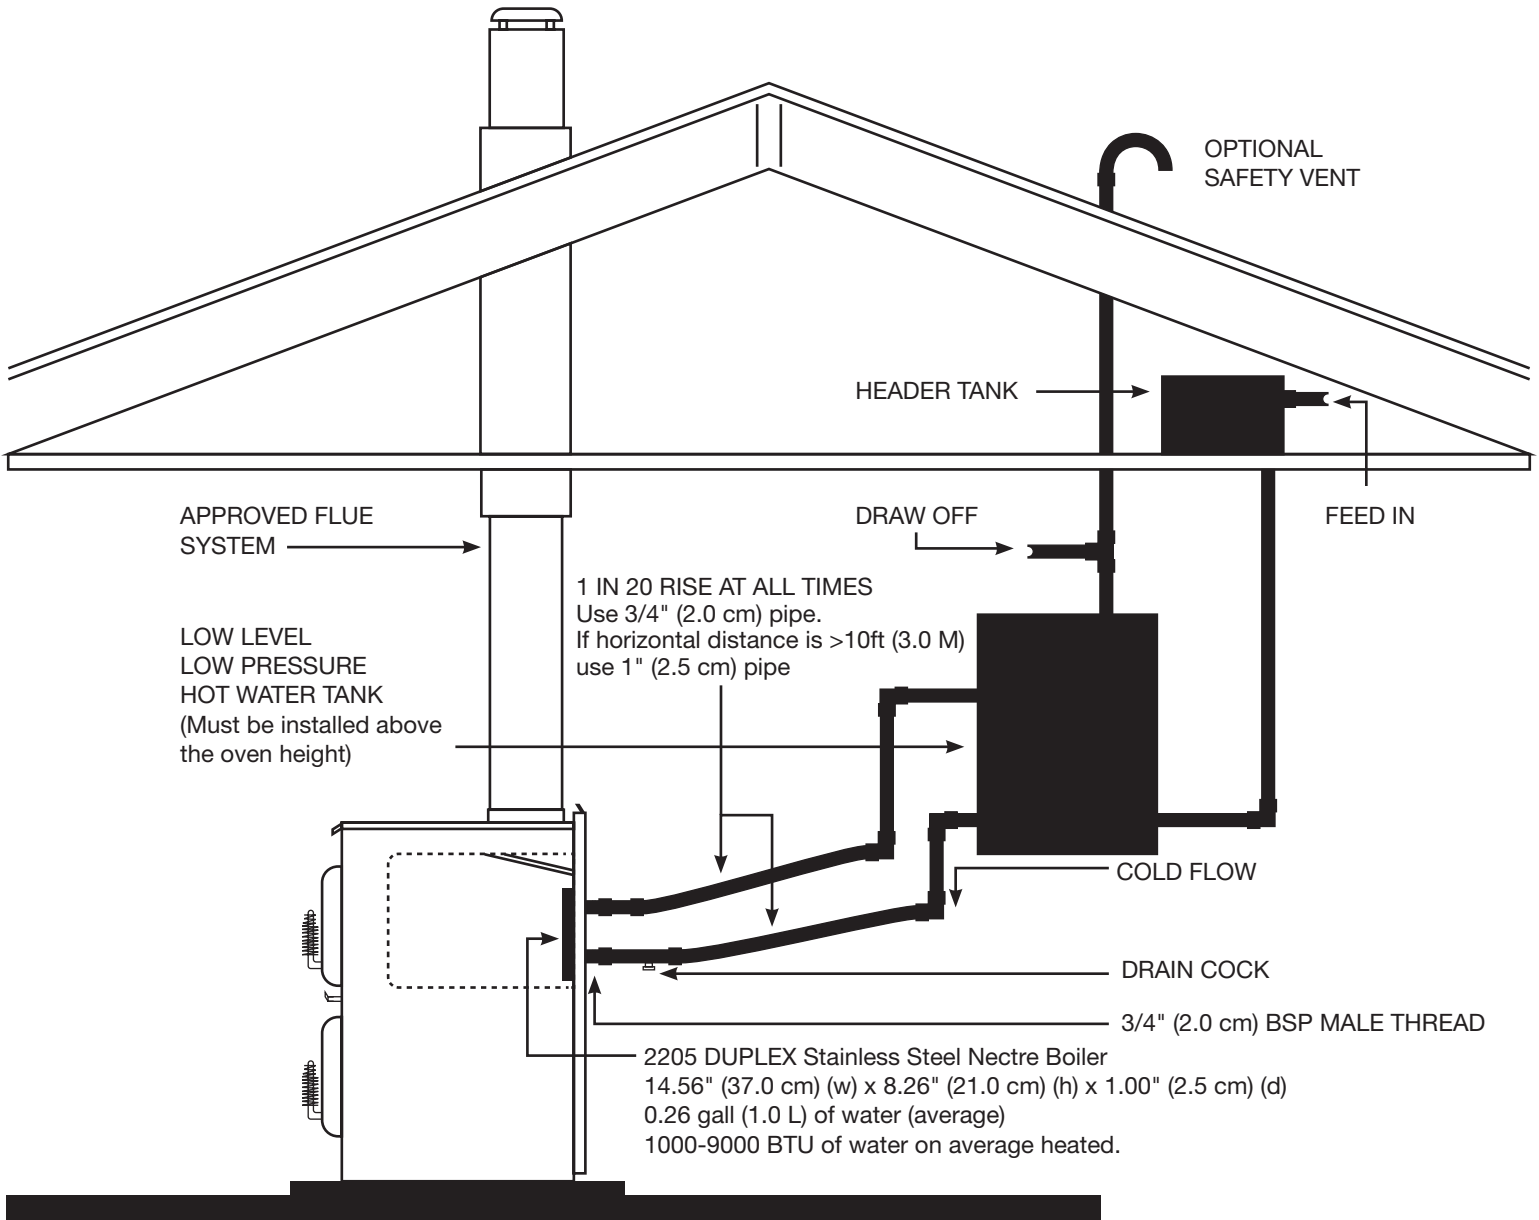

INSTALLATION INFORMATION

Solid fuel water heater must only be fitted to open vented hot water systems. Please note that fittings to a main pressure system is extremely dangerous and could lead to an explosion. Installation of water booster pipe work must only be carried out by a registered plumber and the appropriate requirements of all relevant building codes and best practices. Please check with your local building authority before installing this water booster.

