

CISNO Electric Tea Kettle

Drink for health



User Manual model #: NCC-C05


Contents

IMPORTANT SAFEGUARDS	3
DIAGRAM OF PARTS	3
SPECIFICATION	4
INSTRUCTIONS FOR USE	4
OPTIMUM TEMPERATURE FOR TEA AND COFFEE	5
CLEANING AND STORAGE	5
WARRANTY	6

IMPORTANT SAFEGUARDS

1. Read all instructions before using.
2. Please check the voltage indicated underside of the kettle and make sure it can match your home voltage, before connecting the kettle to the power.
3. The attached base can not be used for other purposes.
4. Unplug the power cords when not using it.
5. If you accidentally let the kettle operate without water, the kettle will automatically shut off. If this happened, let the kettle cool before you fill it with water.
6. Ensure that the kettle is used on a flat surface where the children can't touch, this can protect the children from getting burned.
7. Take care to pour boiled water slowly and carefully, it can protect you from scald by steam.
8. Be careful the hot steam when you open the lid of the kettle.
9. Do not close to the steam spout when the water is boiling or just boiled. Do not be anxious to uncover the lid.
10. Do not touch the glass body directly when the water is boiling, you can hold the handle or wait for the water temperature to come down , because this step can protect you from harmful burns.
11. The glass body and stainless steel surfaces are liable to get hot during boiling.
12. Unplug the power cord when you clean it; Also let it cool off before taking off parts to clean.
13. If you are the first time to use this kettle, we recommend to boil the kettle and clean it for twice.
14. The kettle is not a toy. Do not let the children play it.
15. This kettle can be used by children aged 8 years and above. Before use, they should be given supervision or instruction to use it. Also keeping the kettle away from children aged less than 8 years old.

DIAGRAM OF PARTS

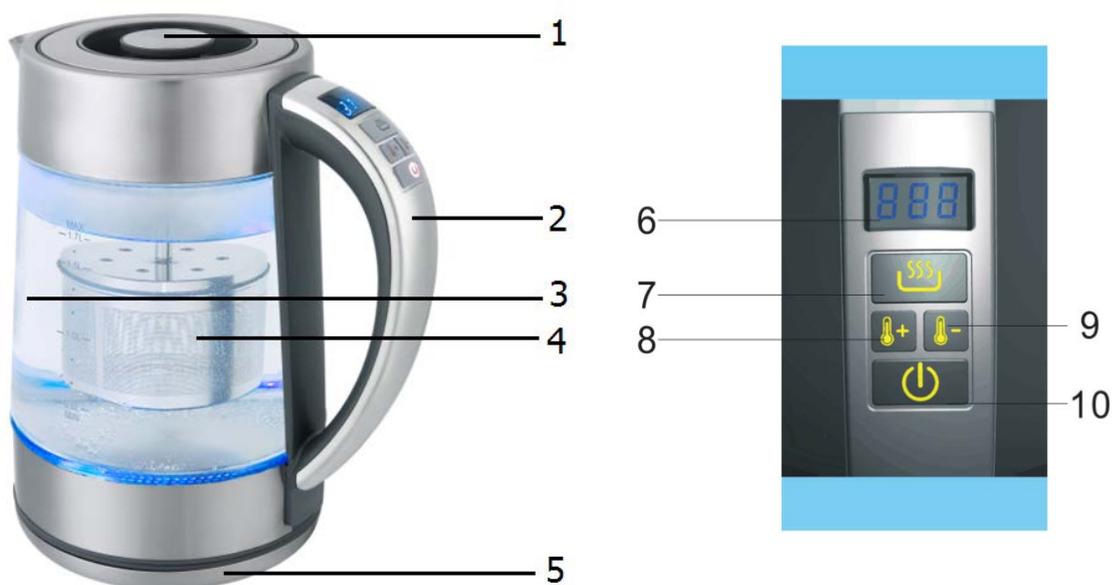

1.Top lid

2. Handle with temperature control panel
3. Glass body
4. Tea infuser
5. 360° swivel base
6. Digital display screen
7. Keep-warm button 
8. Increasing temperature button (up) 
9. Decreasing temperature button (down) 
10. Start heating(On) button /cancel heating(Off) button 

SPECIFICATIONS:

Min / Max Capacity: 0.5L / 1.7L

Voltage: 120V

Power: 1500W

Frequency: 60Hz

Net Weight: 3.08 lbs

Cord Length: 29.52 inches

Material: BPA free borosilicate glass & 304 stainless steel

Temperature Range: 105°F ~ 212°F

Keep Warm Temperature: 105°F to 205°F

Keep Warm Time: 60mins.

INSTRUCTIONS FOR USE

1. Open the lid of the kettle and fill with water. Always fill the kettle between the minimum (0.5L) and maximum (1.7L) capacity.

NOTE: Too little water will result in automatic shut-off before the water boiled. Also do not fill it over the maximum level, because water may spill out of the spout when boiling.

2. Put the kettle on the power base and plug to a power source, the LCD screen of the handle will turn on for a moment, all indicator buttons are light on and the kettle beeps, the ON/OFF button  starts to flash blue.

3. On the digital display screen of the handle, you can see the water temperature that it will last for about 5 seconds. If you don't perform any actions, the kettle will shut off automatically and the ON/OFF button will stay on blue light.

4. Press the ON/OFF button  without setting other functions, the kettle will turn on and the ON/OFF button become red. It takes 8-9min. to boil, then the kettle will shut off automatically with a beep.

5. If you just want to heat up water, adjust the temperature control buttons of the handle ( or ). The temperature can be adjusted to 5°F precision between 105°F and 212°F. You can check the temperature anytime on the digital control screen of the handle.

6. If you want to keep warm the water, press the keep-warm button , also you can heat up the water first, then keep warm it. The keep-warm time is 60 minutes, after 60mins, the kettle will shut off automatically.

7. If you want to turn off the keep-warm function, press the ON/OFF button  or keep-warm button  again.

8. If you want to make tea, you can put loose or bagged tea into the infuser, then adjust the temperature to boil it, the operation is the same with boiling water.

OPTIMUM TEMPERATURE FOR TEA AND COFFEE

104 - 140°F - Blends for Baby

185°F - Instant Coffee

194°F - Special Blends, French Press Coffee

140°F - White Tea

158°F - Yellow Tea

176°F - Green Tea, Oolong, Matcha, Blooming Tea

212°F - Black Tea, Herbal Tea

CLEANING AND STORAGE

Before cleaning, please disconnect the kettle from the power outlet.

Never immerse the power cord in water or allow the water to contact with this parts.

Mineral deposits in water may cause for precipitate and stain, this is a normal phenomenon.

You can clean it according to these steps:

1. Put the 3 cups of white vinegar into the kettle, and then fill the kettle with water, let it stand for 6-8 hours. **Do not boil it.**

2. After 6-8 hours, drop the water, open the lid, use the damp cloth to rub the interior of the kettle and the infuser, you can see that the stain can be removed easily. After that, use the clean water to wash it.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.

How to Keep it:

This kettle is cord-free when removed from the 360 degree swivel base, when you don't use it, you can let the cord around the swivel base and keep them in dry places.

WARRANTY

Under this limited warranty, your kettle's parts and workmanship are guaranteed under normal use for 18 months from the date of purchase. If you become aware of a defect in parts or workmanship during this time, CISNO will provide for repair or replacement of your kettle in accordance with the terms herein. This kettle has leakage protection, before ship it, our company will check it again.

Damage resulting from repair, service, or alternation by anyone other than an authorized retailer is not covered under this warranty, and shall void the warranty.


This warranty becomes void if the CISNO Electric Tea Kettle has been damaged, or misused or maintained improperly.

This warranty does not cover damage resulting from commercial, professional collective or industrial use.

We do not cover damage not caused by the CISNO Electric Tea Kettle itself such as accidental damage, faults caused by negligent use or care, mistreatment, abuse, theft, lightning, flood, fire, careless operation or handing of the CISNO Electric Tea Kettle which is not in accordance with this kettle manual.

煮茶滤芯怎么用怎么清洗

Environment friendly

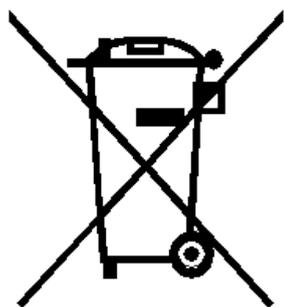

This kettle does not include the battery,
it's friendly for environment.



CISNO Electric Tea Kettle

Find your favorite

Cisno contact us!

FB: @CISNO.fans

Twitter: @CisnoOfficial

Phone: 855-272-8786

Made in China. CISNO is a trademark of USA OKEBA Industries Inc. All rights reserved 2017 patent pending.