




EDRIG CONVERSION TO GAUGE 3

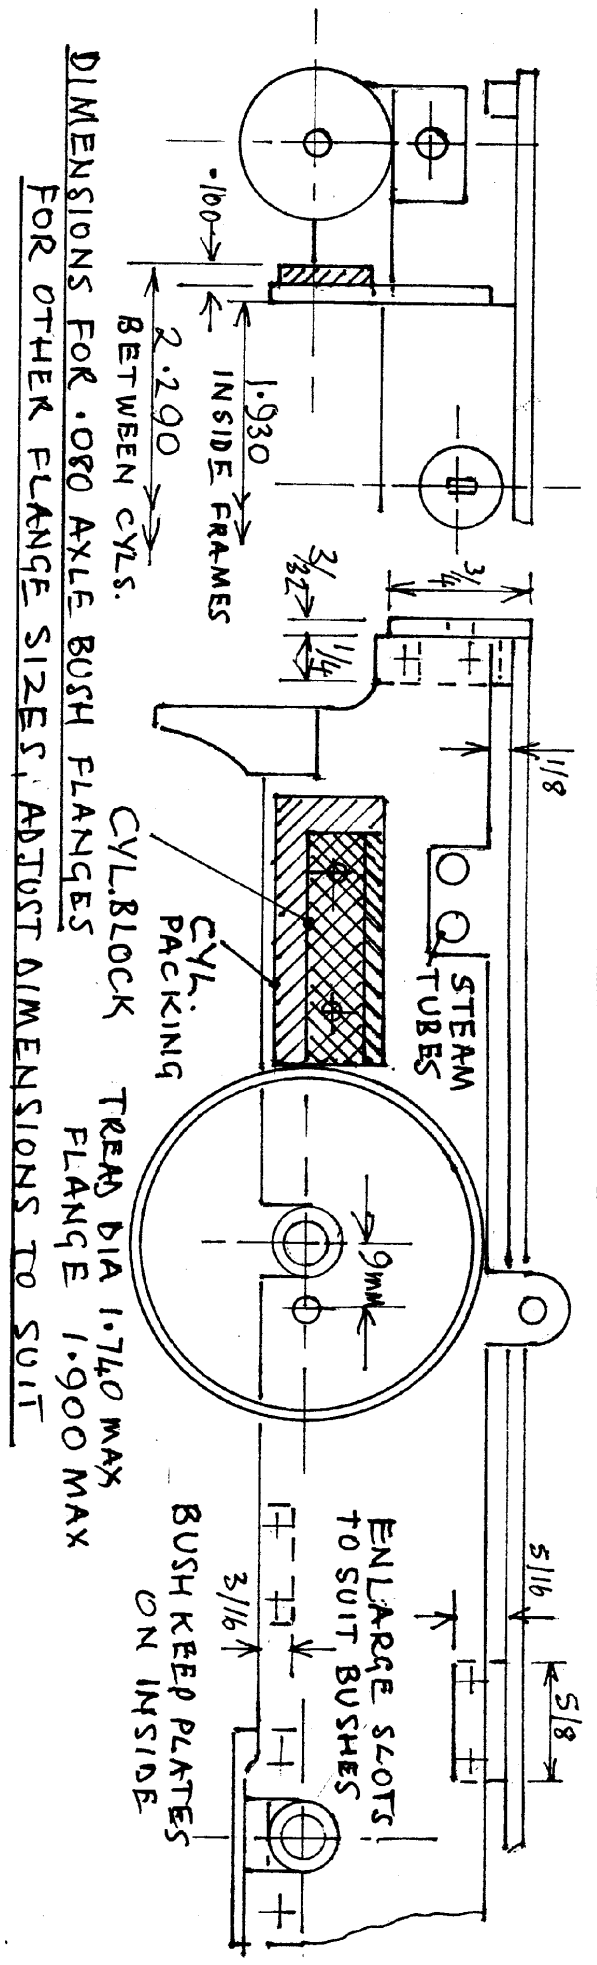

Copyright Adrian Booth © 2008

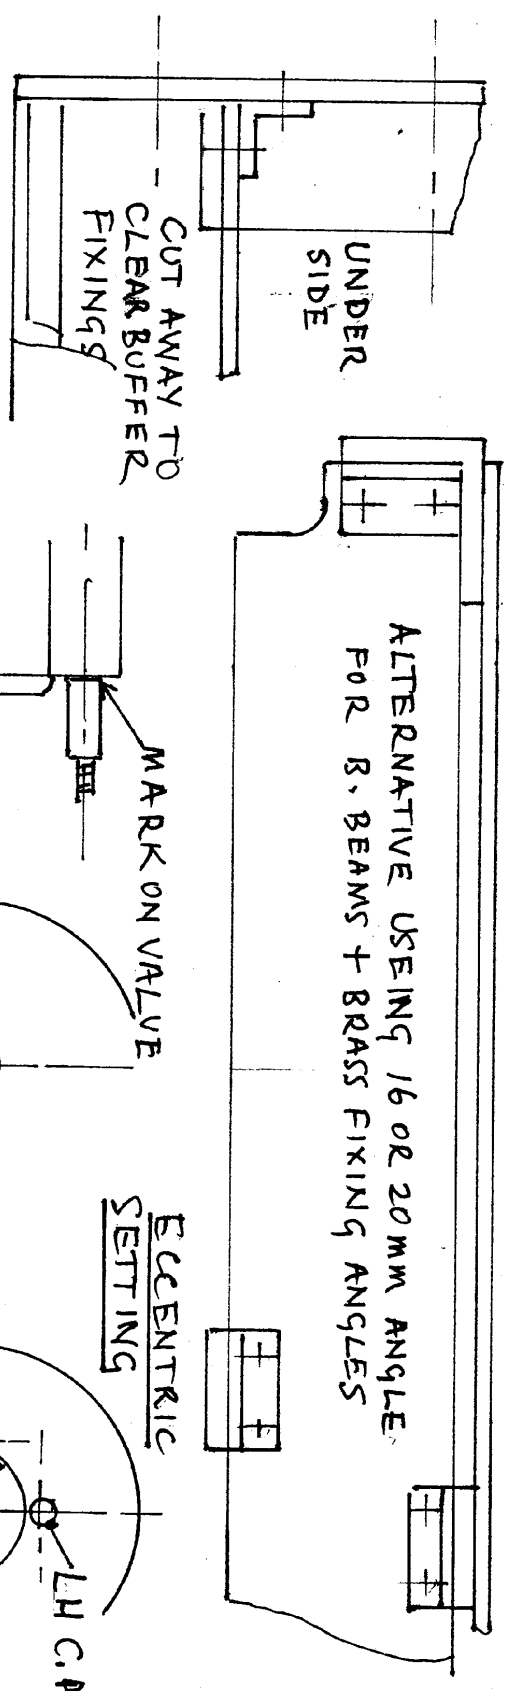

FOR SETTING REVERSE VALVE
PUT LEVER IN REVERSE
ADJUST LINE ON VALVE TO
END OF BLOCK

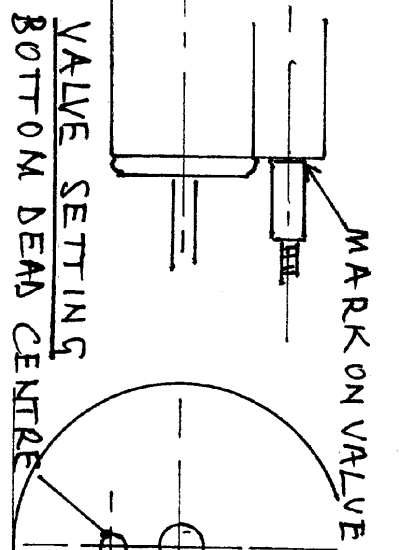

ECCENTRIC SCRIBE MARK