iWire Mounting Hardware Kit

Installation Instructions

1. Line up the tab in desired location.

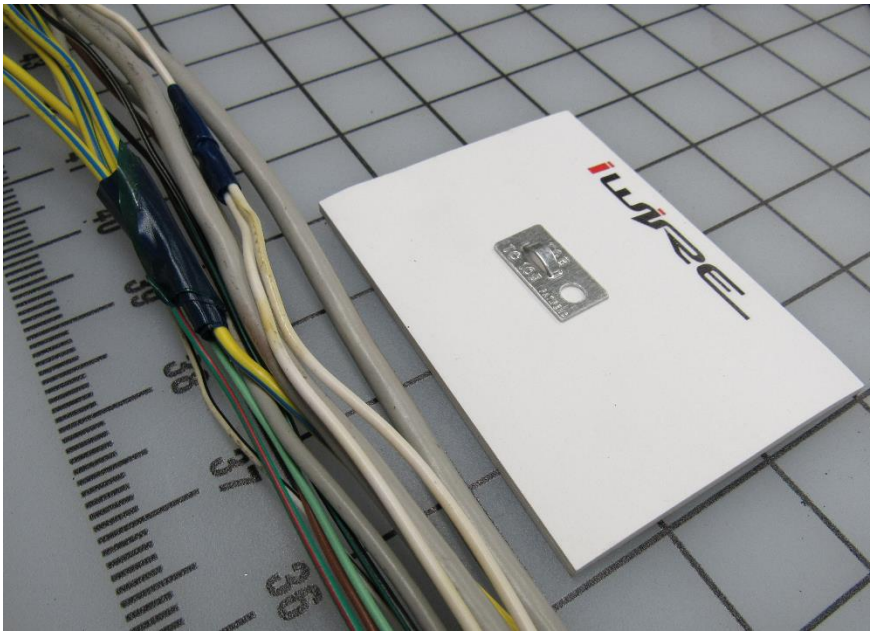

2. Using the Loctite activator, spray the back side of the tab or the surface that the tab will be mounted to.

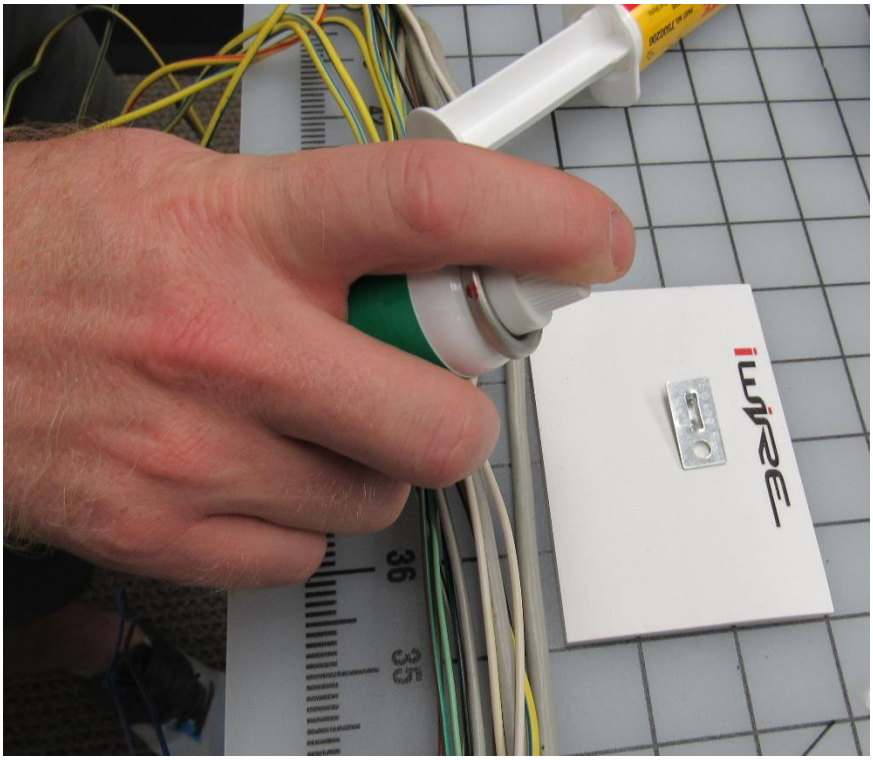

3. Using the Loctite adhesive, place a dot of glue on the back of the tab or surface that the tab will be mounted to. Place the tab on the mounting point then press down so it is secure and hold for approximately 30 seconds. **iWire Tip** - Push lightly on the plunger since it comes out quickly and then pull back on the plunger to avoid excess.

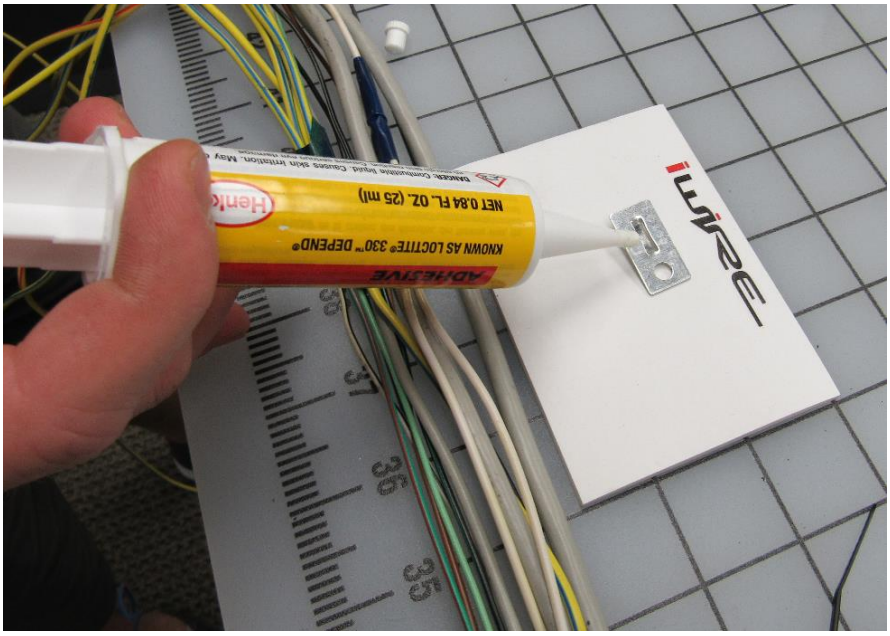

4. Next wrap the section of the harness that will be mounted (even if there is sleeving) with 2-3 layers of rubber mounting tape.

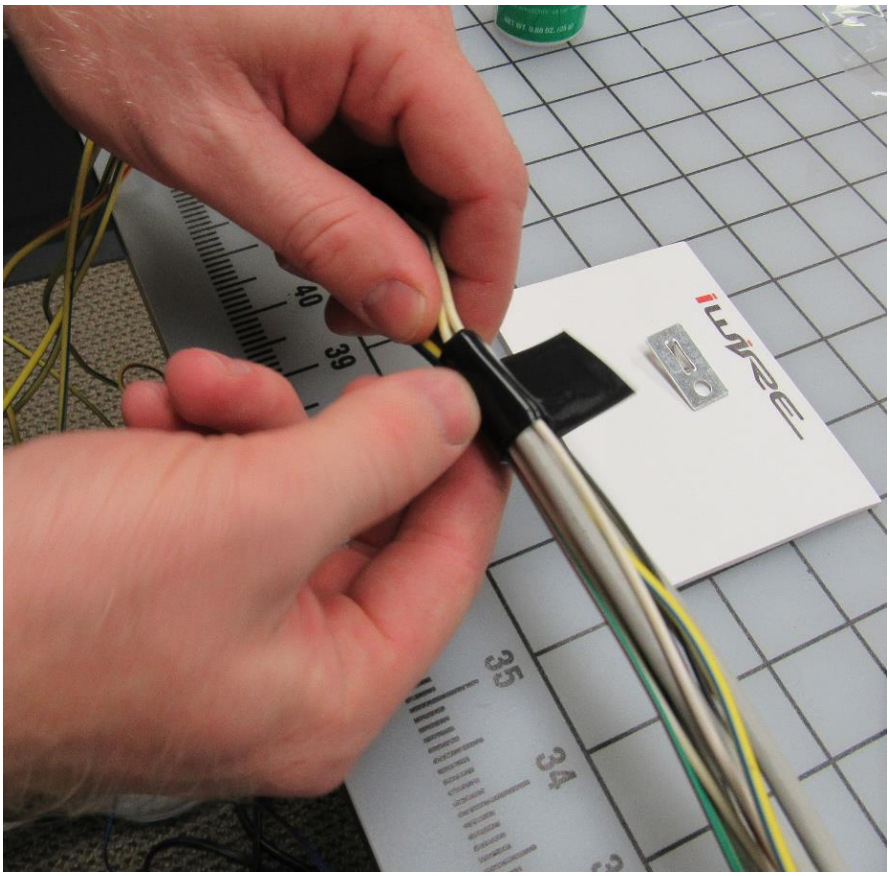

5. Wrap a zip tie around the harness where it is taped and run one end of the zip tie through the hook on the tab.

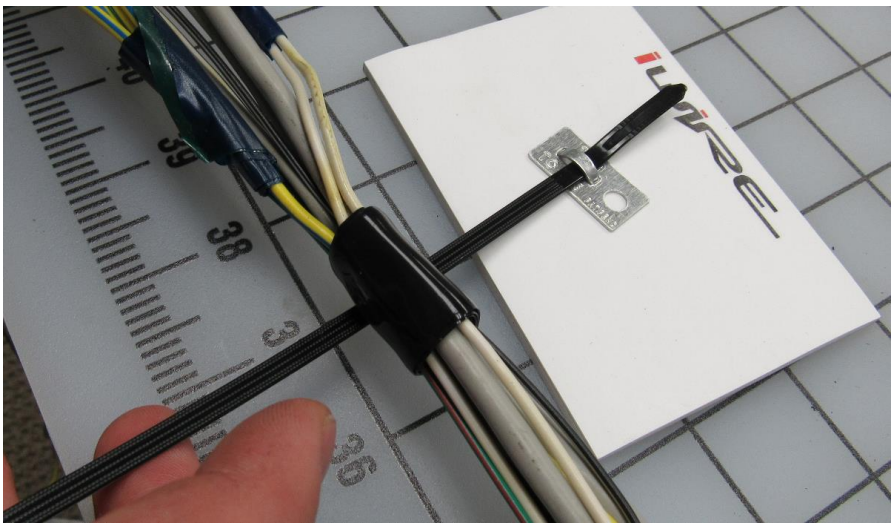

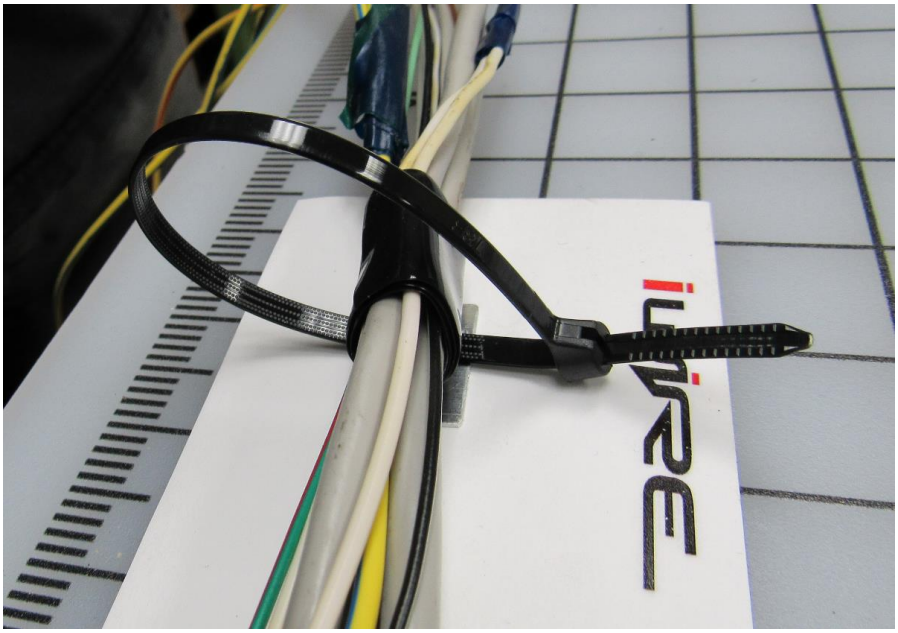
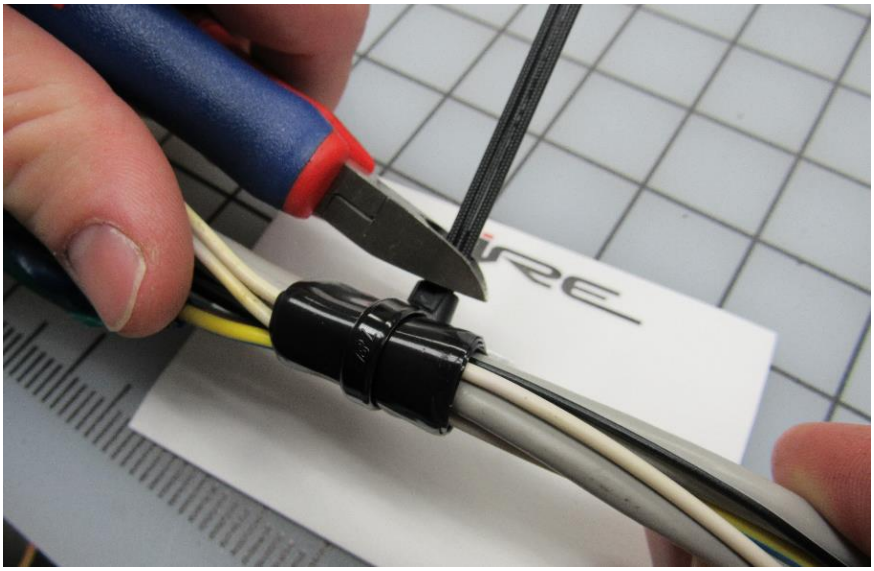
6. Tighten zip tie until it is secure around harness and trim off excess. Repeat steps 1-6 for each tab until harness is secured. Note: Sheet metal screws can be used in conjunction with or in place of the mounting tab.