


Name of component

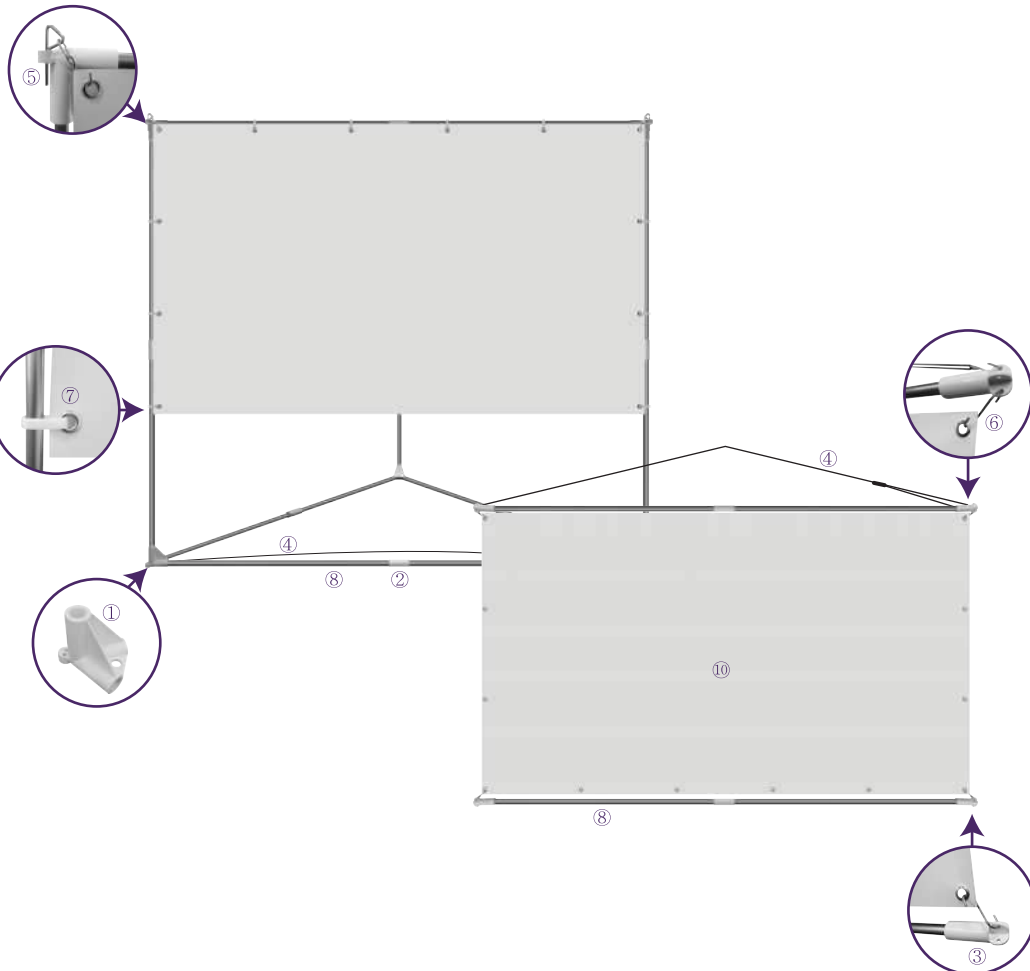

< Name of component >


No.	Name	No.	Name
①	Triangle Connector	⑥	S-Hook
②	Straight Connector	⑦	Fastener
③	Versatile Connector	⑧	Aluminum Pole-LONG
④	Hook String	⑨	Aluminum Pole-SHORT
⑤	Triangle pin	⑩	Screen

Projection Screen

Installation Guide



JaeilPLM Co.,LTD
jplmservice@gmail.com
Patent Registration

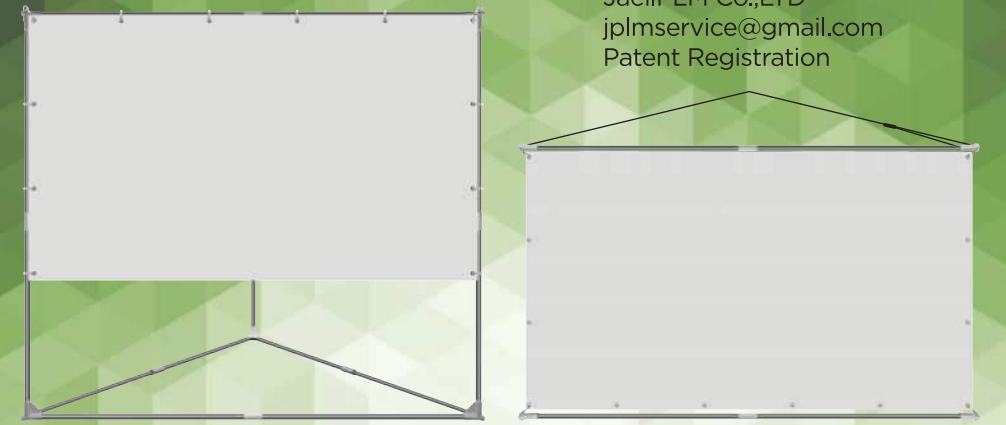

Model PLM OS 100 (100Inch)
2 in 1 Screen
(Stand type & Hanging type)



In the Bag

- ① Triangle Connector(6)
- ② Straight Connector(9)
- ③ Versatile Connector(4)
- ④ Hook string (6)
- ⑤ Triangle Pin (2)
- ⑥ S-Hook (4)
- ⑦ Fastener tape (6)
- ⑧ Aluminum Pole-LONG (12)
- ⑨ Aluminum Pole-SHORT (6)
- ⑩ Screen (1)




Stand Type

Installation Steps

- 01. Connect ⑧Aluminum Pole(LONG) as illustrated below using ①Triangle and ②Straight connectors.
- 02. Insert a hook of ④Hook String into a hole of ①Triangle connector and pull the string to insert the other hook into the opposite connector's hole along the connected pole. Tighten the string using 3-hole tighter. Apply the same steps to two other strings. And form a triangle with the strings along the poles.

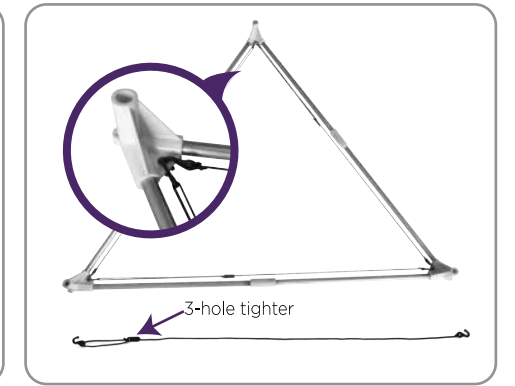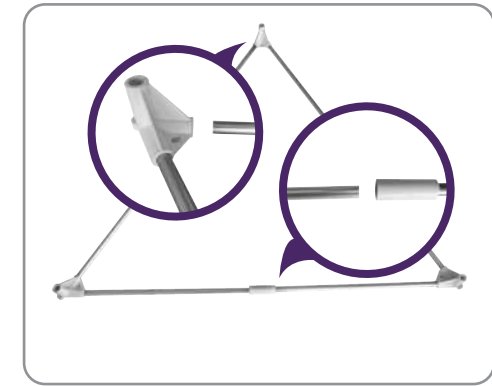

- 03. Place the completed triangle frame on the floor and set up ⑨Aluminum Pole(SHORT) at each point as illustrated below.
- 04. Complete another triangle frame using connectors. And place it on the top of three vertical poles to complete the stand as shown below.

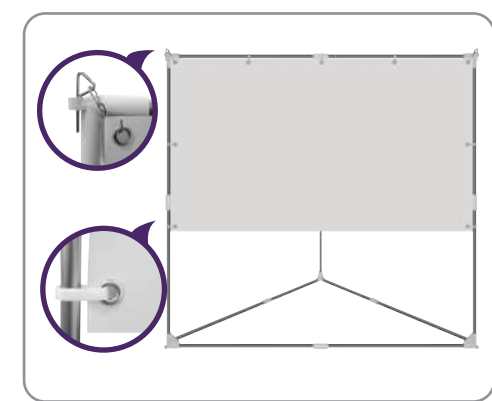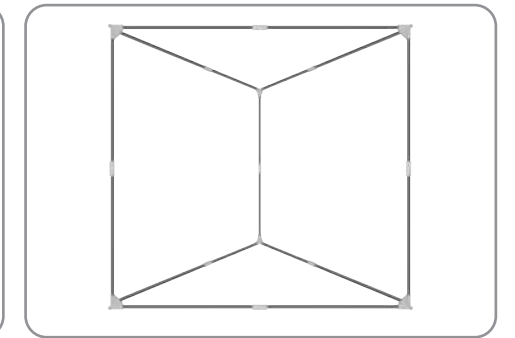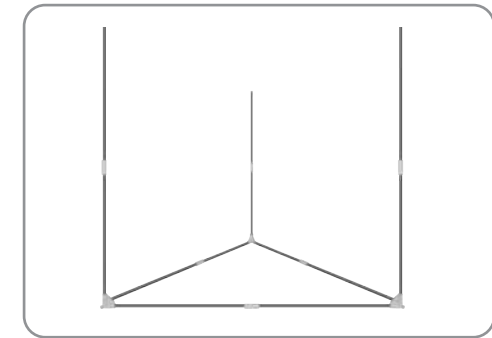


- 05. Mount ⑩Screen on the stand.
 - Insert ⑤Triangle Pin into a hole of ①Triangle Connector on both top ends of the stand.
 - Insert the hooks into the screen eyelets as shown on the left.
 - Place ⑦Fasteners into the screen eyelets (three on the top, two on the both sides) to fix ⑩Screen to the stand.

Hanging Type


Installation Steps

Caution Never use ⑦Fastener when installing indoor use !

- 01. Connect ⑧Aluminum Pole(LONG) as below using ③Versatile connectors and ②Straight connector.

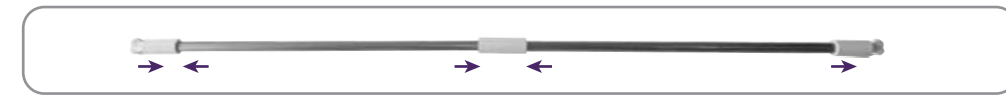

- 02. Insert a hook of ④Hook String in the pole to each side of ③Versatile connector. And tighten the string using the 3-hole tighter.

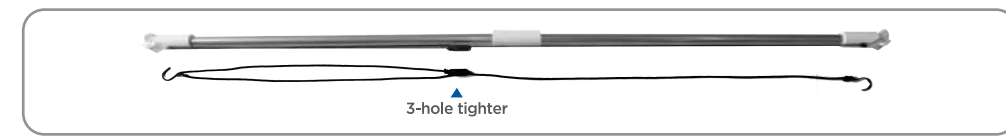


- 03. Apply the same steps to another pole.



- 04. Before setting up the screen on the wall, firstly lay ⑩Screen on the ground for preparation. Put two ⑥S-hooks on each side of the ③Versatile connector and the screen eyelet.



- 05. Fix a screw or nail on the wall (**As wall materials vary, screws for fixing to wall are not included)
- 06. Hang the completed screen on the nail as below.

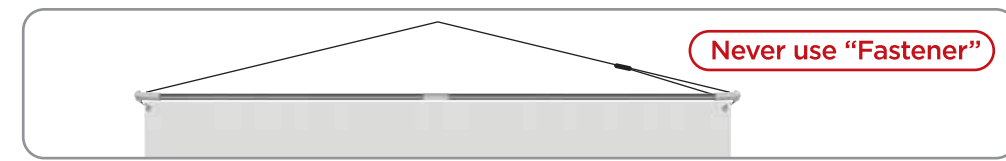

- 07. Hang the remaining pole of Step04 at the bottom side of screen.

