

Assembly Instructions

Jonesport Convertible Crib

Toddler Guard Rail





WARNING

FOR TODDLER BED USE

**FAILURE TO FOLLOW THESE WARNINGS AND ASSEMBLY INSTRUCTIONS COULD
RESULT IN SERIOUS INJURY OR DEATH.**

- READ ALL INSTRUCTIONS BEFORE ASSEMBLING CRIB. **KEEP INSTRUCTIONS FOR FUTURE USE.**
- PREVENT BURNS. KEEP BED AWAY FROM OPEN FIRES AND OTHER HEAT SOURCES.
- ANY MATTRESS USED IN THIS BED MUST BE AT LEAST 27-1/4 IN. (69 CM.) BY 51-5/8 IN. (131 CM.), WITH A THICKNESS NOT EXCEEDING 6 IN. (15 CM.), AND A MINIMUM THICKNESS OF 4 IN. (100MM). THE DIMENSIONS OF THE MATTRESS SHOULD BE TAKEN FROM SEAM TO SEAM.
- THE MINIMUM AGE OF THE INTENDED USER SHALL NOT BE LESS THAN 15 MONTHS AND THE MAXIMUM WEIGHT SHALL NOT BE GREATER THAN 50 LBS. (22.7 KG)
- PROVIDED GUARDRAIL **MUST** BE USED.
- **DO NOT** PLACE BED NEAR WINDOWS WHERE CORDS FROM DRAPES OR BLINDS MAY STRANGLE A CHILD.
- **DO NOT** PLACE ITEMS WITH A STRING, CORD, OR RIBBON AROUND A CHILD'S NECK, SUCH AS HOOD STRINGS OR PACIFIER CORDS.
- **DO NOT** SUSPEND STRINGS OVER A TODDLER BED FOR ANY REASON.


IMPORTANT!

- CHECK THIS PRODUCT FOR DAMAGED HARDWARE, LOOSE JOINTS, MISSING PARTS OR SHARP EDGES BEFORE ASSEMBLY AND PERIODICALLY DURING USE. **DO NOT** USE CRIB IF ANY PARTS ARE MISSING, DAMAGED OR BROKEN. CONTACT WESTWOOD DESIGN: 635 N. BILLY MITCHELL RD., STE. B, SALT LAKE CITY, UTAH 84116, PHONE: 1-908-719-4707; EMAIL: SUPPORT@WESTWOODBABY.COM FOR REPLACEMENT PARTS AND INSTRUCTIONS IF NEEDED. NEVER SUBSTITUTE PARTS.


Step 1

A. Using the allen wrench, remove the six bolts attaching the footboard to the crib and remove the footboard.

Required Hardware

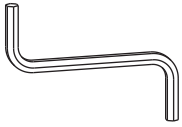

Allen Wrench

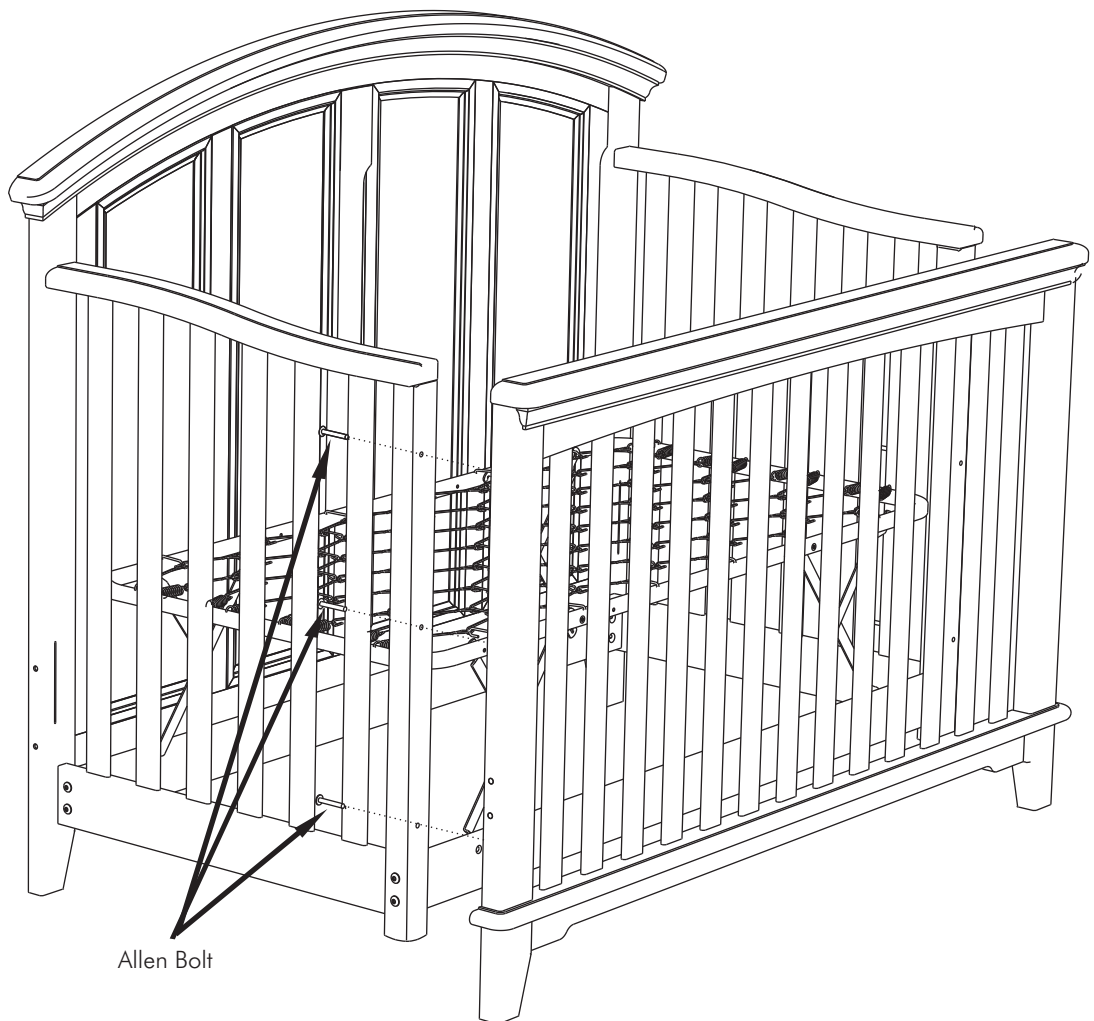

Allen Bolt


Step 2

- A.** Screw the removable feet (included with the crib) into the bottom of the crib sides.
- C.** Adjust the spring to its lowest position, following the procedure shown in these instructions.
- D.** Use the bolts you removed from the footboard to attach the guard rail to the crib. Tighten securely using the allen wrench.


Required Hardware



4 x Allen Bolt, 2" Long

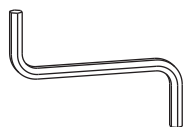

Allen Wrench

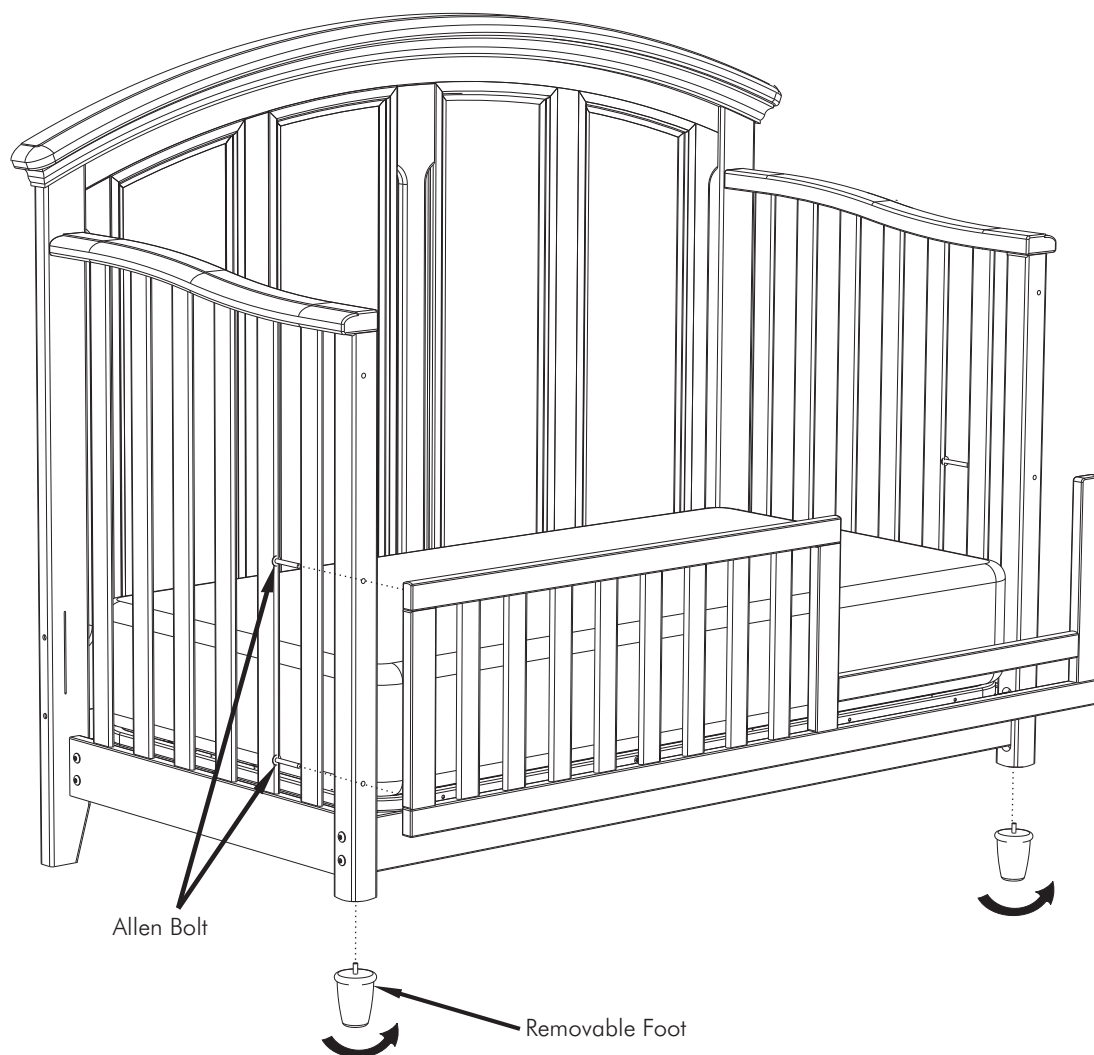

Step 3

- A.** From the hardware pack included with the crib, locate allen bolts (P) and cap nuts (Q).
- B.** Insert the allen bolt through the top hole in the corner post, and thread it into the cap nut as shown. Tighten securely using the allen wrench.
- C.** Repeat on the other side.


Required Hardware




2 x Allen Bolt, 1-1/8" Long **(P)**



2 x Cap Nut **(Q)**

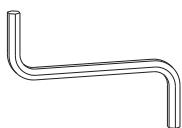



Allen Wrench

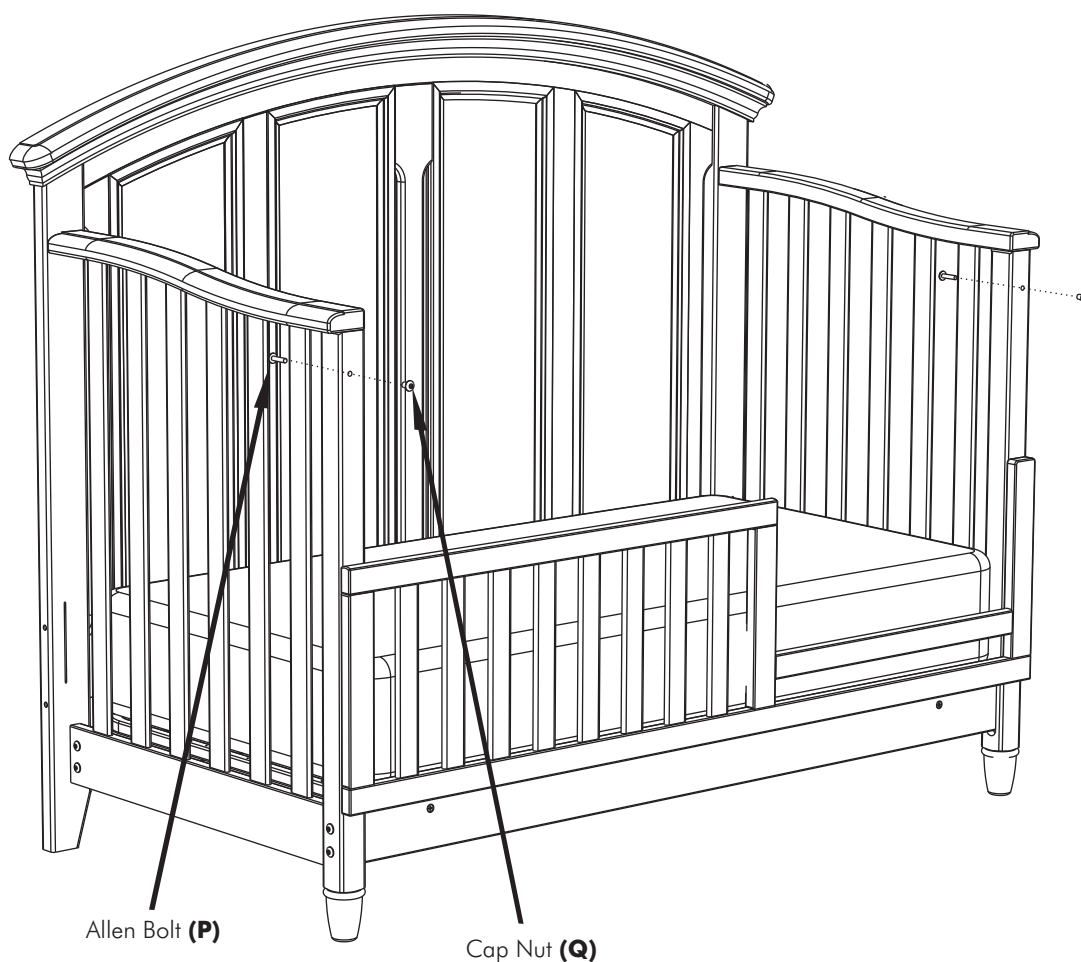

Mattress Height Adjustment

The toddler bed can only be used with the mattress support in its lowest position. To adjust the mattress height, follow these steps:

- A.** Carefully tip the crib onto its back.
- B.** Undo the four wing nuts holding the support arms to the spring and remove the screws.
- C.** Lower the spring to the desired setting and align the holes.
- D.** Insert the screws and tighten the wing nuts.

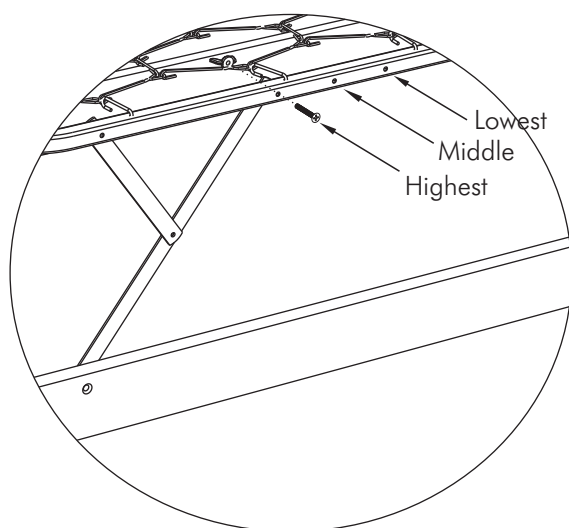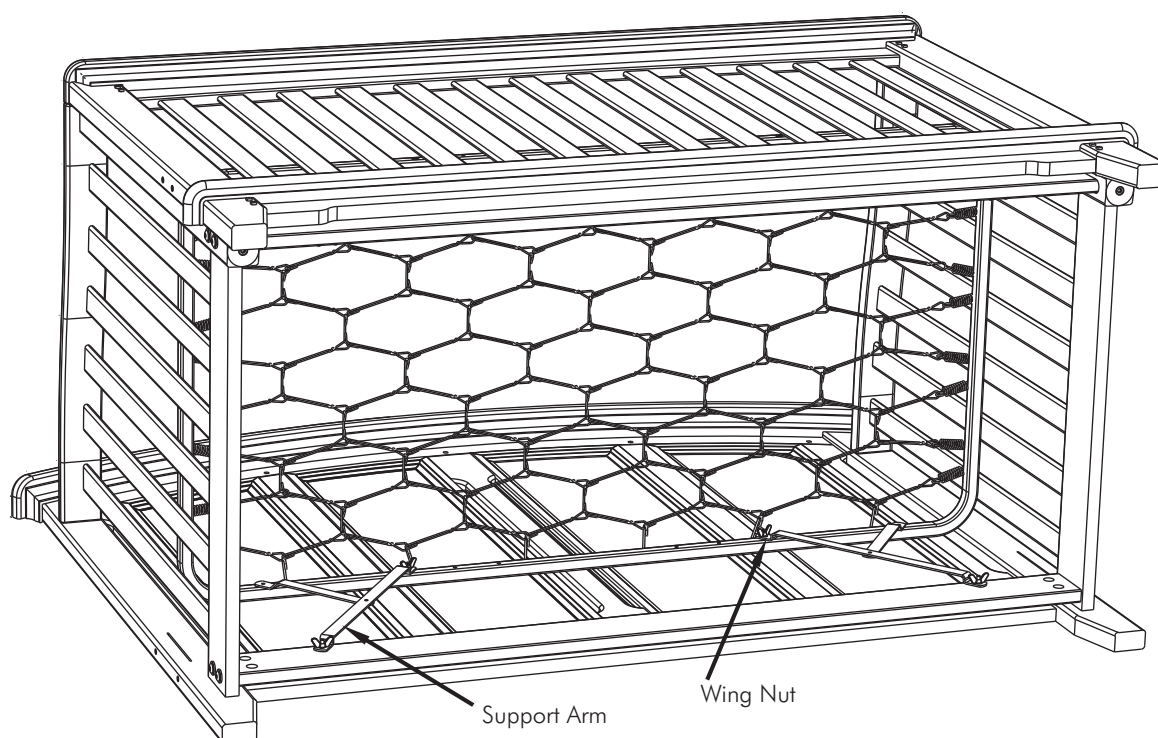

WESTWOOD DESIGN

**635 N. Billy Mitchell Rd., Ste. B
Salt Lake City, UT 84116
Phone: 1-908-719-4707
support@westwoodbaby.com**

December 1, 2010