

# Assembly Instructions / Instructions d'assemblage DONNINGTON Bed Rails / Barrière de lit

- A. Align the bed rails against the headboard and thread the allen bolts (C) through the holes. Tighten securely.
- B. Align the bed rails against the footboard and thread the allen bolts (C) through the holes. Tighten securely.
- C. Align the slats roll into the bed rails. Tighten with screws (D) with screwdriver (not provided)
- D. Thread the allen bolts (E) through the holes in the headboard as shown, and tighten securely with allen wrench.

- A. Alignez les rails de lit contre la tête de lit et filetez les boulons allen (C) travers les trous. Serrez fermement.
- B. Alignez les rails de lit contre pied de lit et filetez les boulons allen (C) travers les trous. Serrez fermement.
- C. Alignez les des lattes roule dans les rails de lit. Fixer avec les vis (D) avec un tournevis (non fourni)
- D. Enfillez les boulons allen (E) à travers les trous dans la tête de lit comme indiqué, et serrer avec une clé allen.

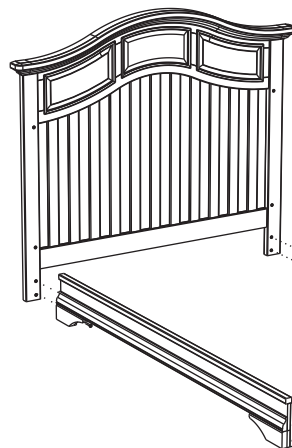
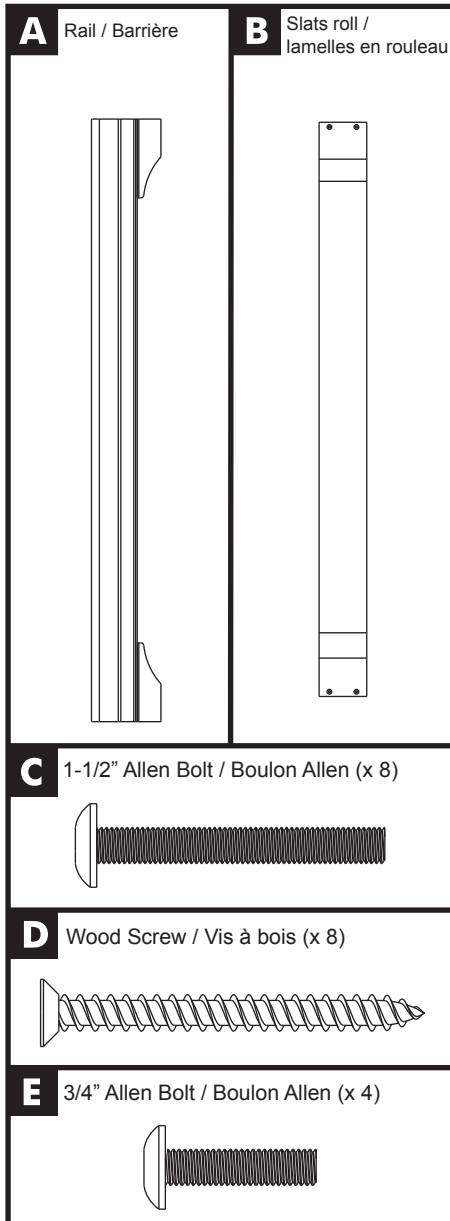


Figure A  
Chiffre A

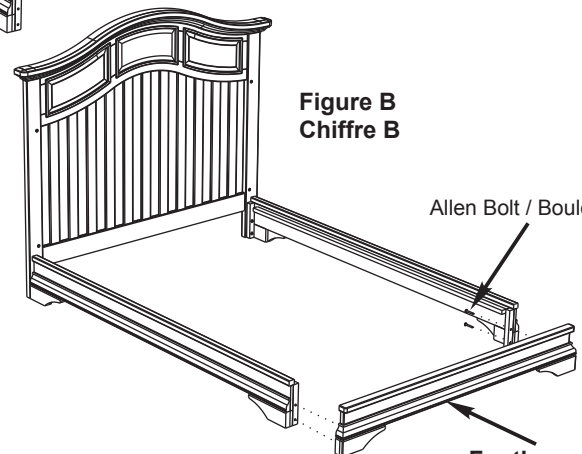


Figure B  
Chiffre B

Allen Bolt / Boulon Allen (C)

Footboard / Pied de lit

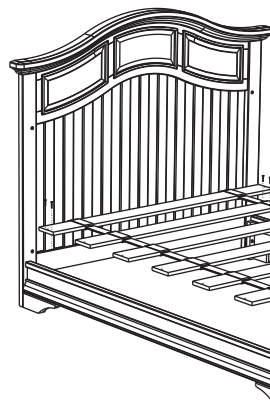


Figure C  
Chiffre C

Wood Screw / Vis à bois (D)

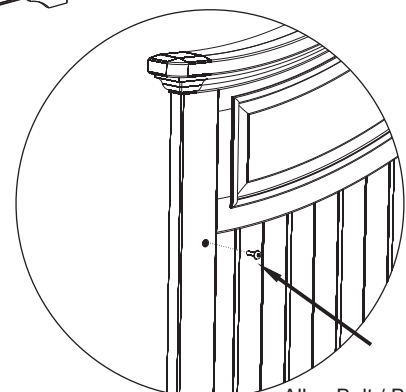


Figure D  
Chiffre D

Allen Bolt / Boulon Allen (E)

**WESTWOOD DESIGN**

Imported by / importé par:

Westwood Design  
635 N. Billy Mitchell Rd., Ste. B  
Salt Lake City, UT 84116  
Phone: 908-719-4707  
www.westwoodbaby.com

Westwood Design  
13-3120 Rutherford Rd., Ste. 407  
Vaughan, ON L4K OB2  
Canada