



Mercedes C300 2008-2011

PART NUMBER: MV-50-03-G3



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


**When properly installed, the metal between the ball and 2 small holes is all that is exposed.
(Some exceptions apply).**

TOOLS REQUIRED: Phillips screwdriver, 5/64" bit and drill, marking pen

PARTS INCLUDED: VSM G3, Lock Plate, J Stem, two (2) #8 x 1/2" screws

LOCATION: Right of Radio

STEP 1. Open the glove box and place the VSM G3 in place exactly as shown in Photo #1. Make sure that the two small centering pin holes located closest to the ball are hidden just behind the dash molding as pictured.

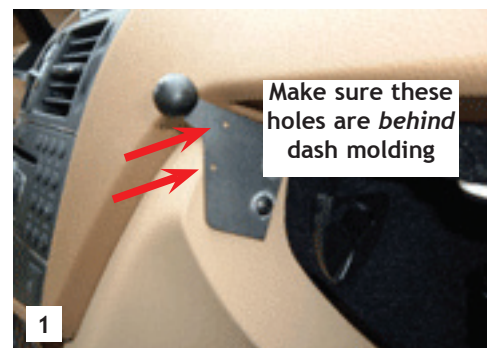

STEP 2. Once the VSM G3 is positioned, mark the locations of the pilot holes with a marking pen. Use a 5/64" bit and drill to drill out the marked locations. DO NOT drill more than 1/4" deep! Place the VSM G3 positioned over the pilot holes and secure it to the dash with the two (2) provided #8 x 1/2" screws and a Phillips screwdriver.



STEP 3. Once the VSM G3 is secured and in place, simply close the glove box. You have successfully installed your VSM G3.



Note: See the Assembly Instructions for G3 components for additional information.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 314 West 86th Street Bloomington, MN 55420
Ph: 952.641-4700 or 800.388.0073 Fx: 952.641.4701

Installation Difficulty
 ● ○ ○ ○ ○
 Simple Advanced

© Pro.Fit International, Bloomington, MN 2008

View Instruction & Updates
 Online at
www.pro-fit-intl.com