



Volkswagen Jetta (2005-2007)  
Volkswagen Rabbit (2006)



PART NUMBER: MV-50-03-L

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


**TOOLS REQUIRED:** #2 Phillips screwdriver, drill and 5/64" bit, Dash trim removal tool (DM-40-22), 10mm nut driver, marking pen

**PARTS INCLUDED:** Pro.Fit Legend, instructions, two (2) # 8 x 1/2" screws.


**LOCATION:** Right of radio

STEP 1. Insert dash trim tool behind sensor by windshield.

**Photo 1.** Pry downward to remove sensor, disconnect and set aside. Remove T-20 Torx from below sensor. Inset trim tool behind left corner of the mesh grill, nearest the windshield. **Photo 1.** Push down to release left corner and then do the same for the right. Lift loose end up 45 degrees and slide away towards windshield to release back hooks. Set grill aside without disconnecting anything. Remove two (2) T-20 Torx screws from below grill.

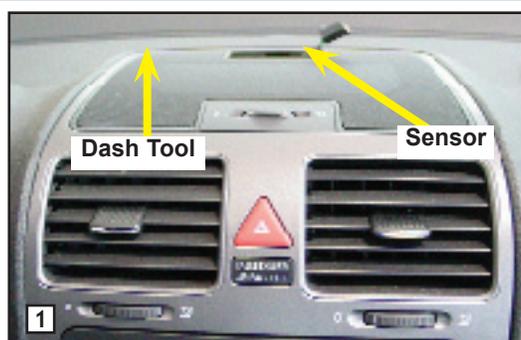

STEP 2. Slide dash tool behind air vent trim bezel in the back, left corner as before. **Photo 1.** Release clip and work the tool clockwise around bezel, pulling outward until bezel is free. Set bezel aside.

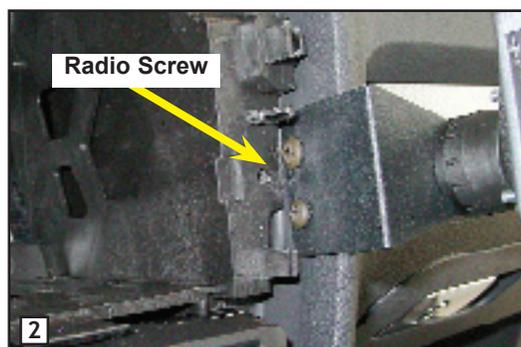


STEP 3. Remove two (2) T-20 Torx screws from top right and left corner of radio bezel. Using trim tool, remove bezel from around radio. Remove T-20 Torx screws from all four (4) corners of the radio. Pull radio out of its cavity, wrap in protective cloth and let hang down. Do not disconnect radio.

STEP 4. Place the Legend VSM against the dash, right of radio. **Photo 2.** The lower-right radio screw hole be between the Legend screw holes. Using the holes in the Legend as a guide, mark pilot holes with marking pen. Set the mount aside. Carefully drill pilot holes with 5/64" drill bit and drill. Place the Legend over pilot holes and align holes. Insert provided screws and tighten with # 2 Phillips screwdriver.



STEP 5. Assemble dash in reverse order securing all clips. This completes the installation of your Pro.Fit Legend.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation.  
Pro.Fit International, Inc.® 314 West 867th Street Bloomington, MN 55420, Ph: 952.641.4700 or 800.388.0073 Fx: 952.641.4701



© Pro.Fit International, Eagan, MN 2005

VIEW INSTRUCTIONS & UPDATES  
ONLINE @  
[WWW.PRO-FIT-INTL.COM](http://WWW.PRO-FIT-INTL.COM)