



**INSTALLATION INSTRUCTIONS**

**GMC SAVANA VAN (1996-2002)**  
**GMC G-SERIES VAN (1996-2002)**  
**CHEVROLET EXPRESS VAN (1996-2002)**  
**CHEVROLET G-SERIES VAN (1996-2002)**

**VIEW INSTRUCTIONS & UPDATES  
 ONLINE @  
 WWW.PRO-FIT-INTL.COM**

**PART NUMBER: CV-91-97**

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.**  
 All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**Pro.Fit logo and part number will be right side up and readable when installed.**

**TOOLS REQUIRED:** hook tool, #2 Phillips screwdriver, 3/32" drill bit, drill, marking pen.

**PARTS INCLUDED:** Pro.Fit VSM™, four (4) #10x5/8" screws, instructions.

**LOCATION:** To the right of the radio.


**STEP 1.**

Locate dash panel located directly below radio, under the main trim bezel. Insert interior hook tool behind panel at upper left corner and pull back to release one (1) clip. Insert hook tool near top middle of panel and pull back to release second clip. Pull back on panel with your hands to release two (2) guide type clips on right side of panel. Pivot panel to right as you would open a door.



**STEP 2.**

Locate the exposed area to the lower right of radio consisting of a beige plastic strip. A hole from the released clip will be visible on this strip. Place Pro.Fit VSM™ to the right of clip hole and slide up into corner. Using marking pen, mark holes using Pro.Fit VSM™ as a guide. Set Pro.Fit VSM™ aside. Using 3/32" drill bit and drill, drill pilot holes where marked.

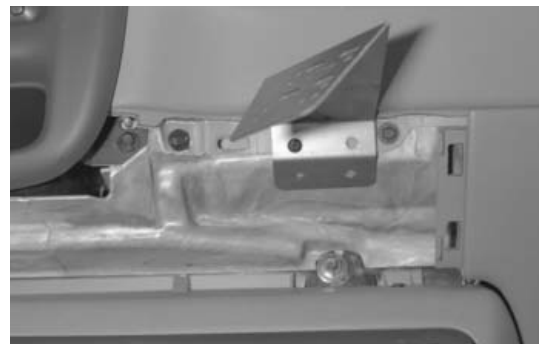

**STEP 3.**

Align Pro.Fit VSM™ with drilled holes. Using Phillips screwdriver, insert and tighten screws provided. Re-attach dash panel. Install hang-up cup onto Pro.Fit VSM™.



This completes the installation of your Pro.Fit VSM™.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM™. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation.

Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

**Web Address: [www.pro-fit-intl.com](http://www.pro-fit-intl.com)**

© Pro.Fit International, Eagan, MN 2003