




NexDome 2.2m Dome Shutter Retention Kit

1

Assemble the retention bars as shown here.

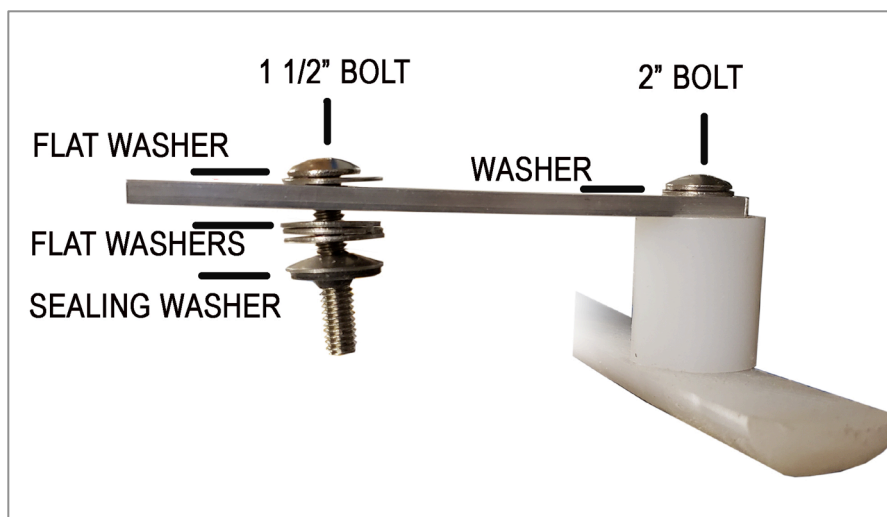

2

Install the bars on the dome side panel on each side as shown here.

