

T2QUICKNET: THE THIN, SELF-ADHESIVE HEATING MAT

How to install T2QuickNet

CABLE INSTALLATION	APPLY TILE ADHESIVE	TILE INSTALLATION	FINISHED FLOOR
Clean the floor. Apply a layer of adhesive primer. Roll out the heating mat on the floor.	Apply the tile adhesive directly on the T2QuickNet mat. In wet areas, apply a filler and watertight coating before the tile adhesive.	Spread the tile adhesive and let it cure according to instructions. Then install the tiles.	Seal tiles with silicone. Allow the floor to cure completely before turning the underfloor heating system on.

Attention:

- All electrical work must be performed by an authorised electrician.
- Make sure to use a floor covering that is suitable for underfloor heating.


Installation information

The installation of the T2QuickNet mat is fast, safe and smart:

- The T2QuickNet mat with pre-mounted heating cable is available in ready-made lengths.
- Only 3 mm thick; no need to raise floor levels.
- Self-adhesive backing; no need for glue or staples.
- Is laid directly in the filler or the adhesive.
- Needs only connection of one end of the heater. (Twin wire system).
- For rooms with a complicated shape the cable can be easily loosened from the net to cover all heating areas.
- The cable may not be shortened, extended or crossed.

Electrical connection T2QuickNet

Installation of the heating cable Thermostat + sensor	
Max. load without contactor to thermostat	3000 W
Thermostat	NRG - DM
Electrical connection T2QuickNet	
	T2QuickNet 160
Maximum heated area for 3000 W load	18 m ²
Cold lead length	5 m
Electrical protection circuit breaker	13 A max.
Fi earth leakage current (rcd)	30 mA, 100 ms

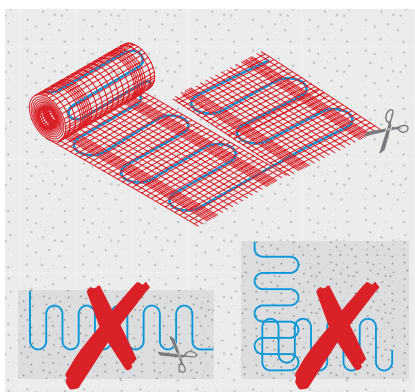

To make a turn, cut the mat (avoid damaging the cable) and turn.