




Thank you for purchasing a Gen 5 4 Runner side PSD.

1. Remove upper coat hook. Use 10 MM Socket. Remove small grocery bag hook in the rear corner. Remove screw.
2. Remove cap from forward position in luggage area. Remove 6 mm screw with 10mm socket. This will expose the threaded area for attachment.
3. Assemble the Side PSD rack to the upper bracket using 2 Bolts and nuts provided in kit. Leave loose.
4. Attach the 2nd bracket to the Side PSD with the bend facing in towards middle of 4 runner (the depends on which side you ordered the PSD for.) Use the 3 5/16 bolts included in kit. This bracket fits behind the PSD . You should be able to see the holes at bottom of PSD rack. These holes are supplied for hooks.
5. Attach the bent bracket under coat hook . Leave loose for adjustments. The bracket bottom should be facing towards glass.
6. Place 4.250 spacer in front hole closest to the front of 4 runner using 4.625" 6mm bolt. Use the horizontal slot for attachment. Leave loose.
7. Using supplied 1/2 Dia black 2.5 long spacer. Place behind rear in corner tab. Using 3.5 6 mm bolt. The rack may need to be slide forward on slot in front to adjust.
8. Tighten all bolts and nuts. Pull down on #7 till the top of the rack is even with the headliner at top. #7 should be behind rack. Not in front of rack.

**Follow this link for video for install.**

**<https://www.orangeboxxfabrication.com/psd->**

## [install-videos](#)

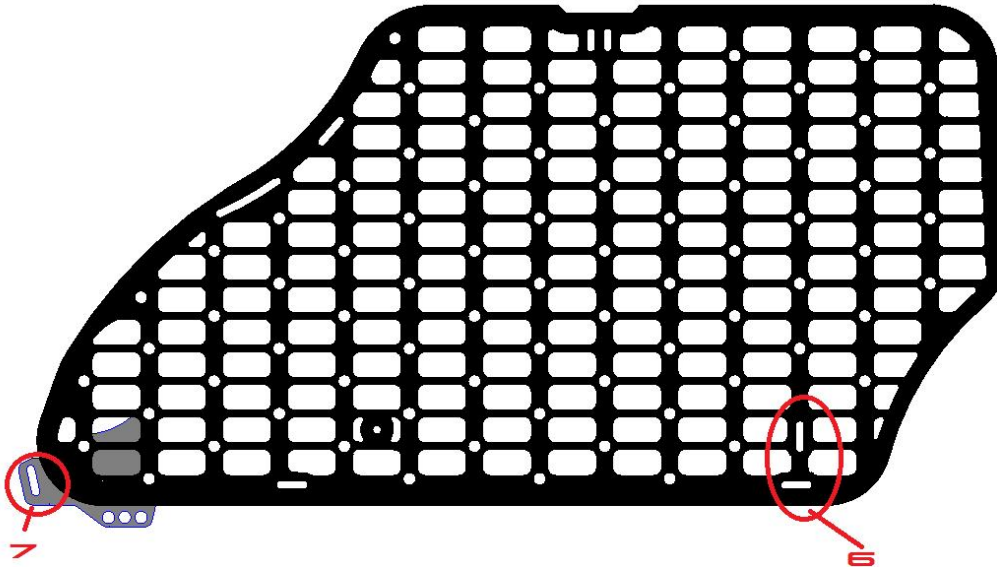

**Warning this product is not sturdy enough to hold any type of AIR tanks or Fire extinguishers. Please adhere to the warning listed for your safety.**