




Thank you for selecting Orange Boxx Fabrication . The following is to help guide you through the installation of your Basket Side PSD.

Your Full side PSD is made from .125 cold roll steel. It can take many years of punishment. Please follow the following instructions .

- A. Remove the nuts from the center of the coat hooks on left side.
- B. Using hardware provided .attach upper hook to back side of PSD rack using (B) bolt kit.
- C. Attach Stand off (D) to the lower left of PSD rack. Tighten this down
- D. Attach Stand off (E) to lower right of PSD Rack. Tighten this downm.
- E. Remove upper coat hook from the ceiling using a 10 mm socket. Keep plastic hook and bolt handy.
- F. Place upper hook of the PSD rack under the upper coat hook and losely to the ceiling.
- G. Place Spacer (C) in slotted holes on each side of rack that lines up to the coat hooks from line A. Becareful not to cross thread these.
- H. Tight all bolts and nuts.
- I. Place Decal on outside rear of FJ.
- J. These **are not** rated to hang Air Tank on them.

If you have any problems feel free to contact us. 336 337 6311

or Email [orangeboxxfab@gmail.com](mailto:orangeboxxfab@gmail.com)

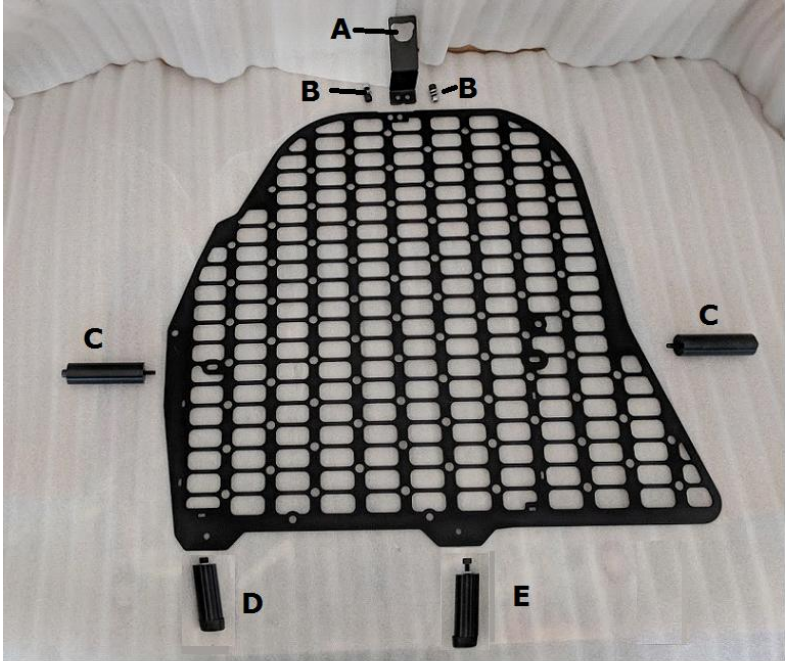

FJ FULL Drivers Side

- A. 1- Upper hook
- B. 2- 6mm bolt kits
- C. 2- 3.375 spacers with bolts
- D. 1- 2.90 Stand off
- E. 1- 3.15 Stand off