




Thank you for purchasing a GX-470 side PSD.

1. Remove upper handle above rear window.
- 2 . Assemble the PSD rack with handle mount facing you. There is a larger end on the rack mount for each side. Rack mount will look sort of like a dog bone. It follows the seam from headliner. Do not tighten bolts. Leave loose.
3. Fig A is for mounting upper handle using stock bolts through.
4. Place assembled PSD rack to the side mounting on. Placing upper bracket under handle. Leave loose for finale adjusting.
5. Adjust PSD rack side to side to locate desired clearance for hand to open rear window and tighten all bolts.
6. Using 1.750 spacers assemble to rack Fig B. Place between rack and side of GX 470 rubber foot towards interior

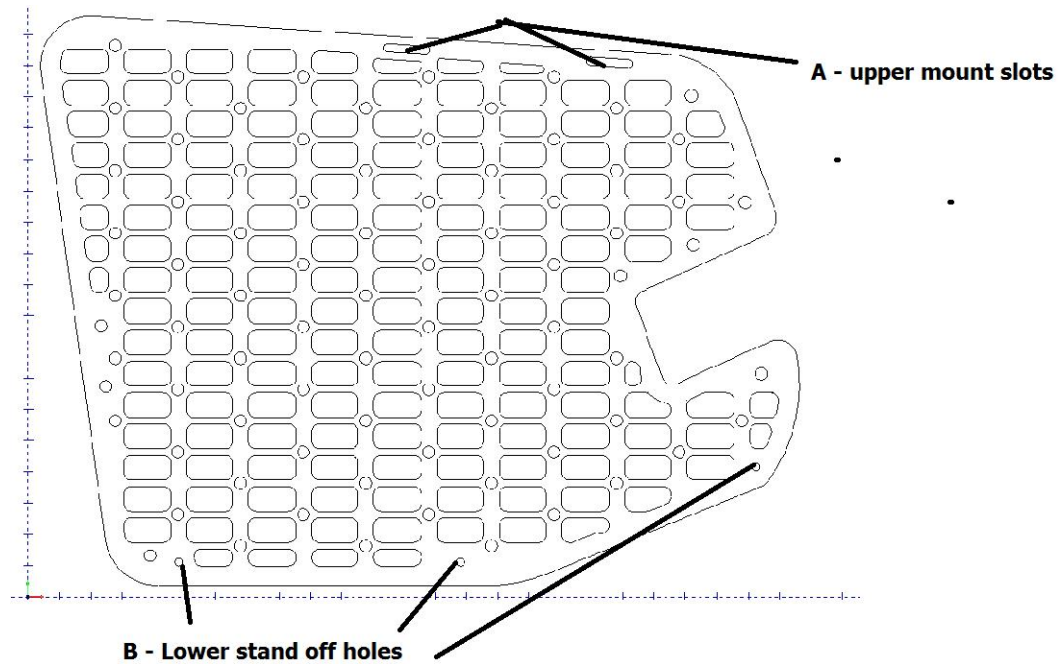

7. Heavy Duty mounts Mark "B" holes at bottom Using an 1/2 drill or xacto knife, Cut hole in the bottom to mount the white plugs. Using bolt included in your kit through the metal PSD and through spacer into the plastic bung.

Warning this product is not sturdy enough to hold any type of AIR tanks or Fire extinguishers. Please adhere to the warning listed for your safety.