


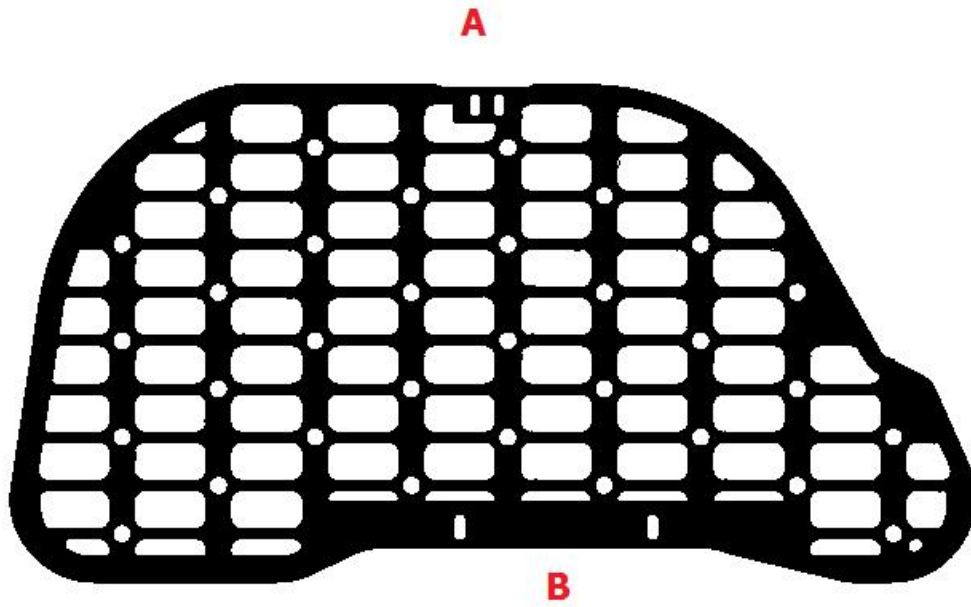

Thank you for purchasing the Obove Speaker PSD.

1. Remove upper coat hook. Remove the speaker.
2. Remove the 2 upper screws from back side of speaker.
3. Install speaker bracket with portion of it hanging over the speaker with supplied screws.
4. Install upper bracket to top of PSD rack. **A** area with 6 mm bolt kit
5. Install speaker back in FJ
6. Install PSD under hook in top of FJ leave loose. **A**
7. Install 5/16 bolts through bottom of PSD rack **B**



**Warning this product is not sturdy enough to hold any type of AIR tanks or Fire extinguishers.  
Please adhere to the warning listed for your safety.**