


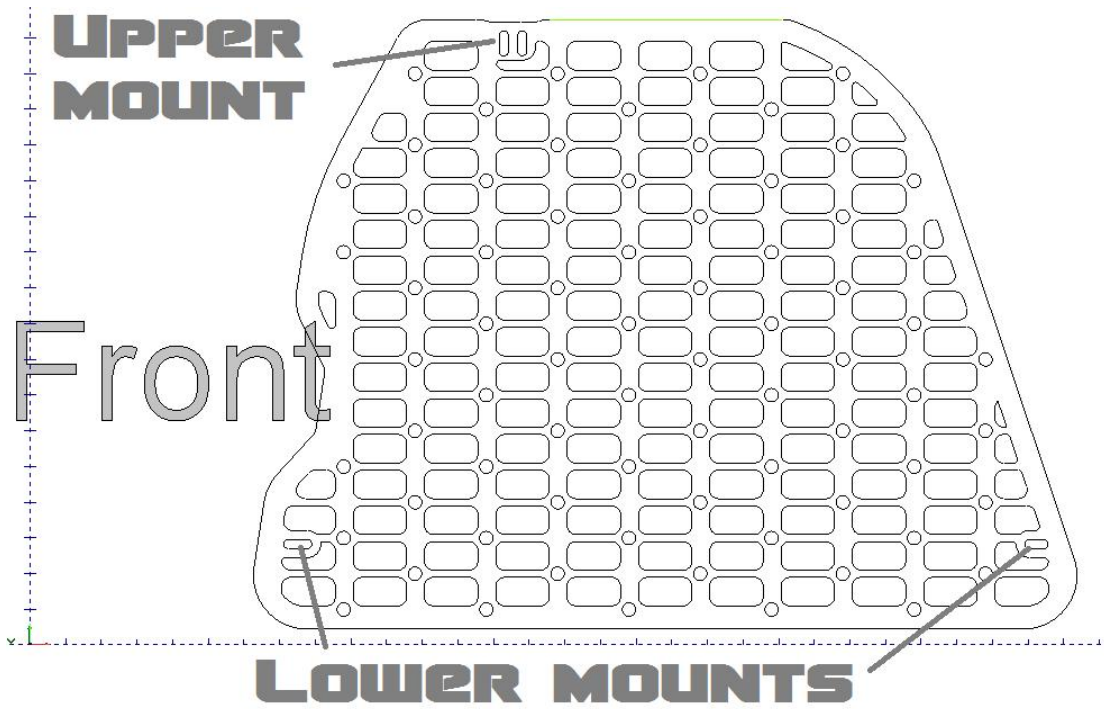

Thank you for purchasing a Gen 1 4 Runner side PSD.

1. Place rack up to rear side window. Determine which of the side window bolts to remove.
2. Upper mount bolt uses the stock bolt. Mount upper bent bracket in kit loose to the rack.
3. Install the rack to truck with upper bracket. Do not over tighten the bolt in top.
4. Remove the bolts in side window. Keep for later (they are hard to find). Using the supplied stand off spacer 1.3750long install the lower bolts M5x2.00 large washer on outside.tighen the lower bolts first then the upper bracket to the rack.
5. The rack holds 25LBS per side. Do not exceed the weight limit. You are bolting into a plastic bung.



**Warning this product is not sturdy enough to hold any type of AIR tanks or Fire extinguishers.
Please adhere to the warning listed for your safety.**