


**\*All Dimensions Reflect Suggested Mortise prep. (Actual Trim Dimensions Are Slightly Smaller)**

Bore pocket as required  
 - Thru for both sides OR  
 1 1/16" Deep One side only

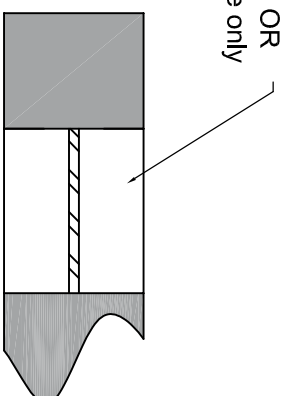

INSERT  
 CENTERLINE OF TRIM HERE (this should match the backsets on the rest of the project)  
 ref. 2 1/2" 2 3/4" 3 1/4" 5" or 6"

**\*Pre-drill screw holes, then Mount the trim with the screws provided.**

