


INSIDE
OF DOOR

OUTSIDE
OF DOOR

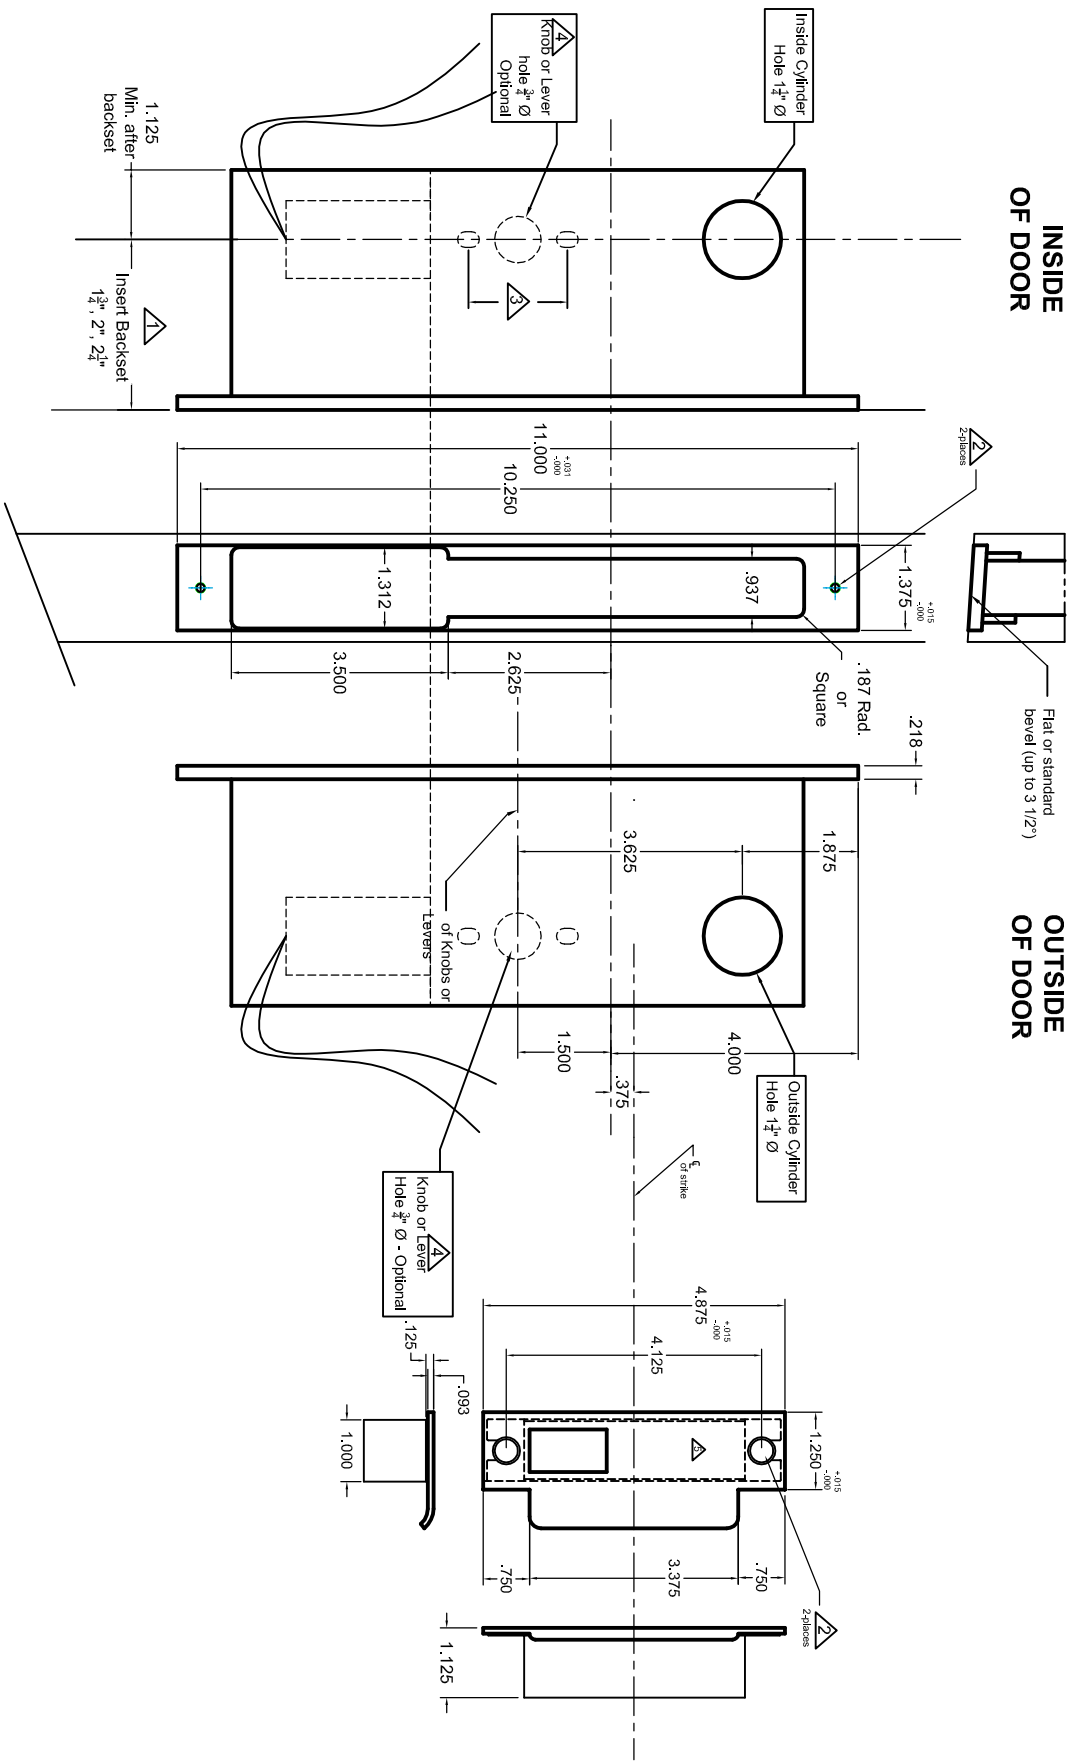

Notes:

- Insert backset here 1 $\frac{3}{4}"$, 2", 2 $\frac{1}{4}"$
- Prep for #12 wood or 12-24 machine screws
- Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details.
- Accurate lock accommodates 1 $\frac{1}{2}"$ to 1 $\frac{11}{16}"$ center to centers and up to $\frac{1}{4}"$ dia. post.
- If there are any additional questions about the trim-bolting, please contact our office.
- Lever holes (if needed) may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.
- If door silencers are used on the frame, locate center line of strike from the surface of the silencer

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us if a double lip strike is needed - for a proper template
- c) See catalog / spec sheets for additional lock details.

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Standard 8858-ELR Lever x Lever
or Knob x Knob Template
All Backsets - Wood door only

Temp# T-ALH.8858-ELR.Wood