



**INSIDE
OF DOOR**

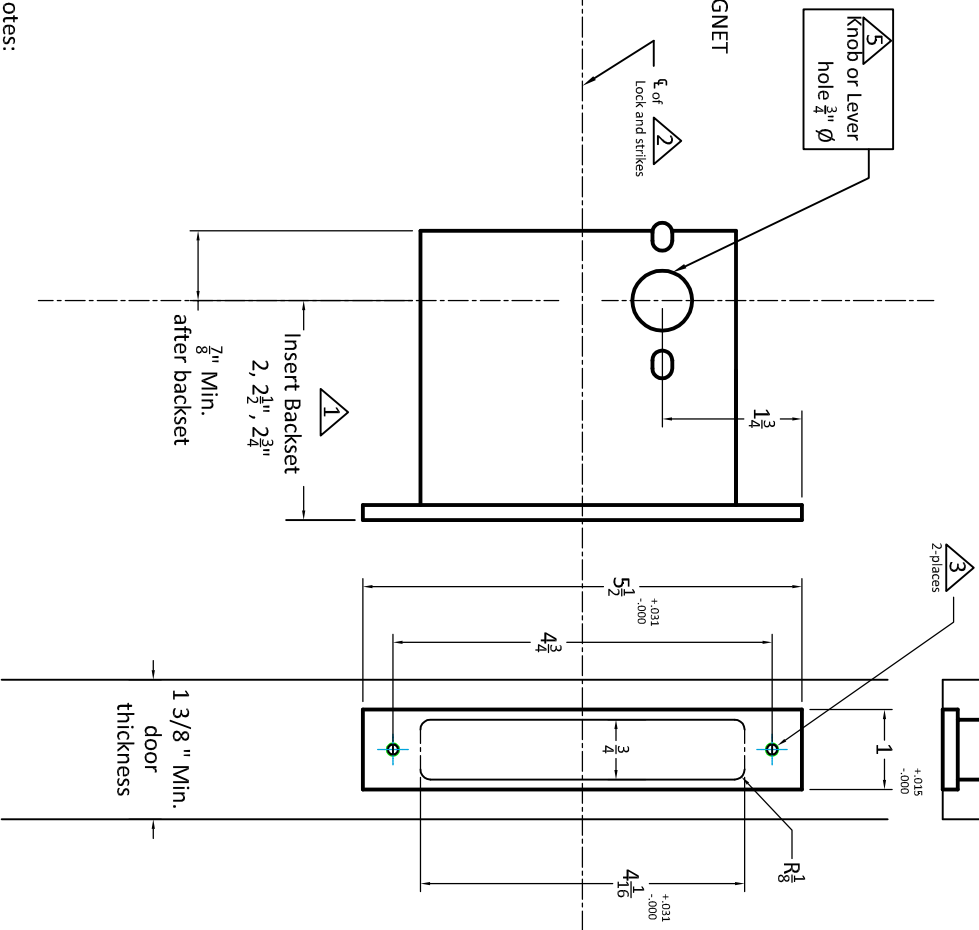

**OUTSIDE
OF DOOR**

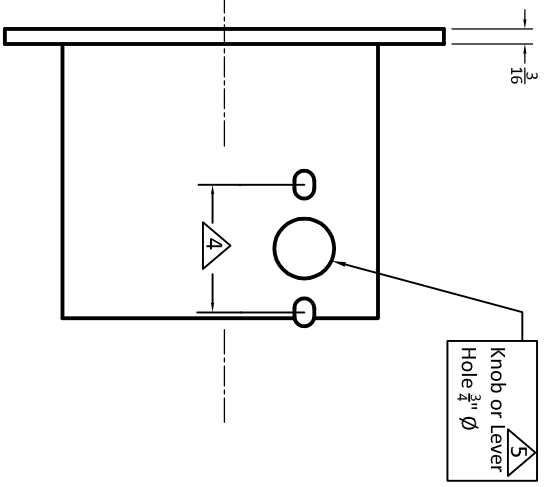

Notes:

- △ Insert backset here 2, 2 1/4" or 2 3/4"
 - △ Centerline of strike and front are the same.
 - △ Prep for #8 wood or 8-32 machine screws.
 - △ Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details.
- Accurate lock's accommodates 1 1/2" to 1 1/8" center to centers and up to 1/4" dia. post.
If there are any additional questions about the thru-bolting, please contact our office.
Knob holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility** : Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details



ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Standard 9525ML Magnetic Passage
Latch - All Backsets

T-ALH.9525ML