



\*All Dimensions Reflect Suggested  
Mortise prep. (Actual Trim Dimensions  
Are Slightly Smaller)

\*Pre-drill screw holes, then Mount  
the trim with the screws provided.

INSERT  
CENTERLINE OF TRIM HERE (this should match  
the backsets on the rest of the project  
ref. 2½" 2¾" 3¾" 5" or 6")

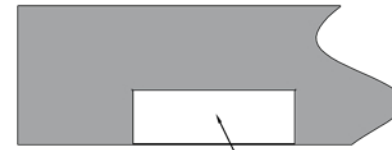

Bore pocket as required - Thru for both  
sides or One side only  
Minimum depth 11/16"

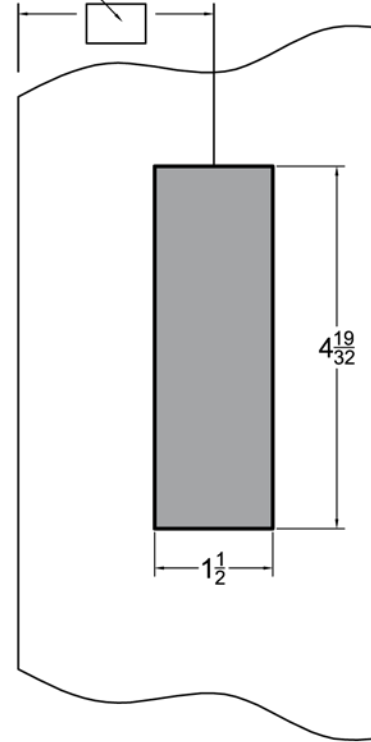

Standard FC5007  
Flush Pull Template

T-ALH.FC5007