


**OUTSIDE
OF DOOR**

Common to Lock, Strike and Door

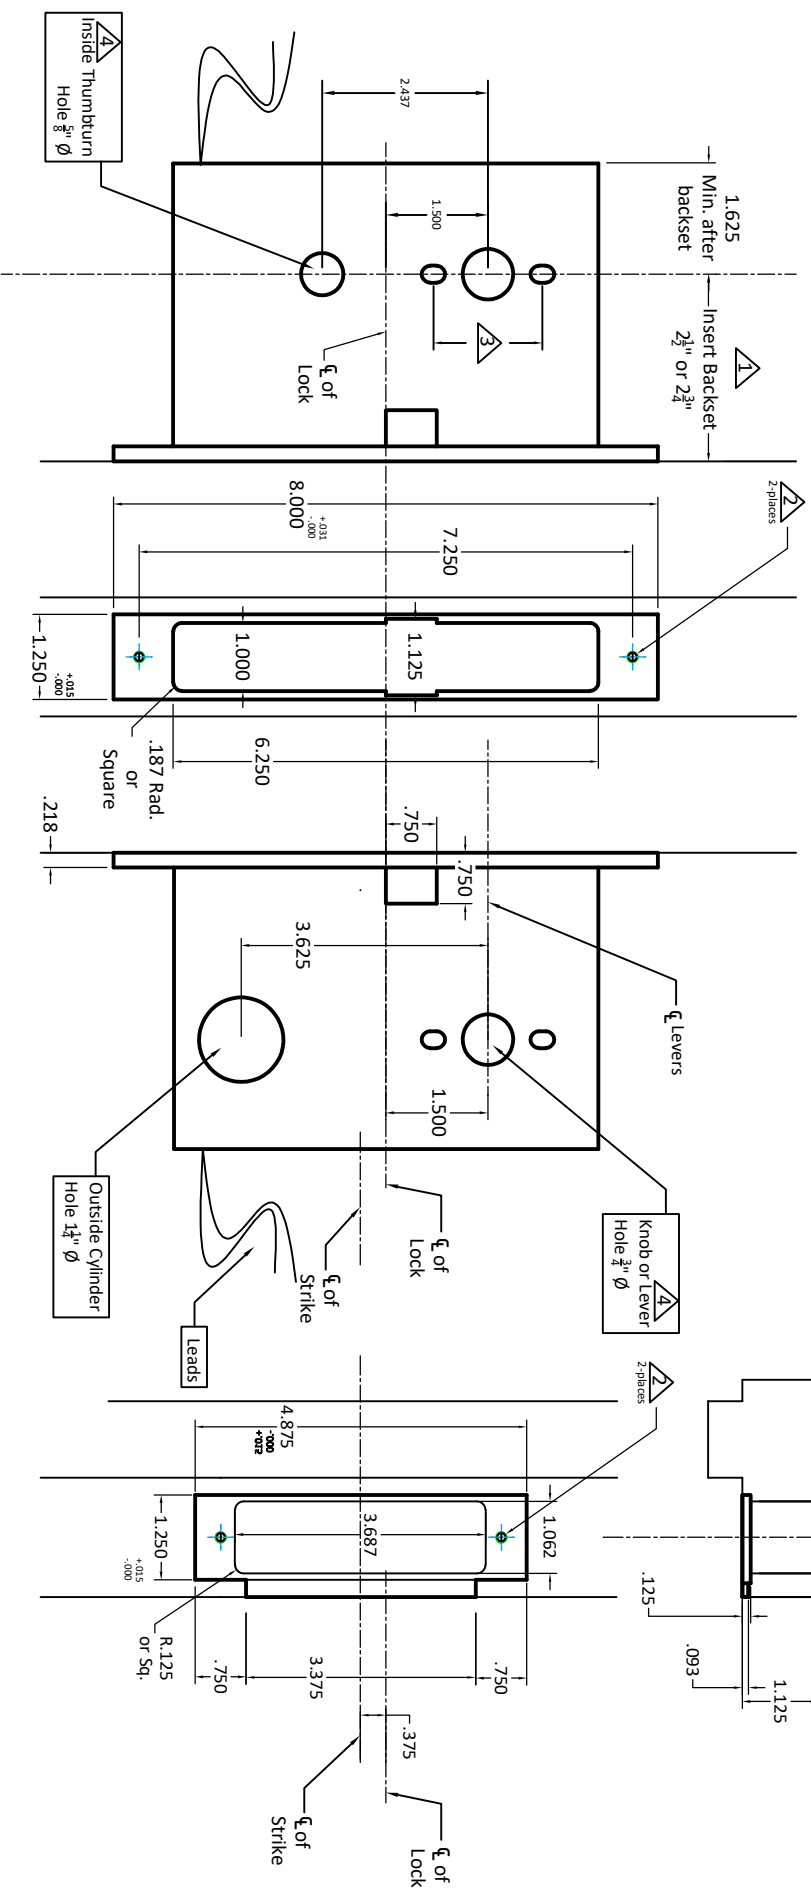

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Notes:

- ▷ Insert backset here 2½" or 2¾"
 - ▷ Prep for #12 wood or 12-24 machine screws
 - ▷ Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details.
- Accurate lock's accommodates 1½" to 1½" center to centers and up to ¾" dia. post. If there are any additional questions about the thru-bolting, please contact our office.
- Knob / Lever / Thumbturn holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility.** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us if a double lip strike is needed - for a proper template
- c) See catalog / spec sheets for additional lock details

M9134EUSD, M9134EUSD-DS,
M9167EUSD Template

T.ALH.M9134EUSD /
M9134EUSD-DS / M9167EUSD