



**\*All Dimensions Reflect Suggested  
Mortise prep. (Actual Trim Dimensions  
Are Slightly Smaller)**

Bore pocket as required  
- Thru for both sides OR  
1 1/16" Deep One side only

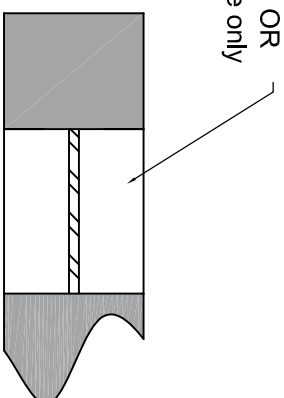

INSERT  
CENTERLINE OF TRIM HERE (this should match  
the backsets on the rest of the project)  
ref. 2 1/2" 2 3/4" 3 3/4" 5" or 6"

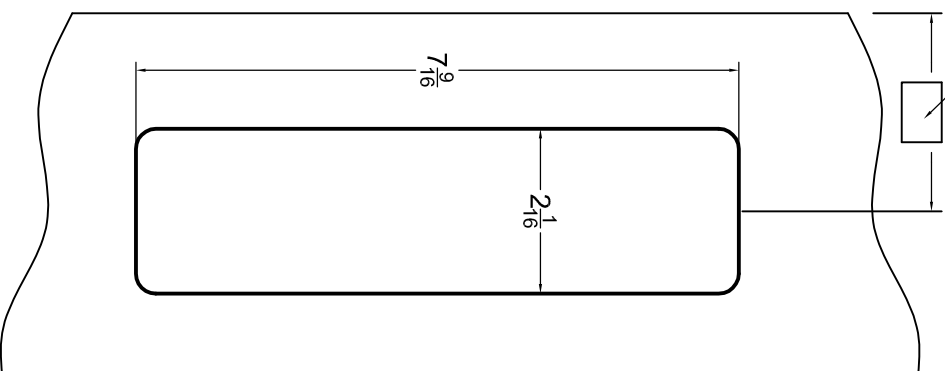

**\*Pre-drill screw holes, then Mount  
the trim with the screws provided.**



**ACCURATE**  
LOCK & HARDWARE  
AMERICAN CRAFTED SINCE 1972

**Flush Pull: FE9006B**

**T-ALH.FE9006B**