


**INSIDE  
OF DOOR**

**OUTSIDE  
OF DOOR**

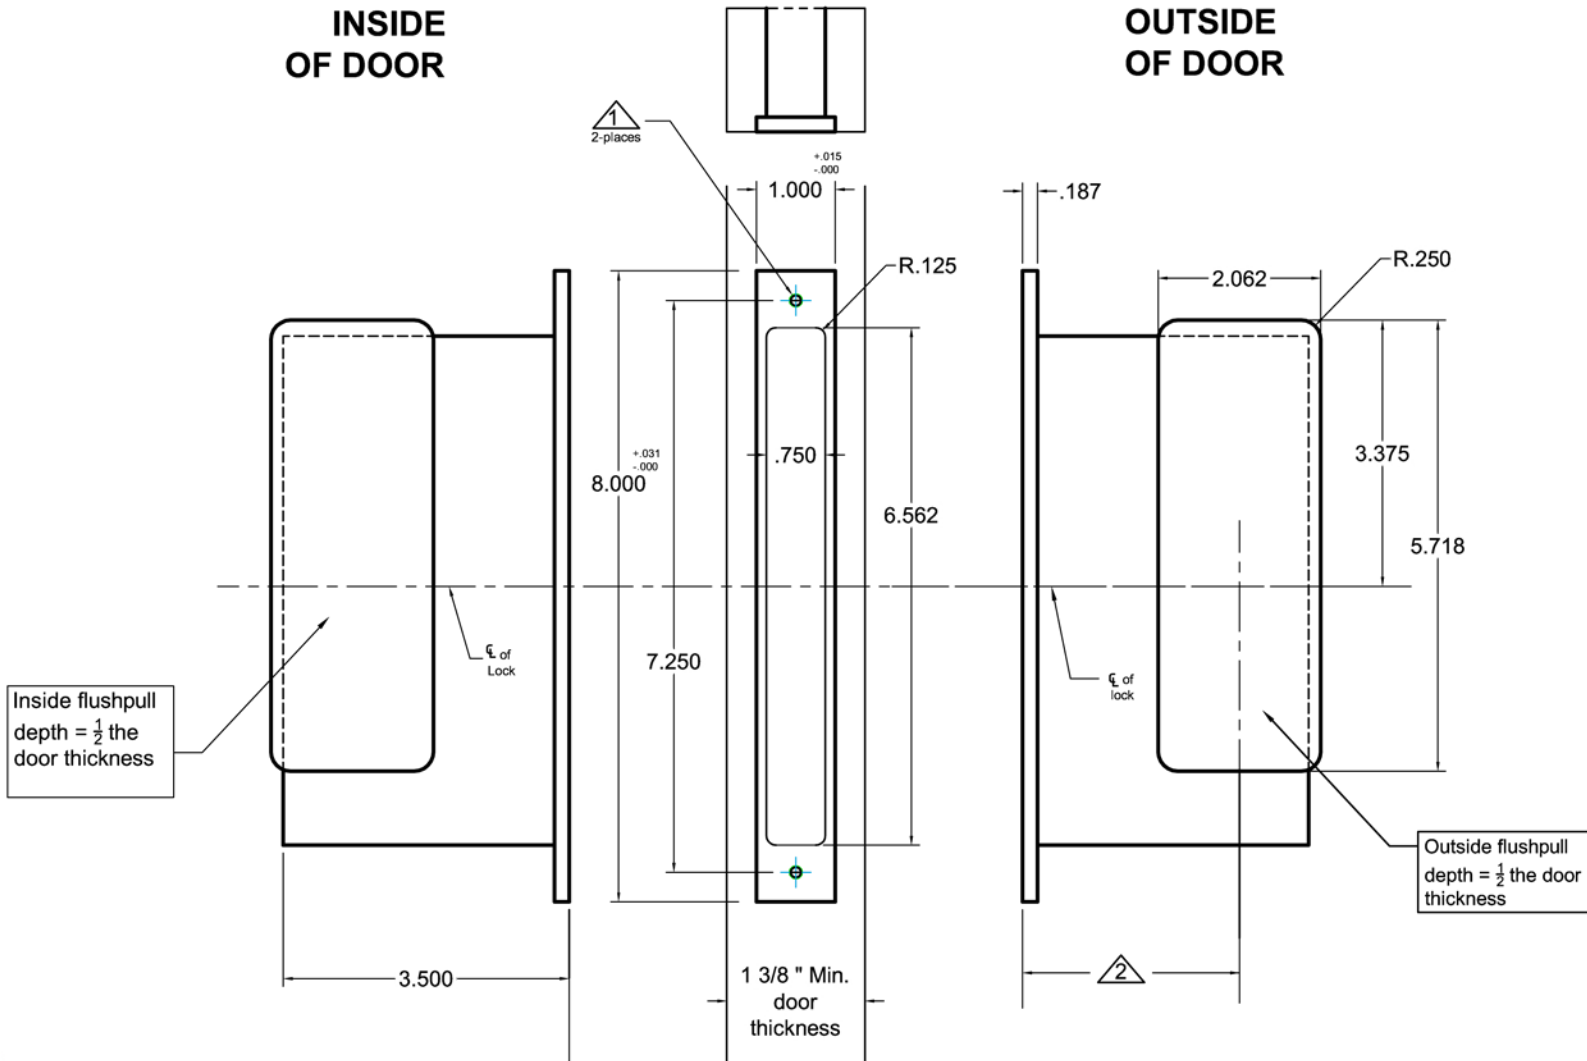

**Notes:**

- ▲ Prep for #8 wood or 8-32 machine screws.
- ▲ Horizontal and vertical spacing of the flush pulls is up to the end user. However, we do suggest to line up the backset with the other locks on your project, i.e. 2", 2 1/2", 2 3/4", 3 3/4", 5" and 6"

**Additional Notes:**

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional details



Standard 2011PDP x S2002  
or CS2002 Flush Pulls

T-ALH.2011PDP.S