


***All Dimensions Reflect Suggested
Mortise prep. (Actual Trim Dimensions
Are Slightly Smaller)**

Bore pocket as required
- Thru for both sides OR
11/16" Deep One side only

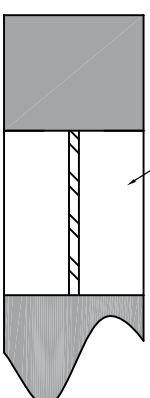

INSERT
CENTERLINE OF TRIM HERE (this should match
the backsets on the rest of the project)
ref. 2 1/2" 2 3/4" 3 1/4" 5" or 6"

***Pre-drill screw holes, then Mount
the trim with the screws provided.**

