


INSIDE  
OF DOOR

OUTSIDE  
OF DOOR

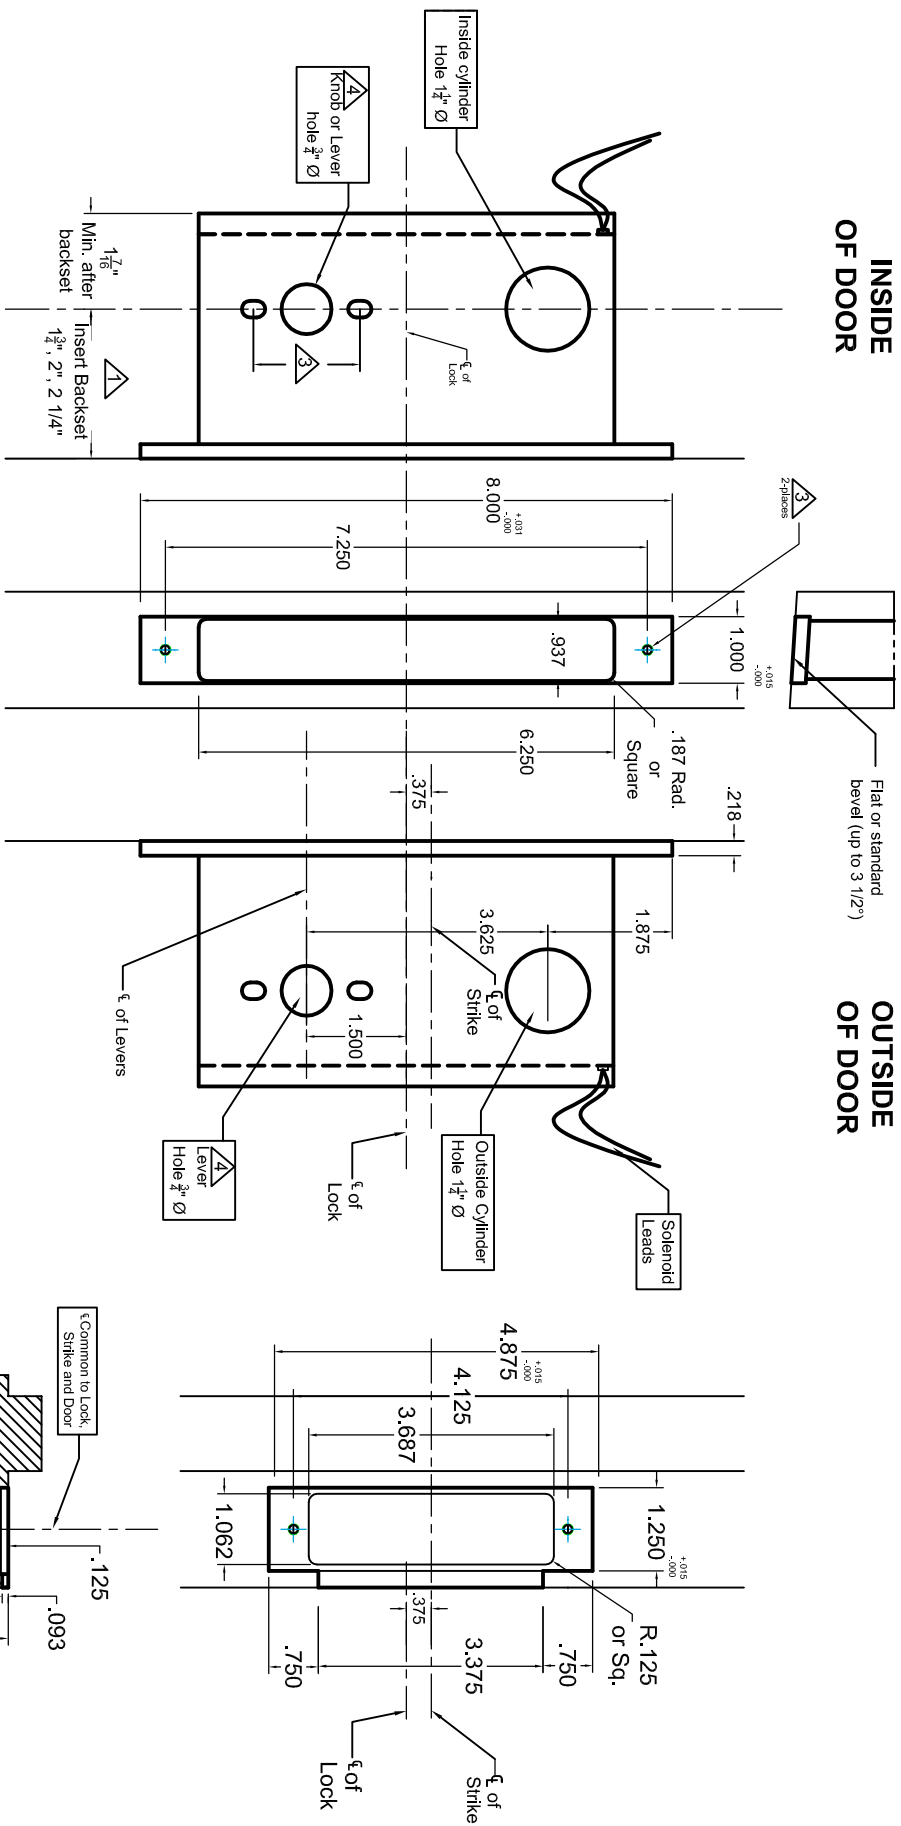

# ACCURATE

## LOCK & HARDWARE

AMERICAN CRAFTED SINCE 1972

Standard M8758E Template

All Backsets

**Notes:**

- ▲ Insert backset here  $1\frac{3}{4}"$ ,  $2"$ ,  $2\frac{1}{4}"$
- ▲ Prep for #12 wood or #12-24 machine screws
- ▲ Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details.
- ▲ Accurate lock's accommodates  $1\frac{1}{2}"$  to  $1\frac{11}{16}"$  center to centers and up to  $\frac{3}{4}"$  dia. post. If there are any additional questions about the thru-bolting, please contact our office.
- ▲ Lever holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

**Additional Notes:**

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us if a double lip strike is needed - for a proper template
- c) See catalog / spec sheets for additional lock details

T-ALH.M8758E