


— E S T. 1987 —

AHB


HOME FURNITURE COLLECTIONS ASSEMBLY INSTRUCTIONS NADIA STOOL

LOOSELY ATTACH SCREW UNTIL FRAME IS ASSEMBLED THEN TIGHTEN WHEN COMPLETE


1 Attach leg to base frame and foot ring by using 12pcs short allen bolt (A).

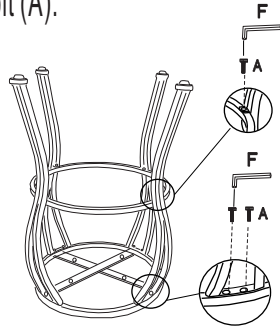


2 Attach swivel plate to chair base by using 4pcs long allen bolt (B), 4pcs locker washer (D) and 4pcs flat washer (E).

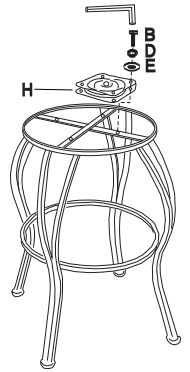


3 Attach back to seat frame by using 3pcs long bolt (C).

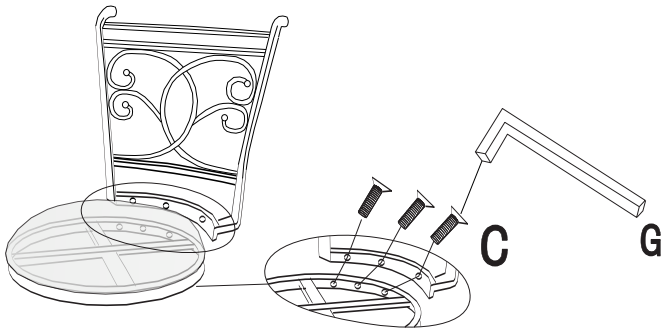

4 Attach swivel plate to seat frame by using 4pcs long allen bolt (B), 4pcs lock washer (D) and 4pcs flat washer (E).

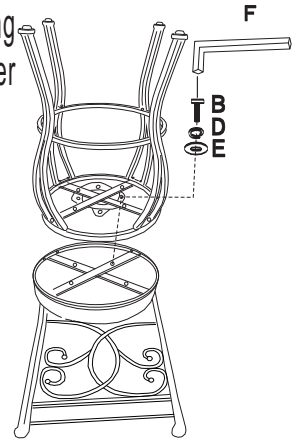

5 Assembly is complete.

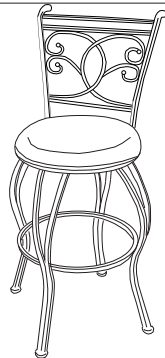

IMPORTANT NOTE:
HARDWARE PACK LOCATION



Hardware Box

HARDWARE PACK

MADE IN CHINA

CHECK THAT THE FOLLOWING PARTS ARE IN CARTON

A	B	C	D	E	F	G	H
Short Allen Bolt 1/4"*12mm 12 PCS	Long Allen Bolt 1/4"*15mm 8 PCS	Long Bolt 5/16"*20mm 3 PCS	Lock Washer 1/4" 8 PCS	Flat Washer 1/4" 8 PCS	Allen Wrench 4mm 1 PC	Allen Wrench 5mm 1 PC	Swivel Plate 160*160*25mm 1 PCS

DO YOU HAVE A QUESTION CONCERNING YOUR AMERICAN HERITAGE BILLIARDS PRODUCT? PLEASE CONTACT THE RETAILER YOU PURCHASED YOUR FURNITURE FROM TO GET MORE INFORMATION ON THE PRODUCT. IF YOU CANNOT CONTACT THE RETAILER YOU PURCHASED FROM, PLEASE SEND US AN INQUIRY TO OUR WEBSITE AND WE'LL DO OUR BEST TO HELP. THANK YOU FOR YOUR SUPPORT!