

— EST . 1987 —

A H B

HOME FURNITURE COLLECTIONS


ASSEMBLY INSTRUCTIONS
PORTLAND STOOL

LOOSELY ATTACH EACH SCREW UNTIL FRAME IS ASSEMBLED THEN TIGHTEN WHEN COMPLETE

1

STEP 1


1) Attach swivel plate (D) to the bar stool base using the four bolts (A) and then lock washer (B) & flat washer (C). Tighten all bolts evenly and then turn each bolt 1/4 turn for final fasten.

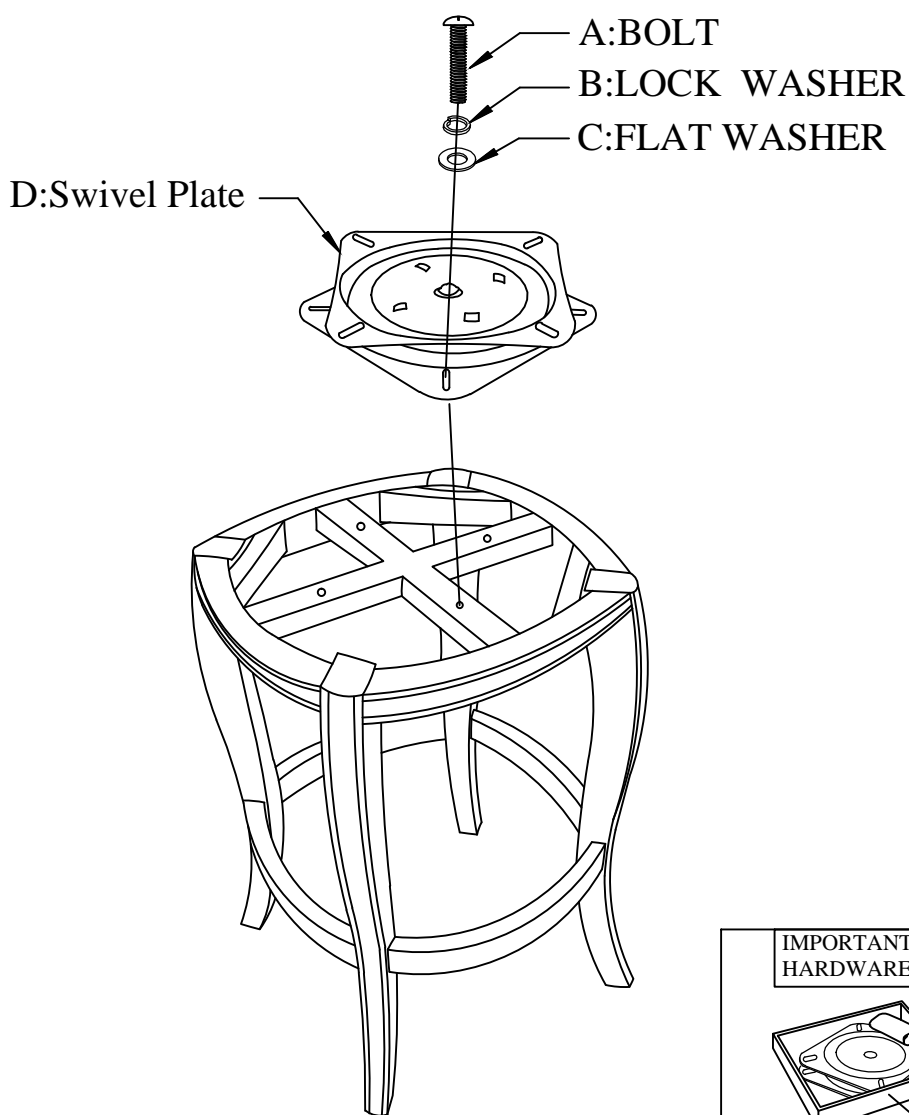


2

STEP 2

2) Attach bar stool seat to swivel plate, which is now attached to the bar stool base. Attach bar stool seat using four bolts (A) and then lock washers (B) & flat washers (C). Tighten all bolts evenly and then turn each bolt 1/4 turn evenly for final fasten.

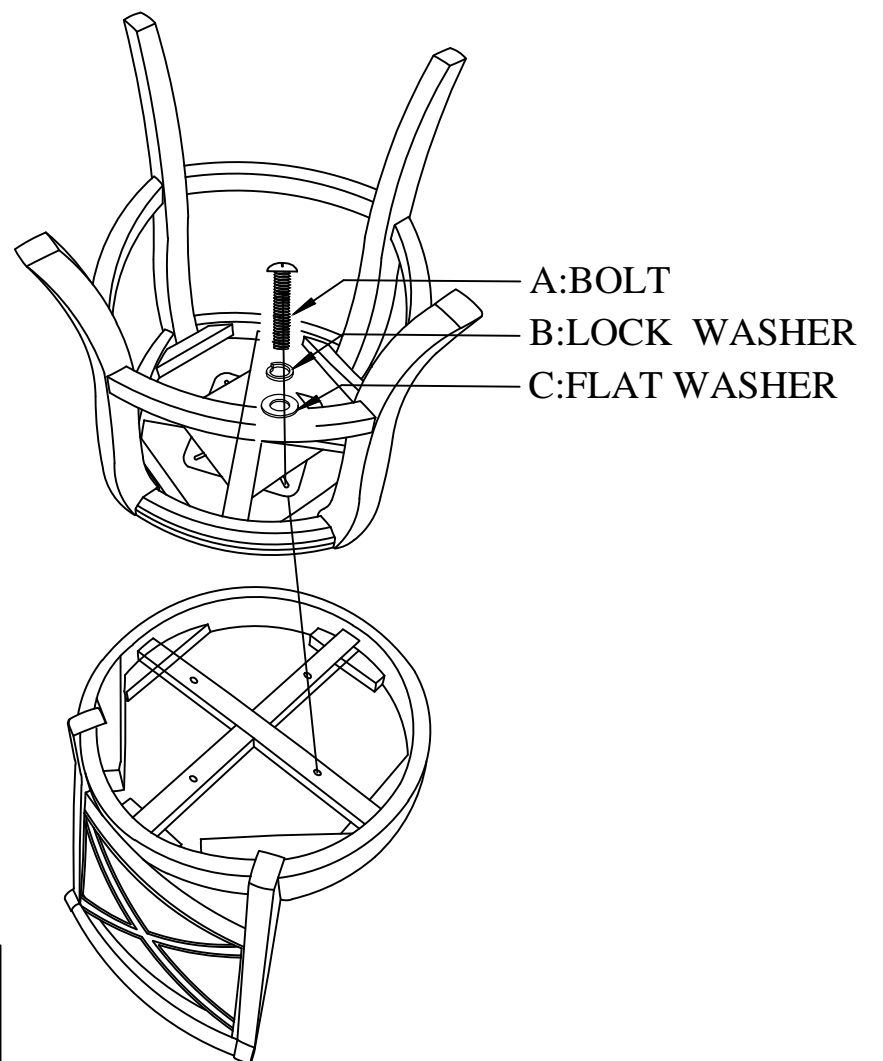

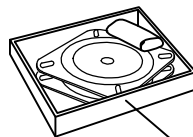



IMPORTANT NOTE:
HARDWARE PACK LOCATON




Hardware Box

* PLEASE READ INSTRUCTION PRINTED ON SWIVEL PLATE
HARDWARE PACK
CHECK THAT THE FOLLOWING PARTS ARE IN CARTON

PARTS LIST

A	B	C	D
			
BOLT	LOCK WASHER	FLAT WASHER	SWIVEL PLATE
1/4"*7/8"	1/4"	1/4"*16mm	8"*8"*22mm
8 PCS	8 PCS	8 PCS	1 PC

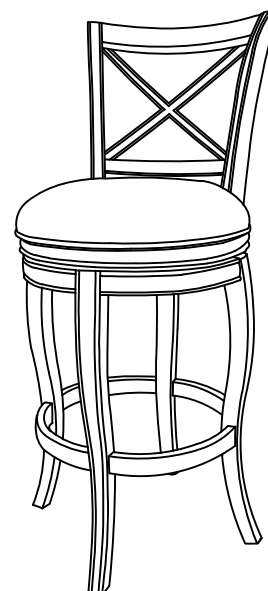

MADE IN CHINA