

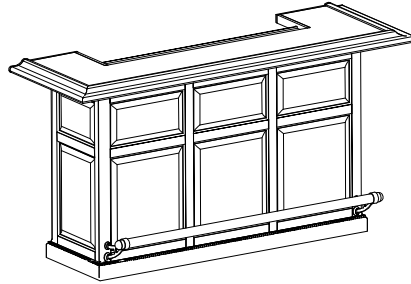
— EST. 1987 —
















**A H B**

HOME FURNITURE COLLECTIONS  
ASSEMBLY INSTRUCTIONS  
CATANIA BAR

DO NOT SET POWER DRILL ABOVE LEVEL 4

LOOSELY ATTACH EACH SCREW UNTIL FRAME IS ASSEMBLED, THEN TIGHTEN WHEN COMPLETE



	HARDWARE LIST	QTY	OUTLOOK
A	HEX BOLT( $\phi$ 5/16"*1-1/8mm)	2	 SCALE 1 : 1
B	LOCK WASHER( $\phi$ 5/16")	2	 SCALE 1 : 1
C	FLAT WASHER( $\phi$ 5/16"*19mm)	2	 SCALE 1 : 1
D	ANCHOR	2	
E	WRENCH(12mm)	1	
F	P.H SCREW( $\phi$ 8*1")	2	 SCALE 1 : 1
G	FOOT RAIL	1	
H	FOOT RAIL COVER	2	
I	SET SCREW (M5*8mm)	2	  SCALE 1 : 1
J	CUP HOLDER	4	 AMERICAN HERITAGE
K	BAR TOP SCREW (1-1/4")	10	 SCALE 1 : 1
L	DOOR BOLT ( $\phi$ 5/32"*1-1/8")	4	
M	DRAWER BOLT ( $\phi$ 5/32"*1-1/2")	4	
N	HANDLES	4	

— EST. 1987 —

# A H B

HOME FURNITURE COLLECTIONS

ASSEMBLY INSTRUCTIONS

CATANIA BAR

DO NOT SET POWER DRILL ABOVE LEVEL 4

LOOSELY ATTACH EACH SCREW UNTIL FRAME IS ASSEMBLED, THEN TIGHTEN WHEN COMPLETE

