

Installing your



For Flat Bottom (and slightly curved) Seats Only!


1. **Raise** the toilet seat up. With warm water (or alcohol), **clean the spot** where you will be installing the Sani Hani. Allow to **dry**.
2. **Peel** the protective layer on the back of the adhesive.
3. Carefully **align** the edge of the Sani Hani with the edge of the toilet seat (handle facing up) and **press** hard for 5 seconds.
4. Congratulations! Your Sani Hani is ready to **use**.



Instalando el Sani Hani

¡Solo para asientos de fondo plano (y ligeramente curvados)!

1. **Levante** el asiento del inodoro. Con agua tibia (o alcohol), **limpie el lugar** donde va a instalar el Sani Hani. Deje secar.
2. **Pele** la capa protectora en la parte posterior del adhesivo.
3. **Alinee** con cuidado el borde del Sani Hani con el borde del asiento del inodoro (con la manija hacia arriba) y presione con fuerza durante 5 segundos.
4. ¡Felicitaciones! Su Sani Hani está listo para **usar**.

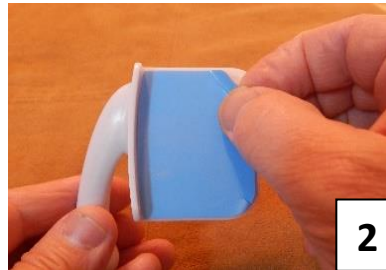

Installation du Sani Hani

Pour les sièges à fond plat (et légèrement incurvés) uniquement

1. **Soulevez** le siège des toilettes. Avec de l'eau chaude (ou de l'alcool), **nettoyez** l'endroit où vous allez installer le Sani Hani. Laisser sécher.
2. **Peler** la couche de protection à l'arrière de l'adhésif.
3. **Alignez** soigneusement le bord du Sani Hani avec le bord du siège de la toilette (poignée vers le haut) et appuyez fort pendant 5 secondes.
4. Félicitations! Votre Sani Hani est prêt à **l'emploi**.

