

INSTRUCTION: DOWNGRADING THE FPS (PART 1)

If the Covert Ops is shooting over your field's FPS limit, we have included an optional downgrade valve to lower its FPS.

1. Remove the entire slide assembly from the frame.
(Refer to "Adjust the Hop-Up")




2. Remove the recoil spring guide, recoil spring, and recoil spring plug.



3. Rotate and remove the barrel bushing.




4. Push forward and remove the entire barrel assembly.

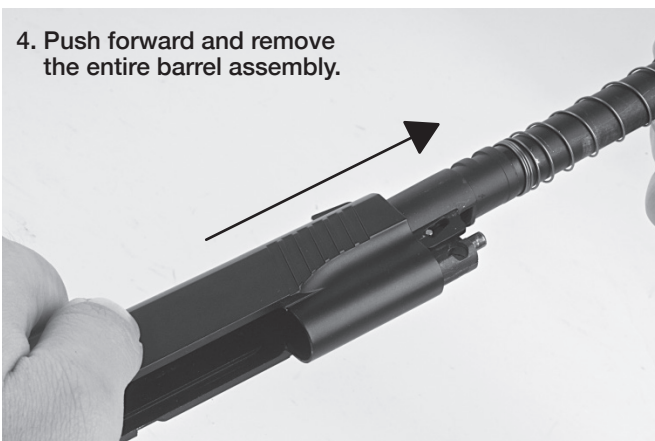

5. Use a hex key and remove the screw from the back of the slide.




6. Gently remove the blow back housing.

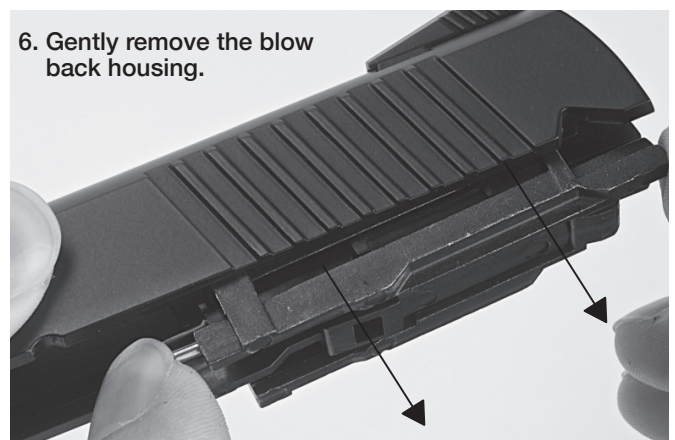

7. Remove the nozzle spring and nozzle spring guide.




8. Slowly pull out the loading nozzle and let the original valve fall out.

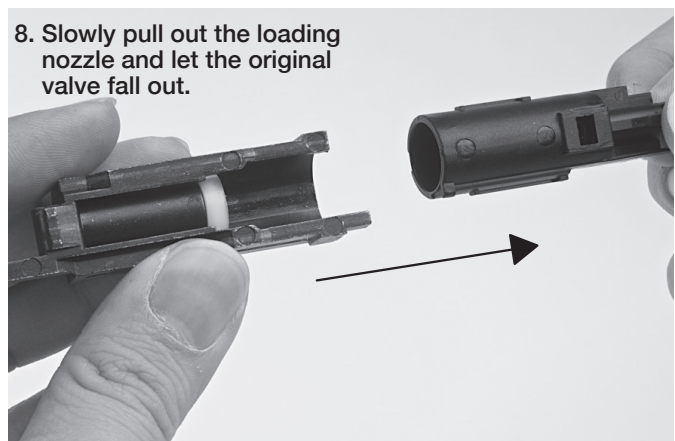


INSTRUCTION: DOWNGRADING THE FPS (PART 2)




9. Replace the original valve with the downgrade valve.

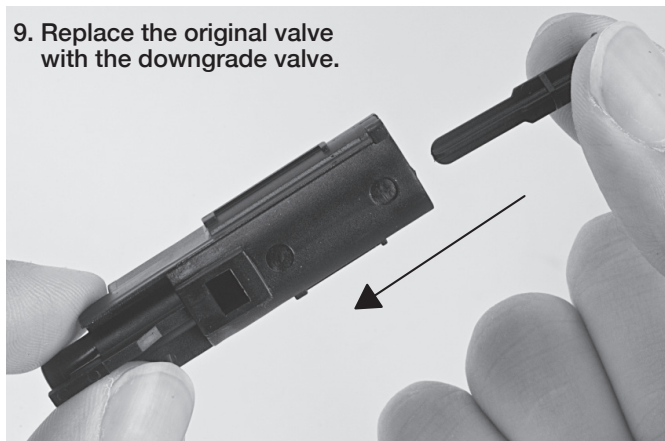


10. Reinstall the loading nozzle, nozzle spring, and nozzle spring guide.

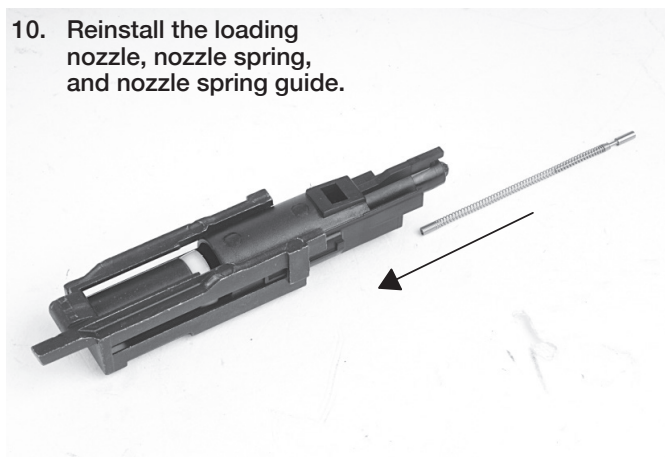


11. Carefully reinstall the blowback housing (Be sure to keep the nozzle spring and nozzle spring guide depressed when installing)

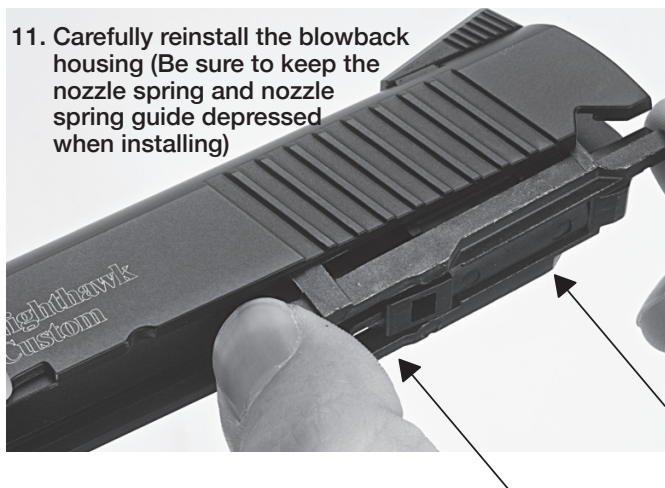

12. Screw the hex screw back into the rear of the slide.

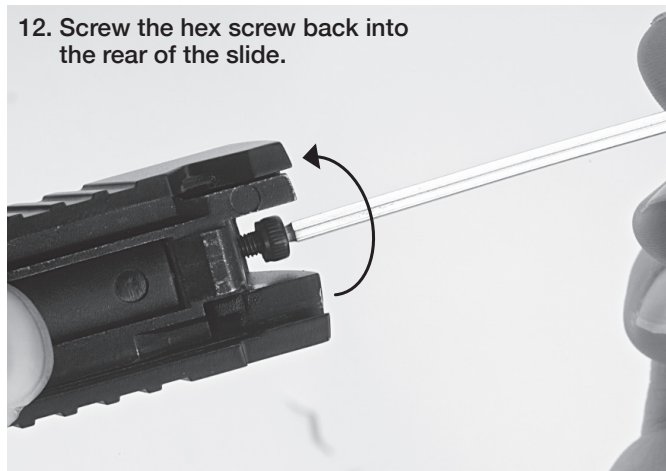

13. Reinstall the barrel assembly, barrel bushing, recoil spring plug, recoil spring, and recoil spring guide in the respective order.

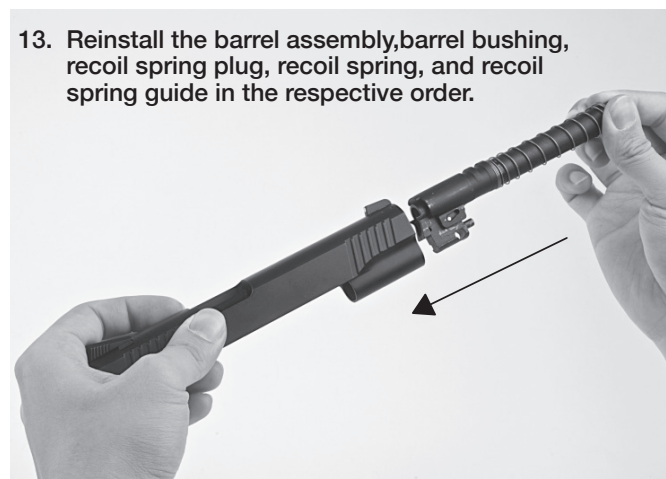

14. Reassemble pistol and reinstall the slide stop.



**Scan To View
Installation
Tutorial**

URL:
<https://goo.gl/aQ5Atg>



Notice the middle portion of the original valve has no extra material, whereas the downgrade valve has extra material.