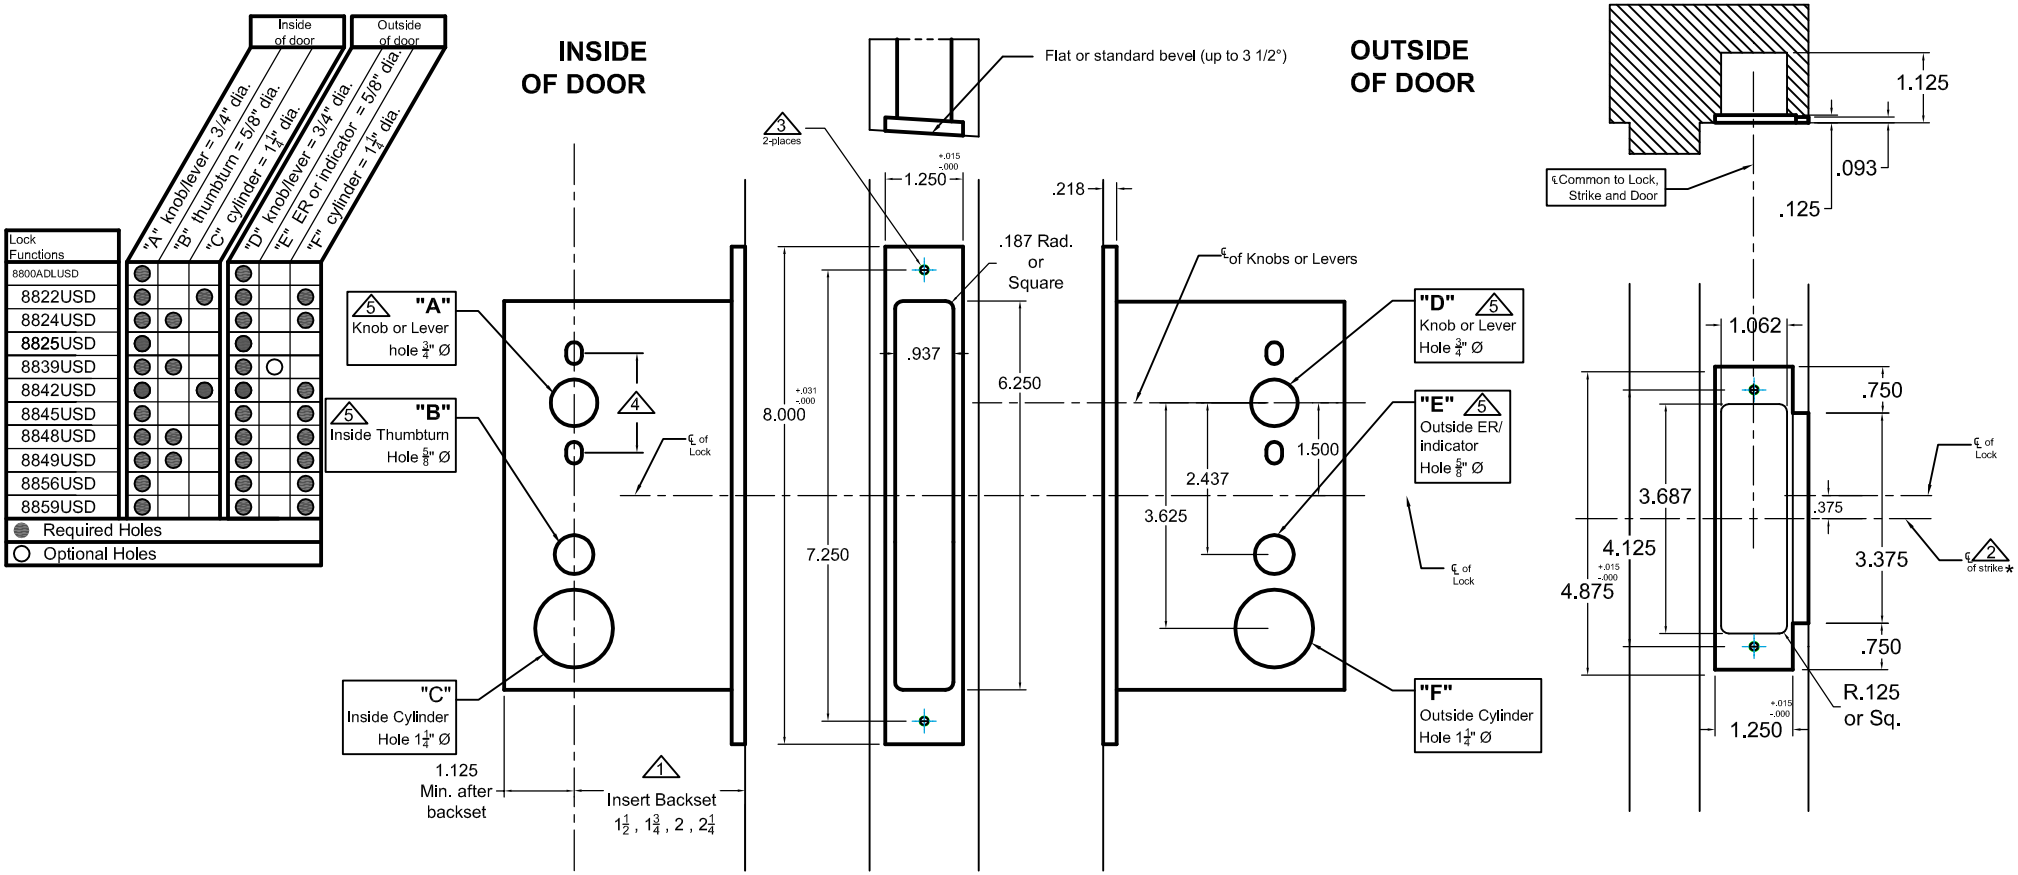

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Notes:

1. Insert backset here 1 1/2", 1 3/4", 2", 2 1/4"
2. Centerline of strike is 3/8" below Centerline of lock
3. Prep for #12 wood or 12-24 machine screws **(lock and strike)**
4. Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details. Accurate lock's accommodates 1 1/2" to 1 11/16" center to centers and up to 1/4" dia. post. If there are any additional questions about the thru-bolting, please contact our office.
5. Knob, thumbturn and ER holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility**: Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us if a double lip strike is needed - for a proper template
- c) See catalog / spec sheets for additional lock details

Standard 8800USD UPSIDE DOWN Template - All Backsets
6-6-2019

T-ALH.8800USD