



Hyundai Sante Fe (2001-2006)

PART NUMBER: MV-50-03-L



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


TOOLS REQUIRED: #2 Phillips screwdriver, drill and 5/64" bit, Dash trim removal tool (DM-40-22), 10mm

PARTS INCLUDED: nut driver, marking pen


Pro.Fit Legend, instructions, two (2) # 8 x 1/2" screws.

LOCATION: Right of radio

STEP 1. Open and remove ashtray. Remove screws from both sides of ashtray cavity. Insert trim removal tool behind the upper-right corner of the climate control bezel and pry outward, releasing a retainer clip. **(Photo 3)**. Work the tool around the bezel to release a clip in each corner. Pull the bezel out enough to access and remove the two (2) vertical screws from the bottom of the radio.

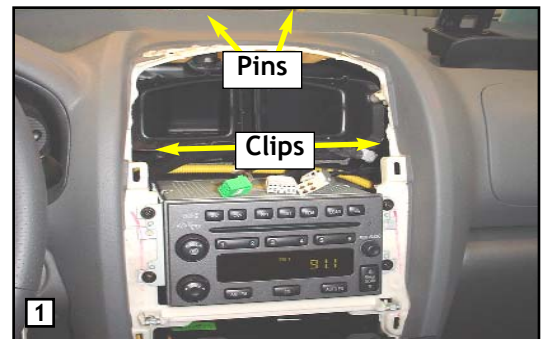

STEP 2. Pull out the bottom of the radio bezel with your hands. Moving your hands upward, continue pulling outward until you release two (2) clips. **(Photo 1)**. Lift bezel off centering pins, disconnect bezel wiring and set aside.

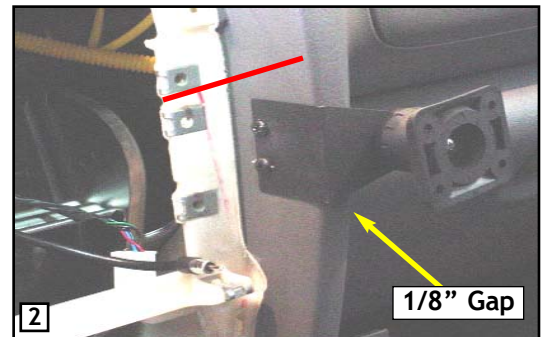

STEP 3. Remove four (4) radio mounting screws. Pull radio out of its cavity and let it hang down. **Do not disconnect wiring to the radio.**

STEP 4. Align top of Legend with top of clip hole and leave a 1/8" gap between the Legend and the dash pad. **(Photo 2)**. Using the holes of the Legend as a guide, mark the location of the two (2) holes and drill two (2) pilot holes. Align the Legend over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten.



STEP 5. Re-assemble the dash in reverse order. Remember to reattach wiring to the bezel. This completes the installation of your Legend.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

