

Bb TALKIN'

BbSPEAKER

USERS GUIDE

A01SPK


Thank you for choosing BbSPEAKER.

This instruction manual will help you operate this system. First, read this manual carefully and familiarize yourself with functionalities before use.

www.bbtalkin.com

WARNING

- *DO NOT modify or disassemble the device.
- *The area you cannot use (in the airplane, near the person with medical devices or equipment such as pacemaker etc..)
- *DO NOT expose this device to extreme temperature or humidity place.
- *When BbSPEAKER gets damaged, stop using immediately.
- *DO NOT put the BbSPEAKER near the microphone, it may cause speaker howling.

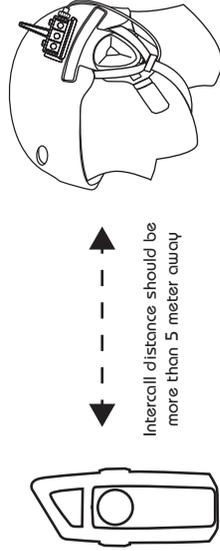

Intercall distance should be more than 5 meter away

Specs

- Intercall talk time 6-8 hr
- Charge time 3 hr
- Weight 162 g
- Range 1 mile
- Water-proof IPX 5

Charging

- *AC adaptor 500mA-1A 5V
- *Please make sure the device is completely dried before charging
- *Charging cable: Micro USB

Battery status:


- Blue = 75%-100%,
- Purple = 50%-75%
- RED = battery low

(at start indicate)



Battery Charge:
Red = Charging
Blue = Full charged

DISTANCE

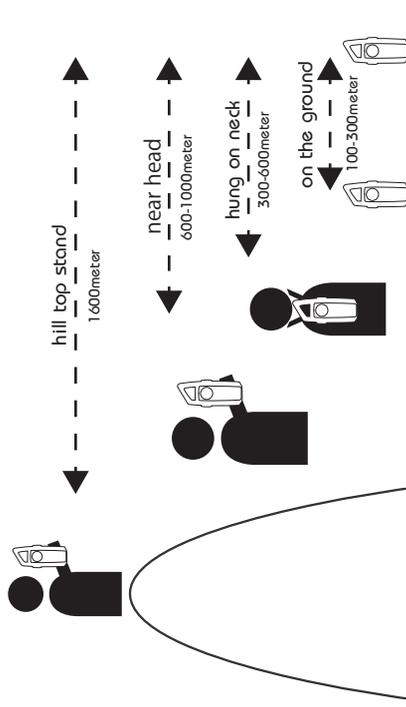

* must be line of sight

LIMITED WARRANTY

This limited warranty covers defects in materials and workmanship in this product for twelve month (12) months for main device only.
The warranty obligations of BbTALKIN for this product are limited to the terms set forth below:
This limited warranty does not cover any damage, rusty USB part, deterioration or malfunction resulting from any alteration, misuse, accident, fire, flood, lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by BbTALKIN to make such repairs, or any damage to the product or accessories used in conjunction with this product.
This limited warranty does not cover cartons, equipment enclosures, cables, or accessories used in conjunction with this product.
If this product is returned to BbTALKIN or the authorized dealer from which it was purchased or any other party authorized to repair BbTALKIN products, this product must be insured during shipment, with the insurance and shipping charges prepaid by you. In this product is returned uninsured, you assume the risks of loss or damage during shipment. Claims will not be paid for any damage to the product or accessories resulting from the use of the product. BbTALKIN will not be responsible for any costs related to any setting up this product, any adjustment of user controls or any programming required for a specific installation of this product.
It may damage your ears, if using too long or high volume sound. BbTALKIN will not be responsible.
Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.
How to Obtain a Remedy under this Limited Warranty
If you have a problem with the product, please contact the BbTALKIN office nearest you for a list of authorized BbTALKIN resellers and/or BbTALKIN authorized service providers, please visit our web site at www.bbtalkin.com or contact the BbTALKIN dealer nearest you.
In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized BbTALKIN reseller. This product will be returned under this limited warranty, a return authorization number, BbTALKIN to repair the product. If it is decided that this product should be returned directly to BbTALKIN, this product should be properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization number will be refused.
BbTALKIN is not liable on liability.
THE MAXIMUM LIABILITY OF BbTALKIN UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, BbTALKIN IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR NEGLIGENCE, INCLUDING BUT NOT LIMITED TO, SOME ECONOMIC DAMAGES OR DAMAGES OF A FUTURE NATURE. SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.



- BbSPEAKER x 1
- BbSPEAKER BAG x 1
- MICRO USB CABLE x 1
- STAND MOUNT x 1
- EXTERNAL WIRE MICROPHONE x 1

How to pair with BBT Standard device

A1. Turn on the power (Press & hold 2 sec.)



A2. Turn on the power (Press & hold 2 sec.)



B1. Press and hold CH1 button until red light flashes.



B2. Press and hold Intercall button until red light flashes.



C. Press one time CH1 button on BbSPEAKER.



Complete!




BLUE slow flashing light on both units indicates that they are paired and ready to use.

Note: After you have paired the units, it will memorize the pairing and all you need to do is turn them on and press the Channel button on BbSPEAKER to connect.

*If you want to add one more BBT device to become 3 way communication, just follow above step B & C again, and make sure CH2 is not paired yet.

Intercall with BBT STANDARD device

1. You can pair with the other 2 BBT devices.
2. If you want to hang up/pick up the intercall, just press Channel button (CH1 or CH2) once.
3. Over the communication distance range, the intercall will be disconnected, then you need to manually reconnect by pressing Channel Button once.

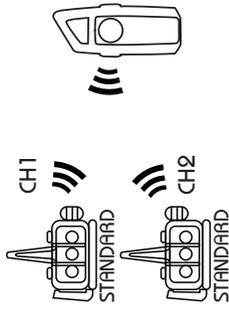

Intercall with BBT MASTER device

1. Master device can pair with the other 2 BbSPEAKERS. (3way open communication talk)
 - * You can talk to CH1 and CH2 at the same time
2. When you want to hang up intercall, press Master device's Channel Button **twice**; Call back the intercall, just press Channel Button once.

!! Warning !! :

The Intercalling must be from Master device to BbSPEAKER, NOT from BbSPEAKER to Master device.



How to pair with your phone

1. When power is **off**, press and hold power button for 5sec. until you see the red & blue light come on.


2. Open your smartphone Bluetooth and select bsptt-xxxxxxx.

Note: After you have paired the units, it will memorize the pairing and will automatically link when next time you turn on BbSPEAKER. (Make sure the phone Bluetooth is on)

HOLD 2sec POWER ON/OFF

CLICK ►► PLAY/STOP MUSIC

CLICK ◀ PICK/HANG UP THE PHONE

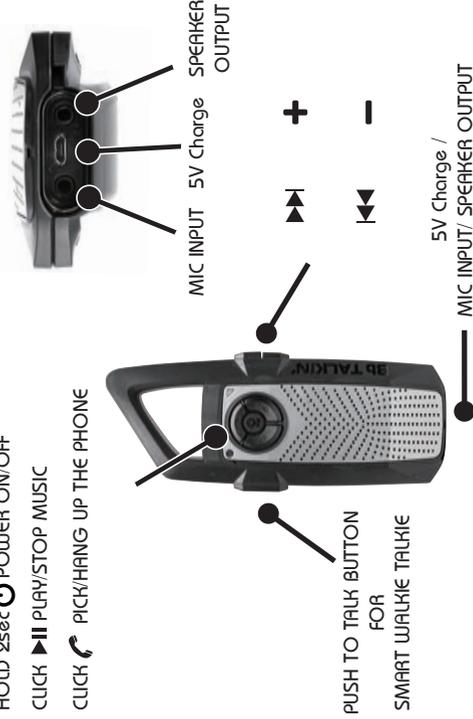

Download app ZELLO



Download free walkie talkie app ZELLO

*After download, set up account

*Set up PTT wireless button

1. Open menu and go to Option
2. Push to talk button
3. Wireless zello button
4. Select bsptt-XXXXXXXX
5. Now BbSPEAKER becomes a Push-To-Talk.



PUSH TO TALK BUTTON FOR SMART WALKIE TALKIE

Mic mute X

Press and hold (+) & (-) 2sec. until blue light flashes.

*Slow flashing turns to fast flashing.

Press and hold (+) & (-) 2sec. again to cancel mute function.

How to reset can talk Press and hold POWER, CH1 ,CH2 buttons for 3sec. at the same time while BbSPEAKER power is off.